

[54] **GENERAL PURPOSE CALCULATOR HAVING SELECTIVE DATA STORAGE, DATA CONVERSION AND TIME-KEEPING CAPABILITIES**

[75] Inventors: **Peter D. Dickinson**, Monte Sereno; **Thomas E. Osborne**, San Francisco; **France Rode**; **Allen J. Baum**, both of Los Altos, all of Calif.

[73] Assignee: **Hewlett-Packard Company**, Palo Alto, Calif.

[22] Filed: **Apr. 8, 1975**

[21] Appl. No.: **566,144**

Related U.S. Application Data

[62] Division of Ser. No. 364,570, May 29, 1973, abandoned.

[52] U.S. Cl. **235/156; 235/155**

[51] Int. Cl.² **G06F 5/02**

[58] Field of Search **235/155, 156**

[56] **References Cited**

UNITED STATES PATENTS


3,700,872	10/1972	May	235/155
3,801,803	4/1974	McDaniel	235/155 X
3,816,731	6/1974	Jennings et al.	235/156
3,855,459	12/1974	Hakata	235/154

Primary Examiner—David H. Malzahn
Attorney, Agent, or Firm—F. D. La Riviere

[57] **ABSTRACT**

A battery powered hand-held calculator is disclosed which includes a built-in metric to U.S. conversion function for converting units from one system to the other; a degrees-minutes-seconds conversion function for converting angles or units of time from degrees-minutes-seconds to the decimal system and conversely.

10 Claims, 37 Drawing Figures

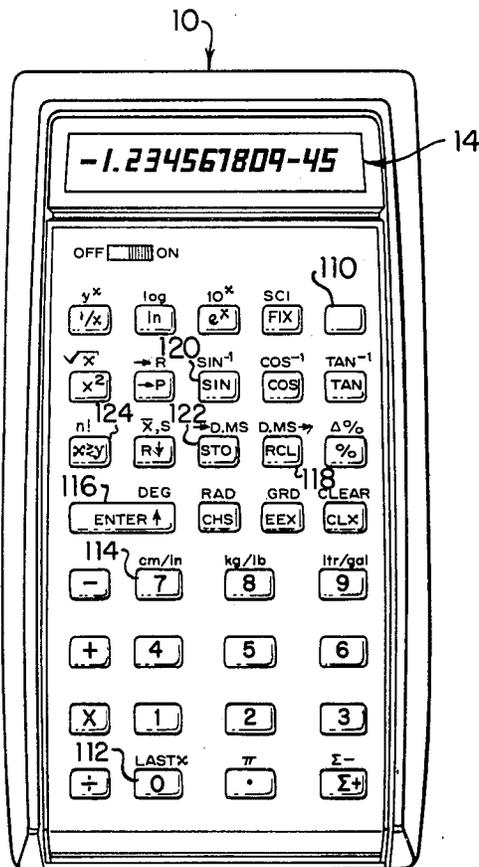

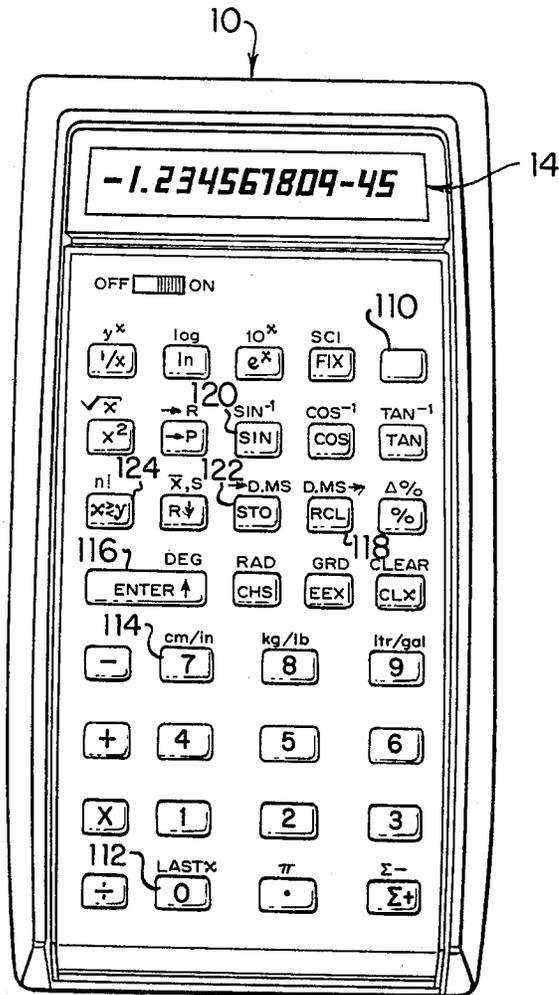


Figure 1

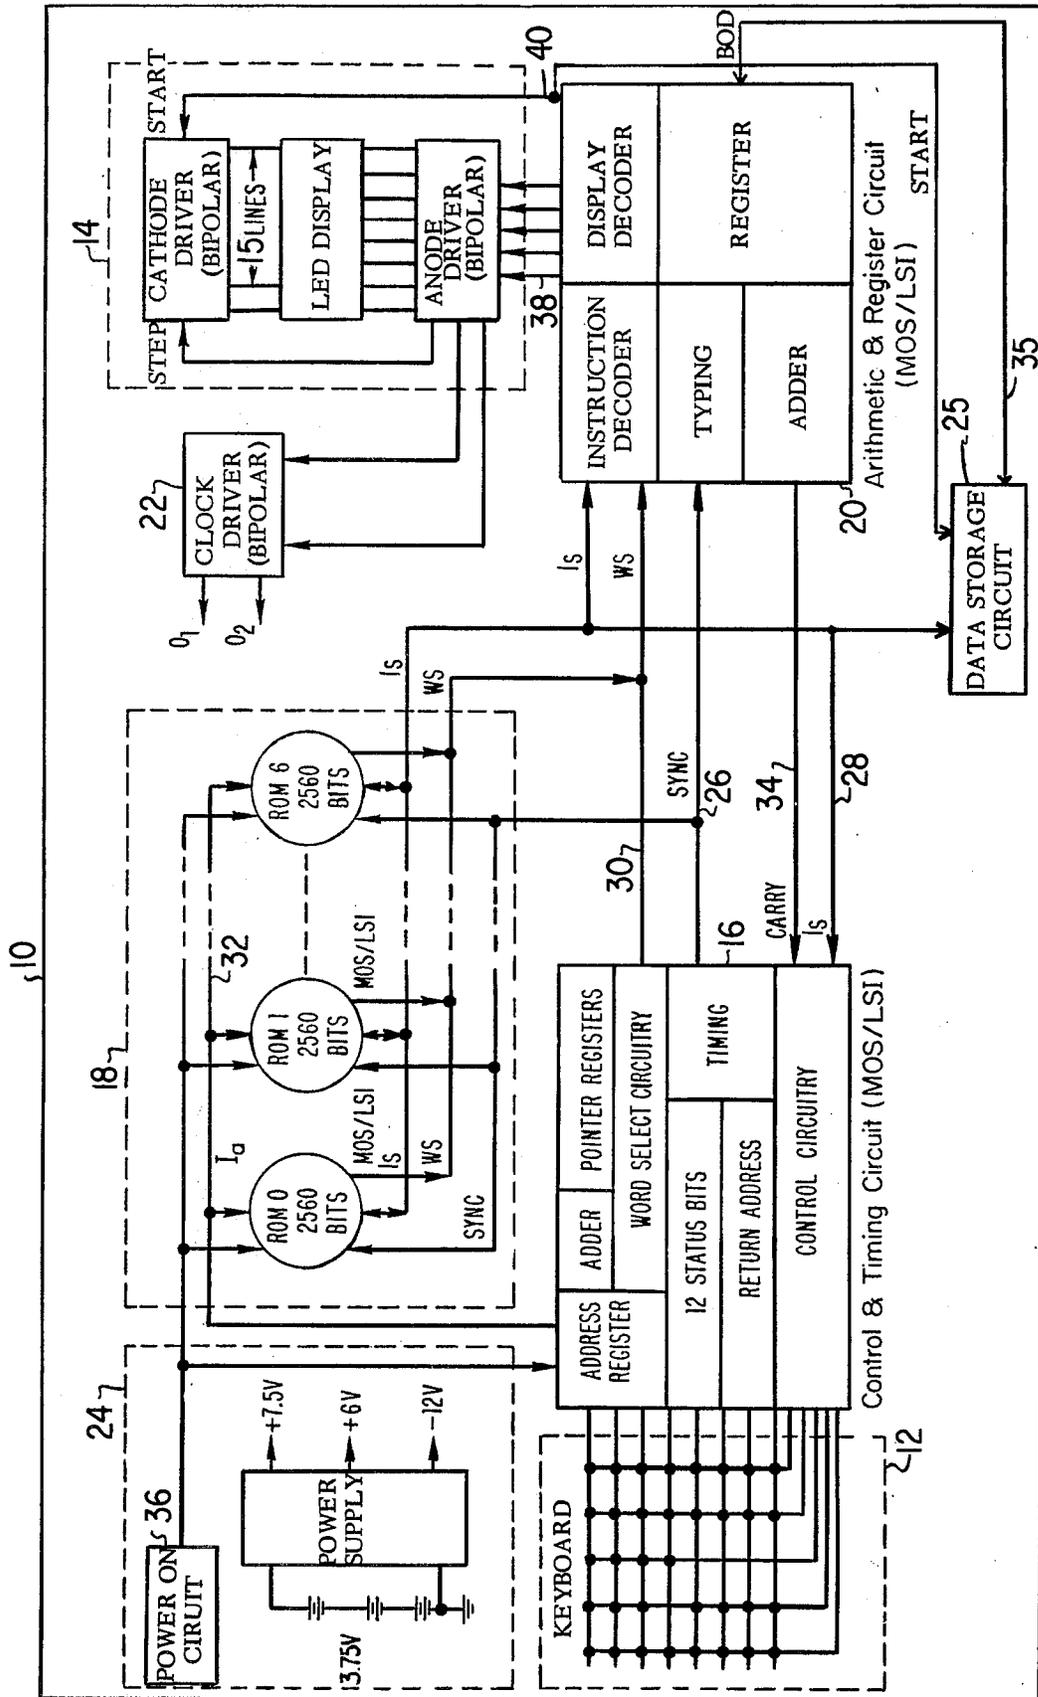


FIG. 2

System Timing Signals

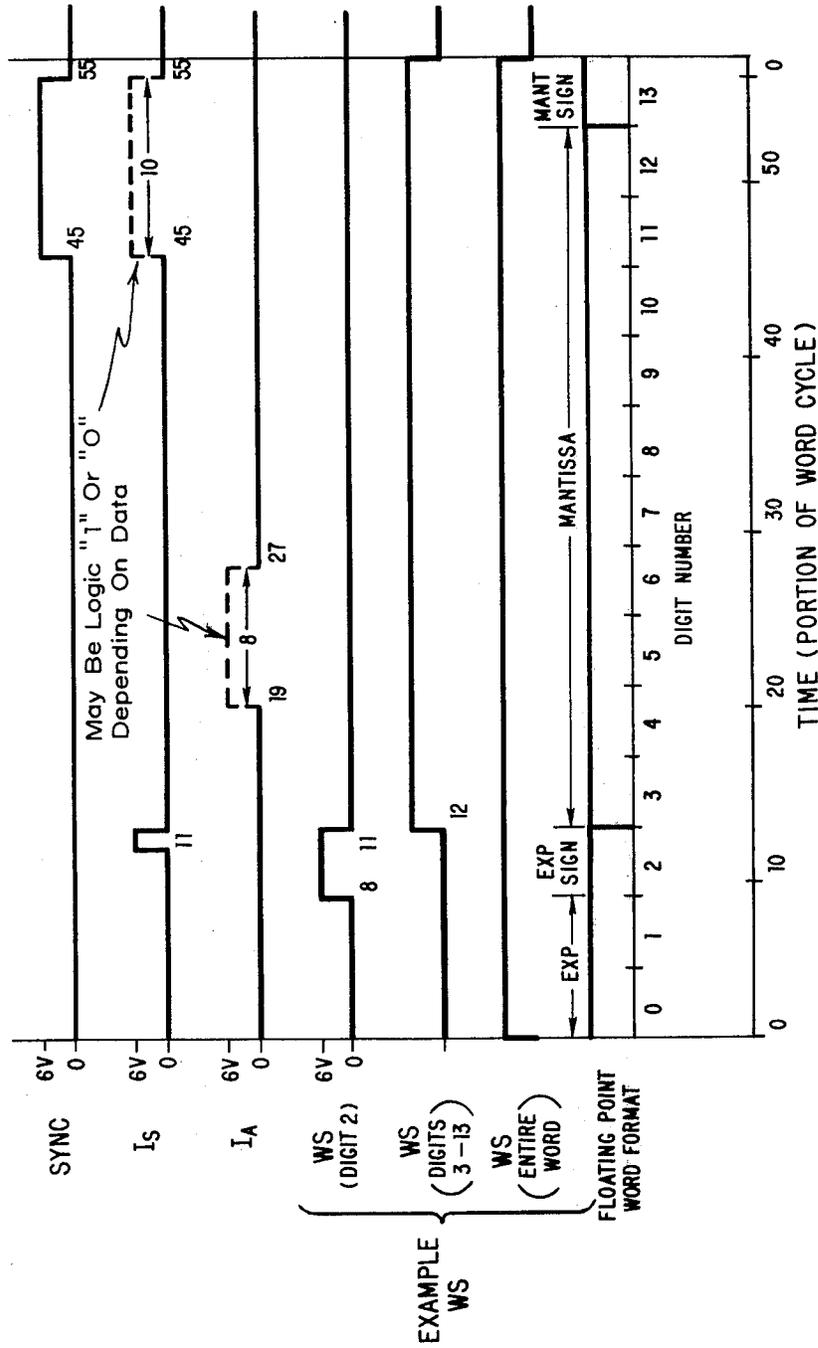


FIG. 3

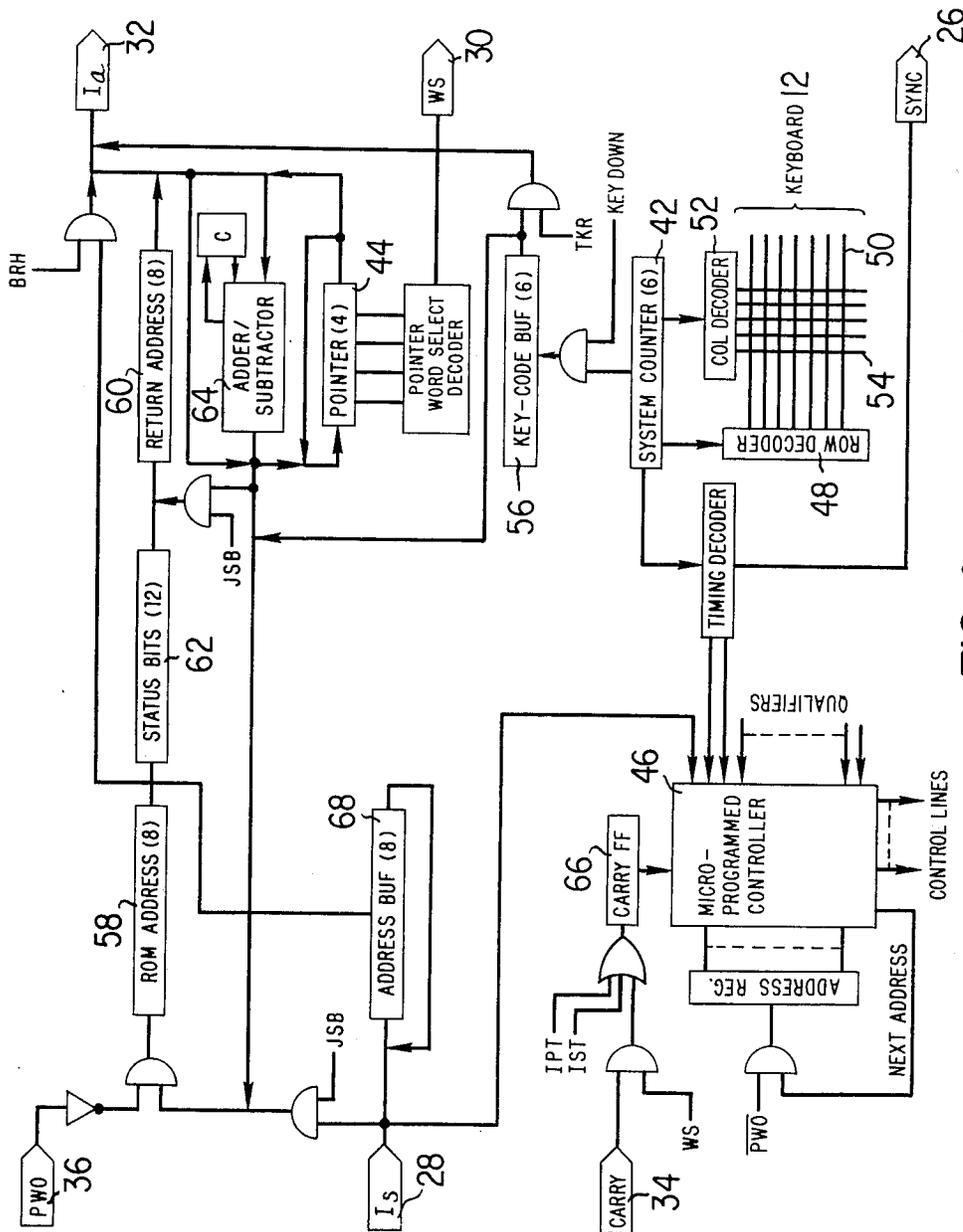


FIG. 4

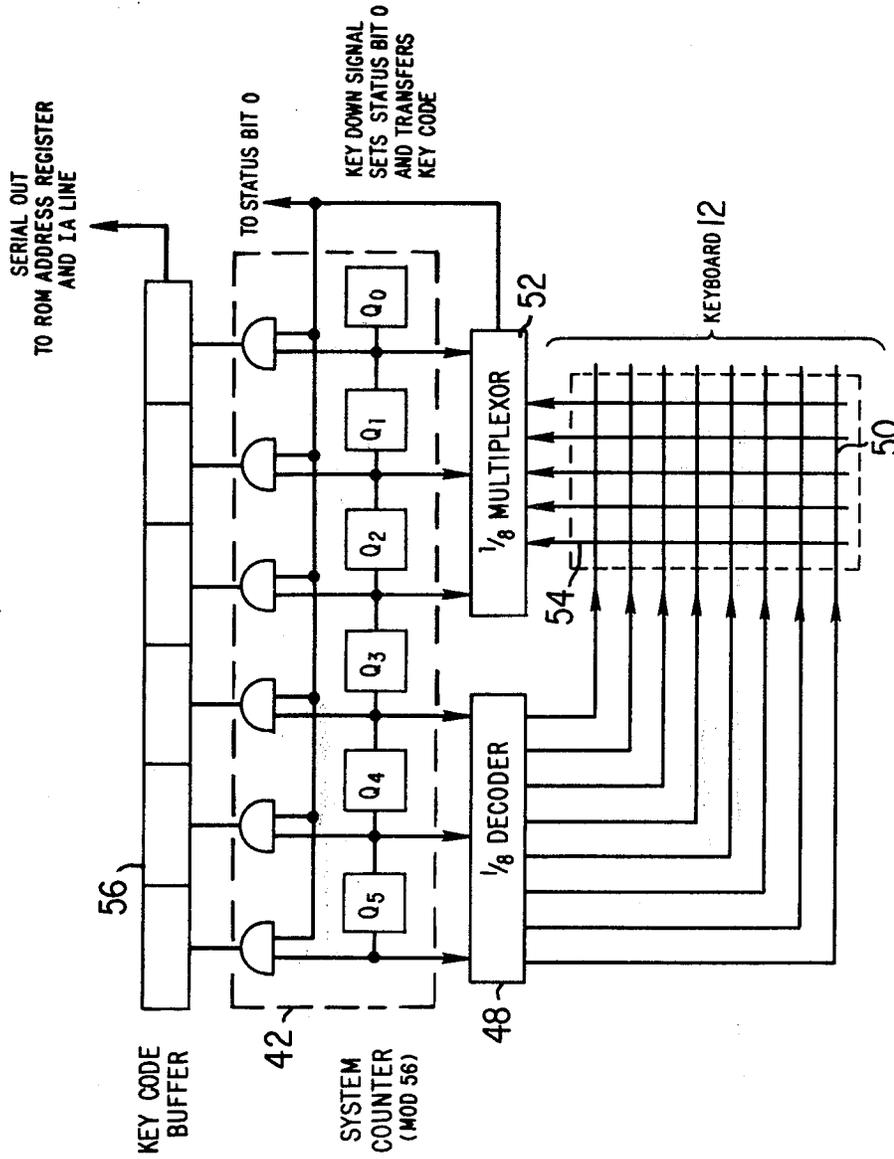


FIG. 5

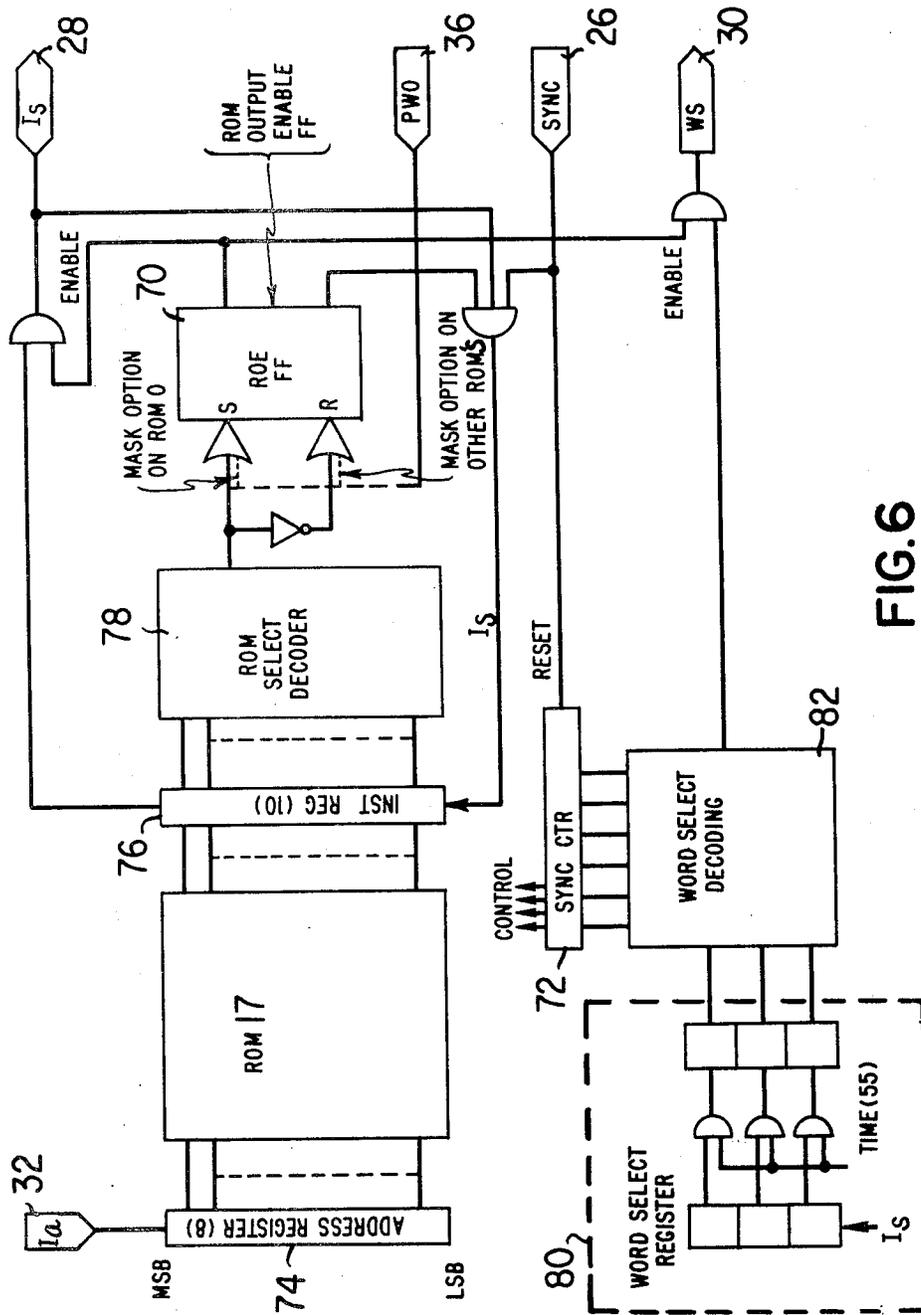


FIG. 6

Typical Address And Instruction Signals

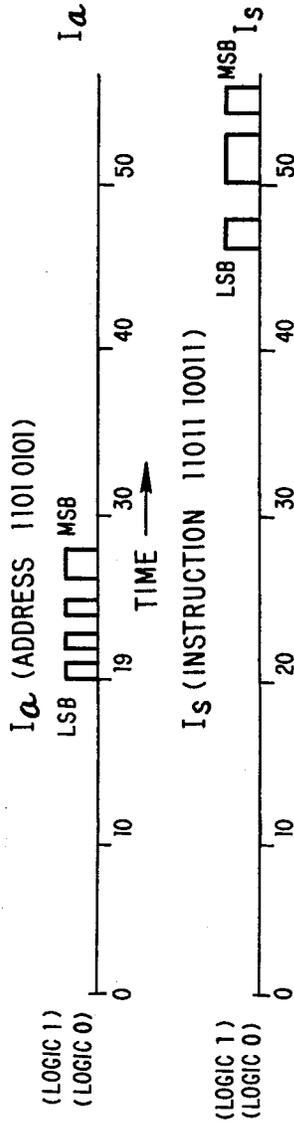


FIG. 7

Addressing And Readout Timing

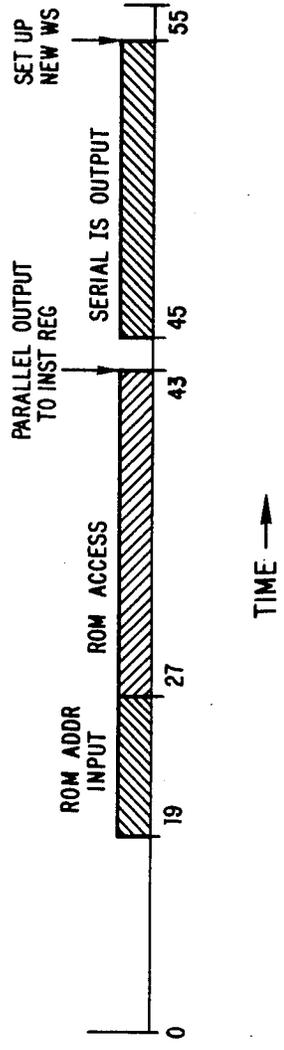


FIG. 8

Word Select Signals

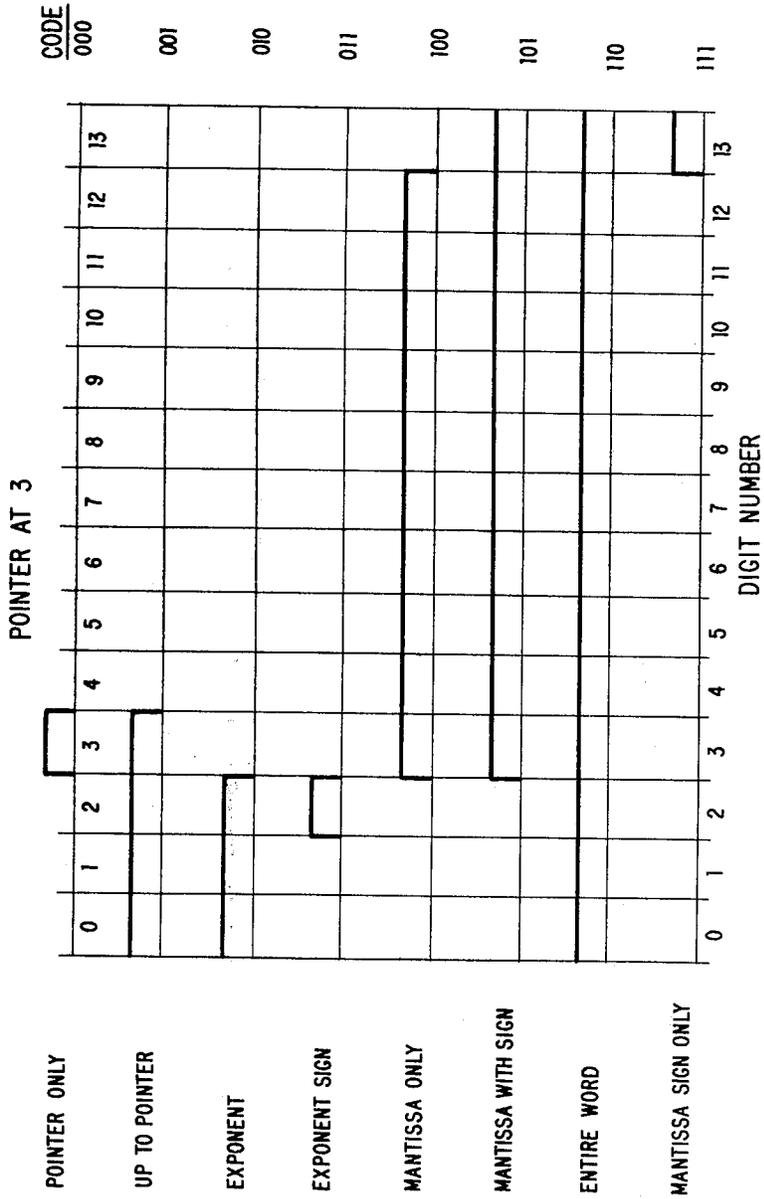


FIG. 9

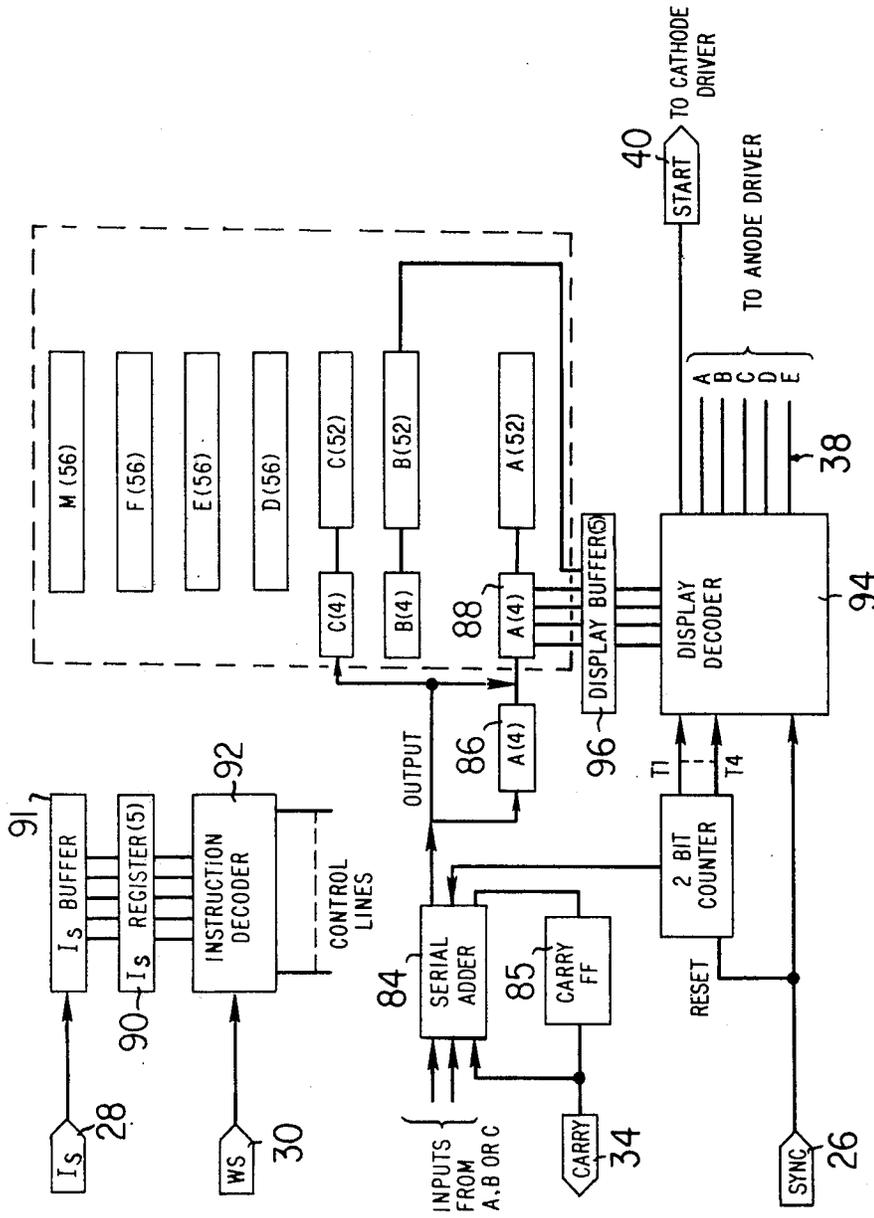


FIG. 10

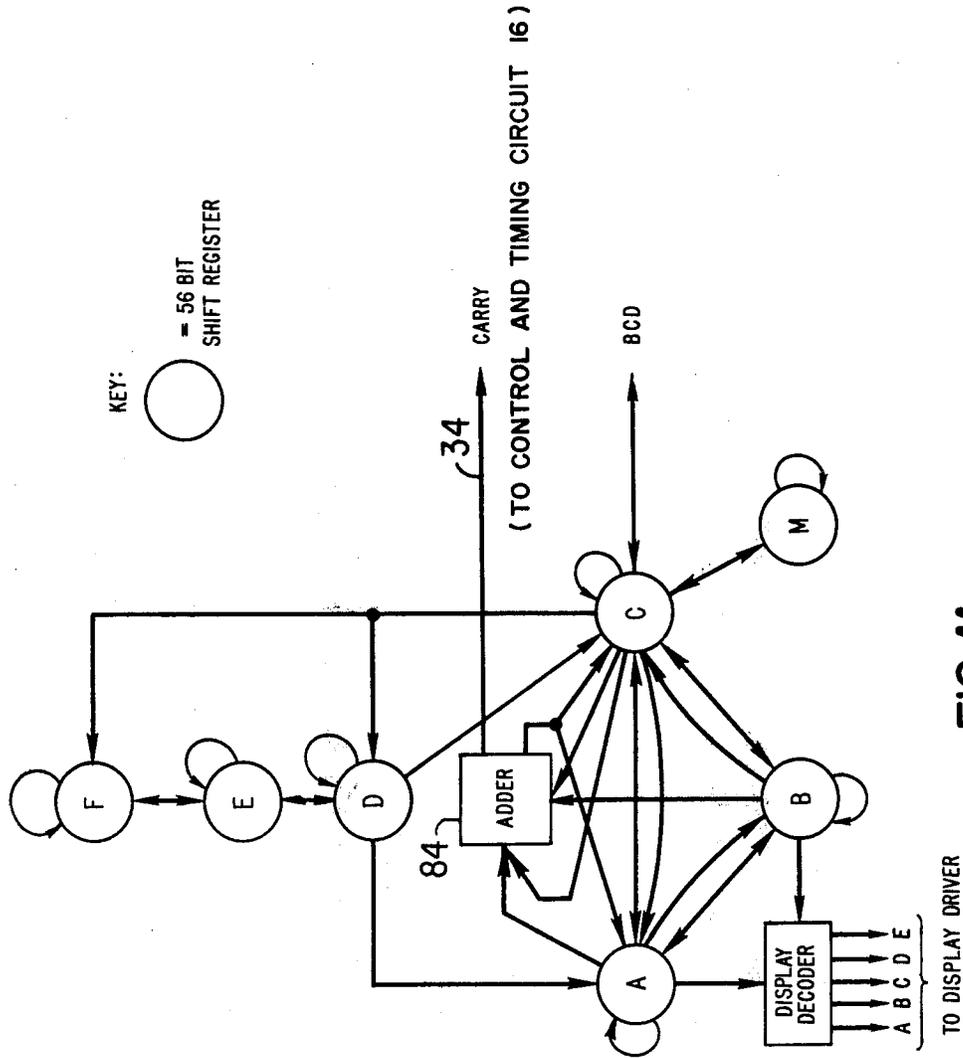


FIG. 11

Display Decoding From Arithmetic And Register Circuit

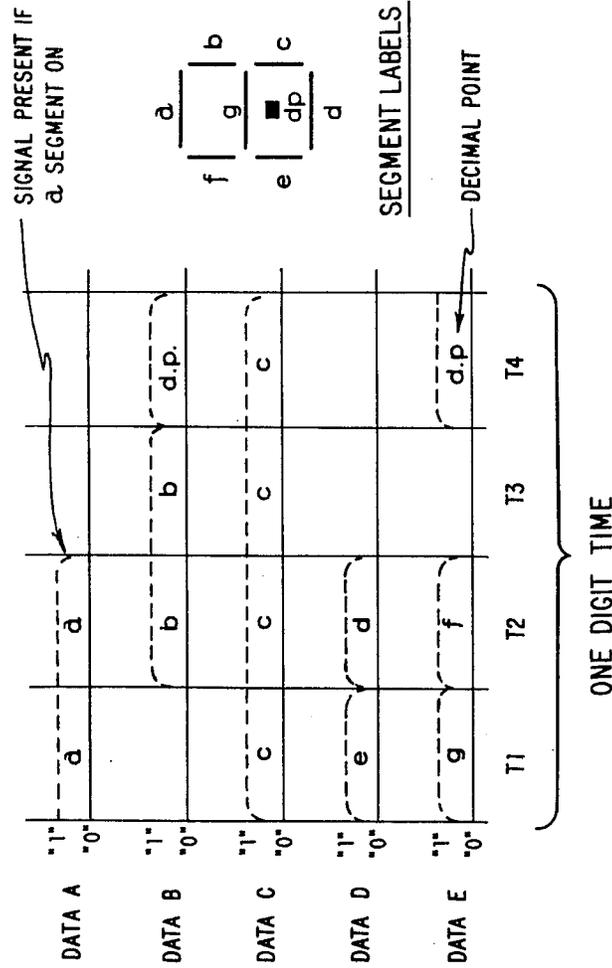


FIG.12

Example Output For Digit 9

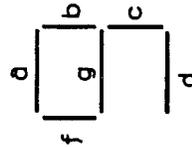
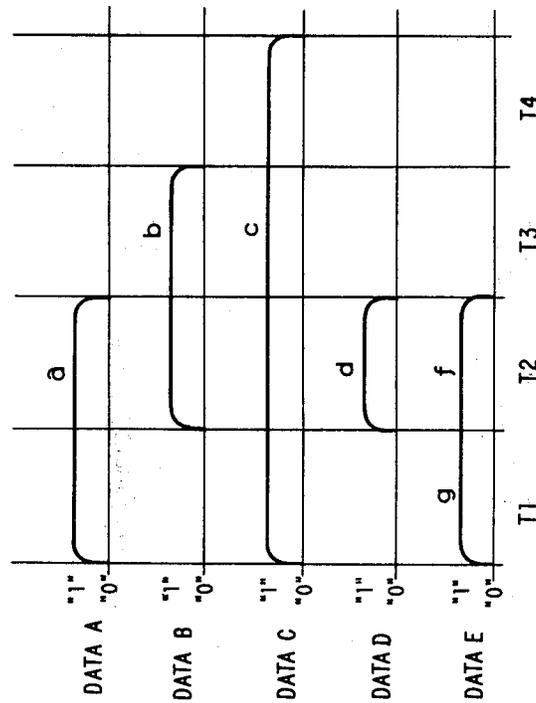


FIG.13

Start Signal

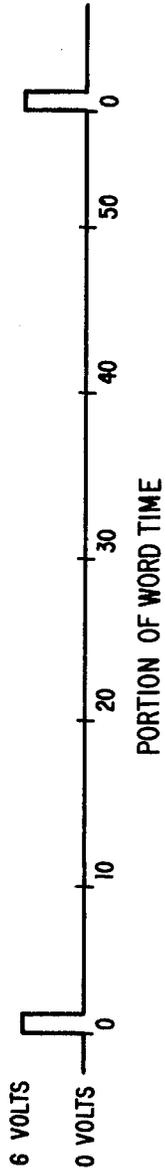


FIG. 14

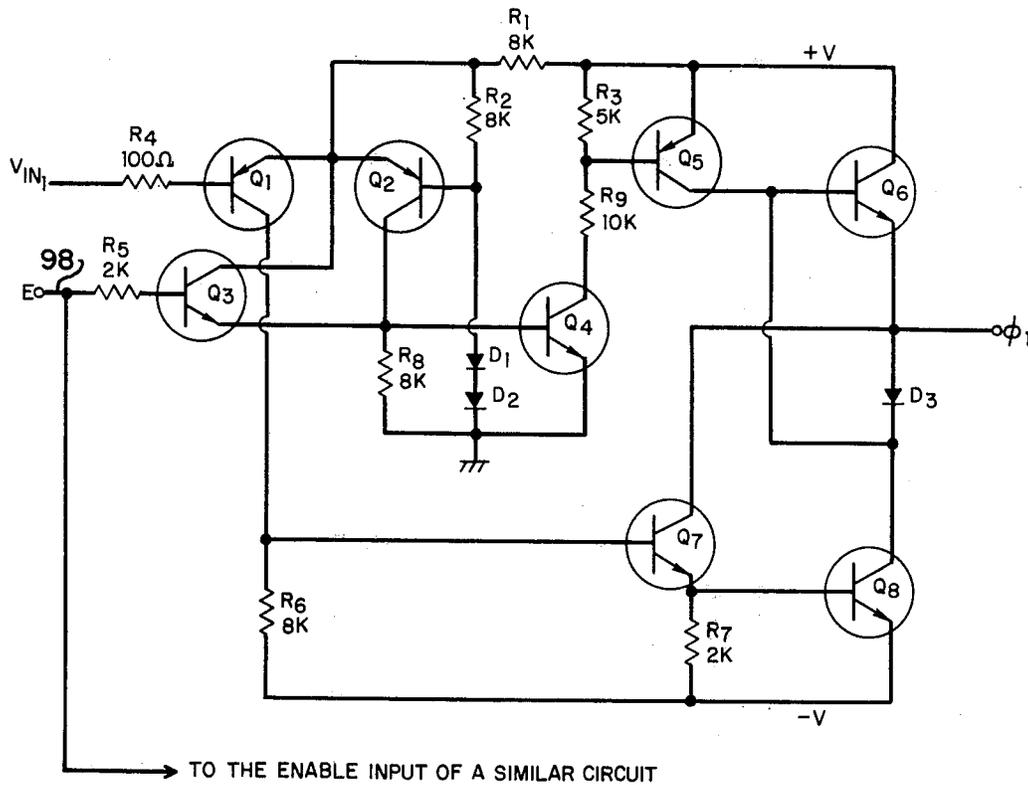


Figure 15

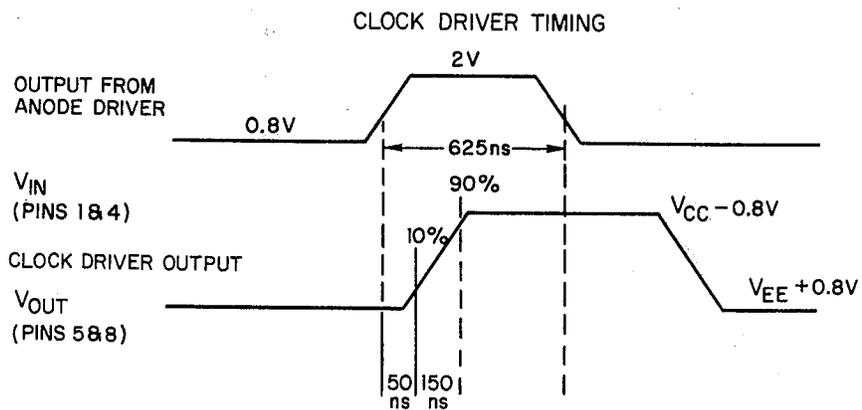


Figure 16

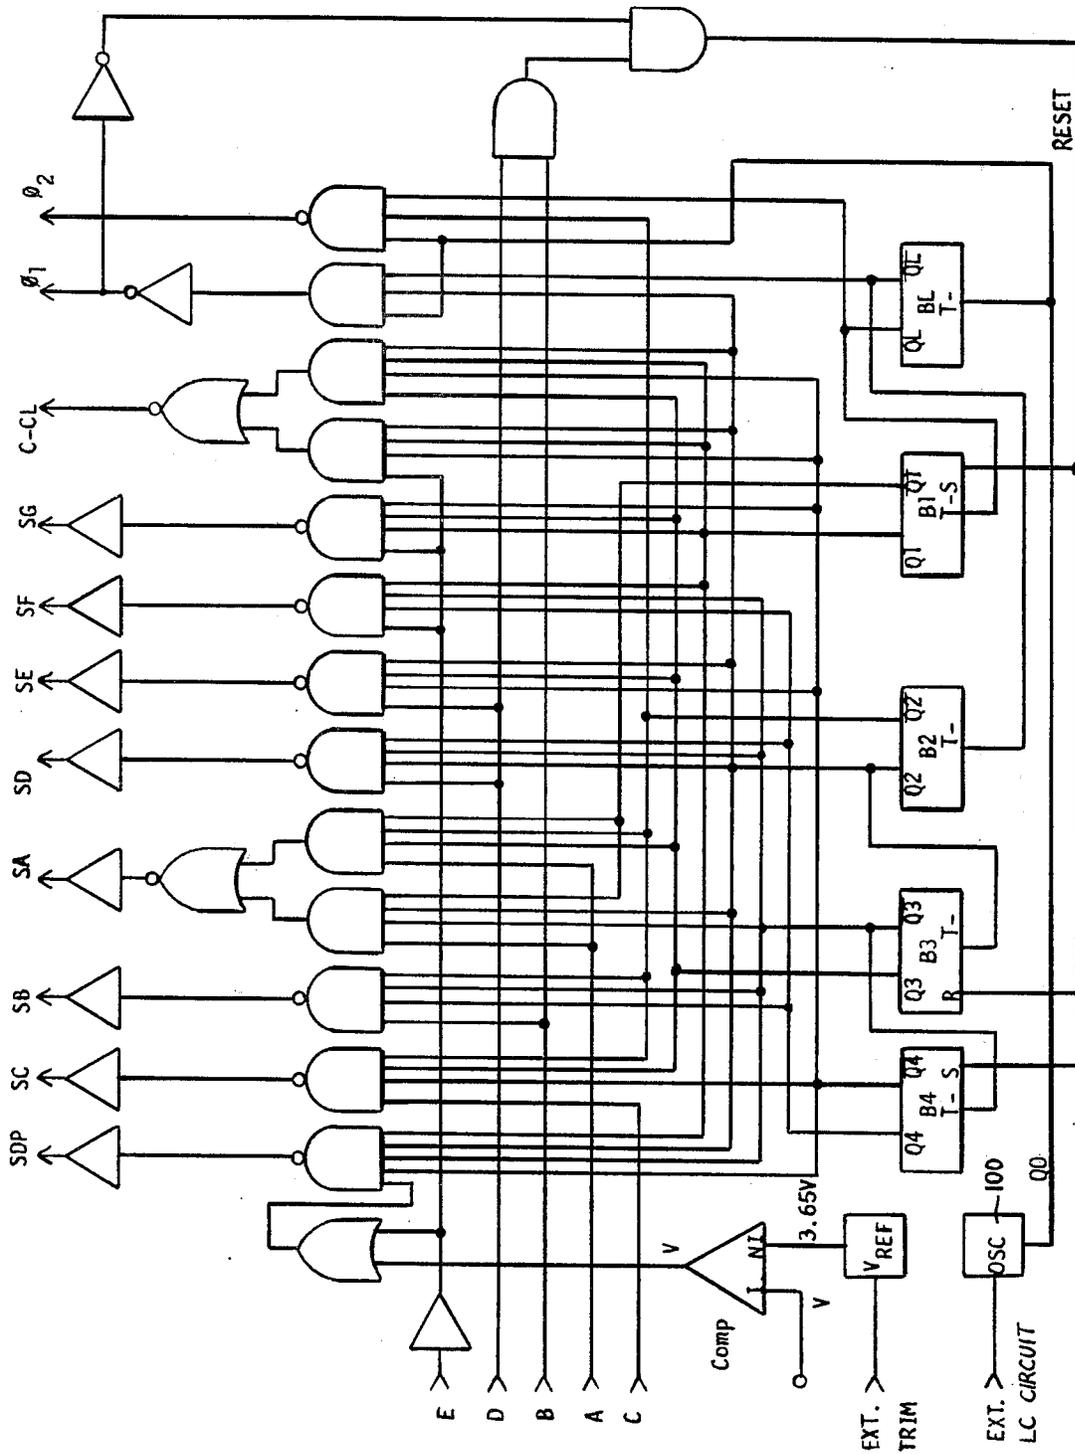


FIG. 17

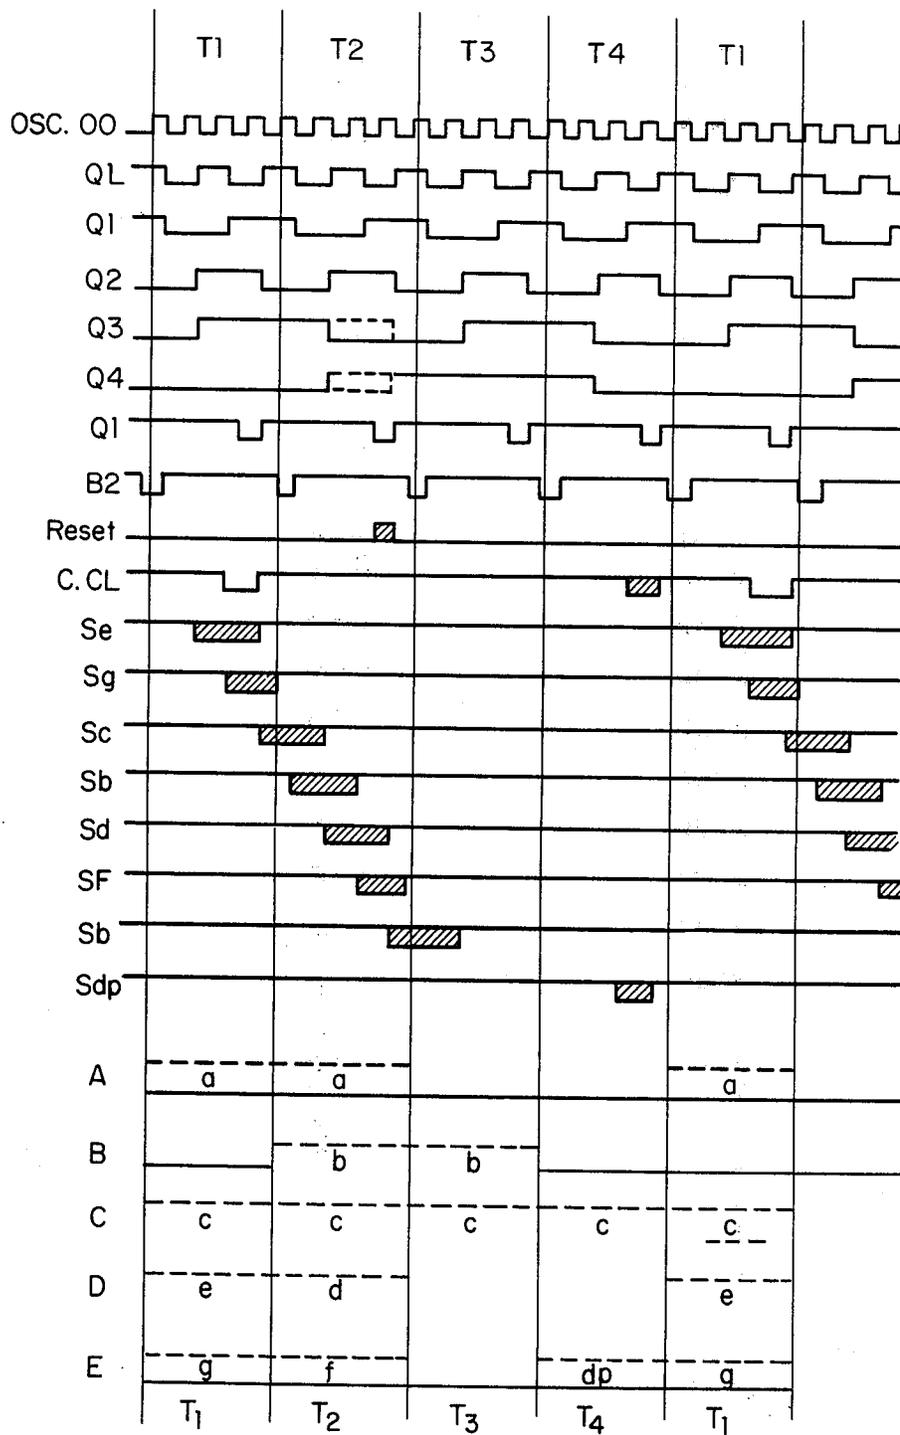


Figure 18

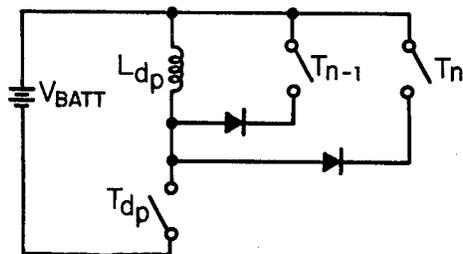


FIG. 19

Timing for Decimal Point Drive

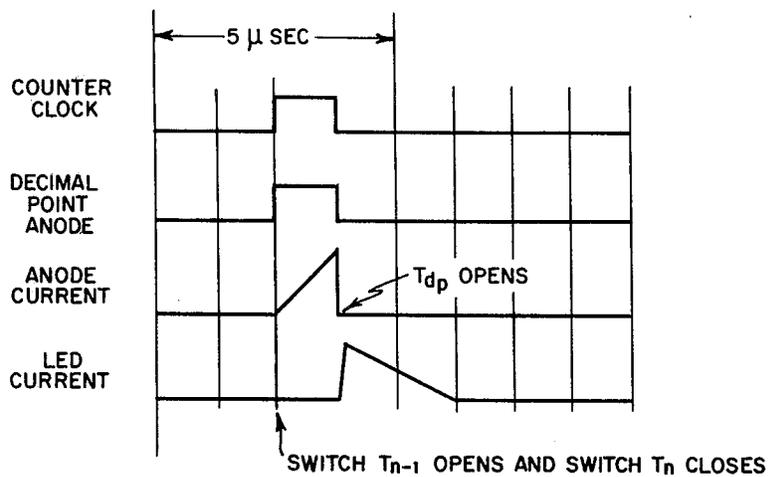


FIG. 20

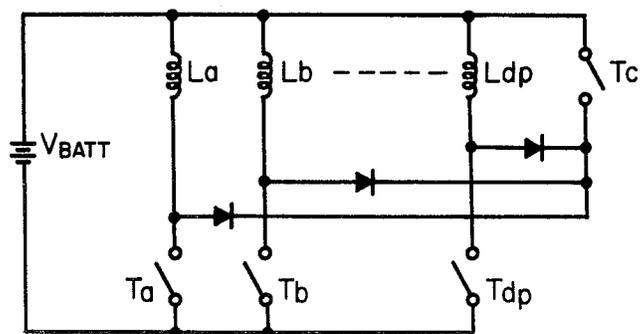


FIG. 21

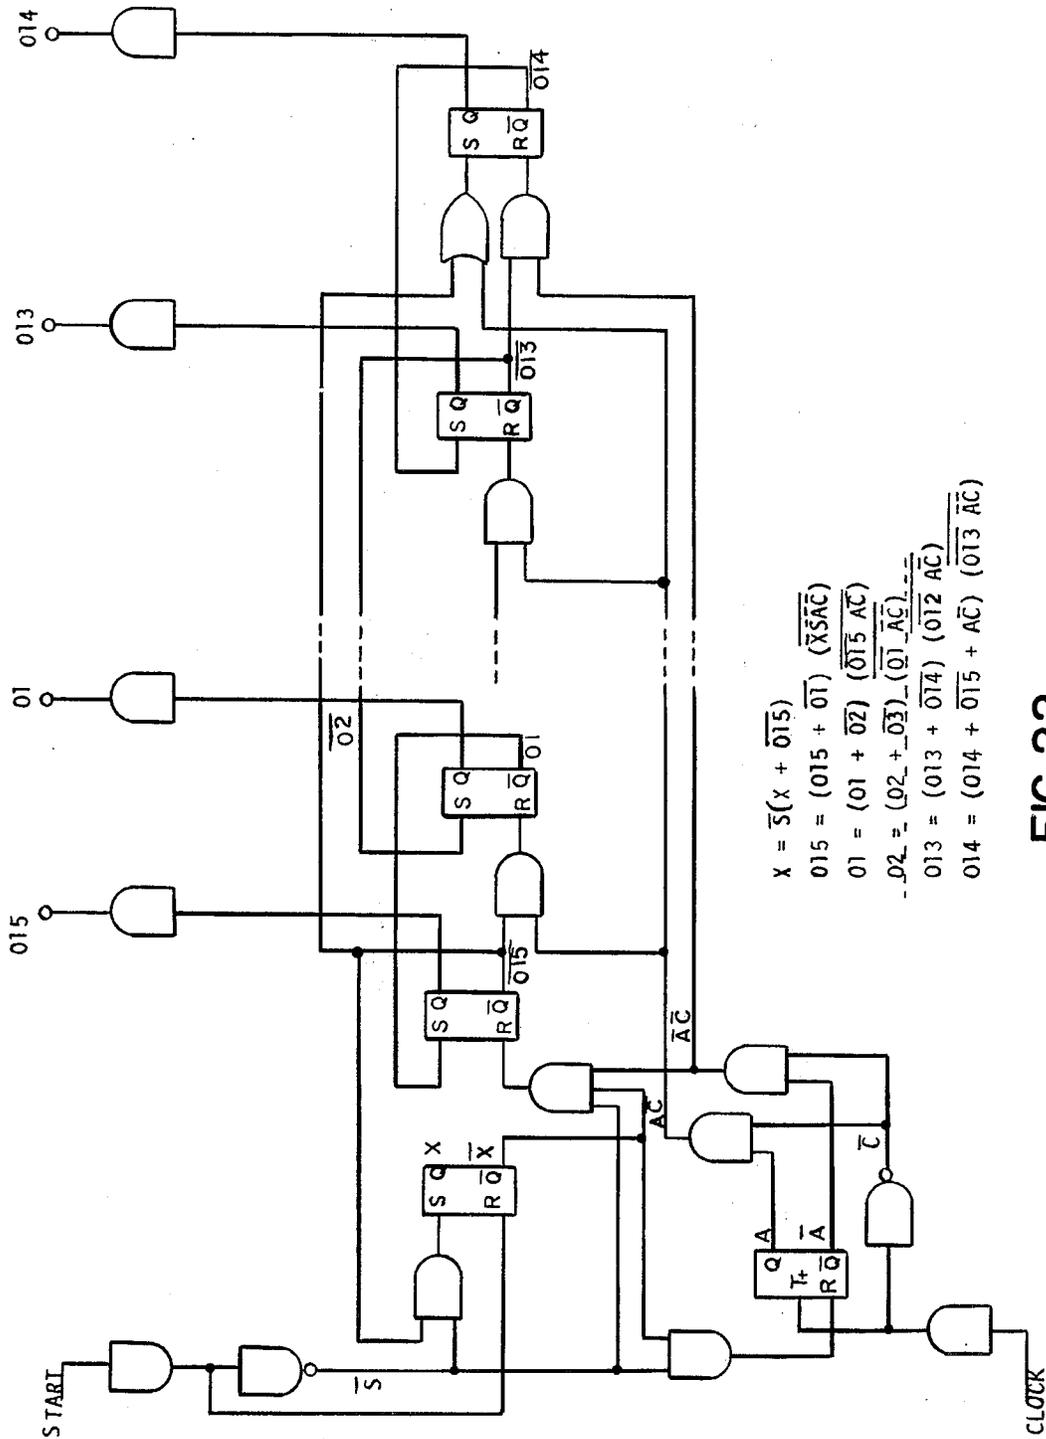


FIG. 22

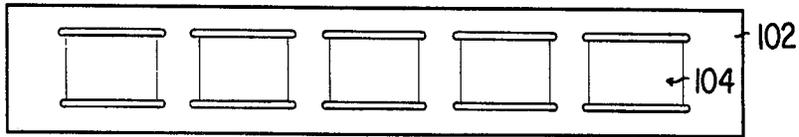


FIG. 23



FIG. 24

Keyboard Force-Deflection Curve

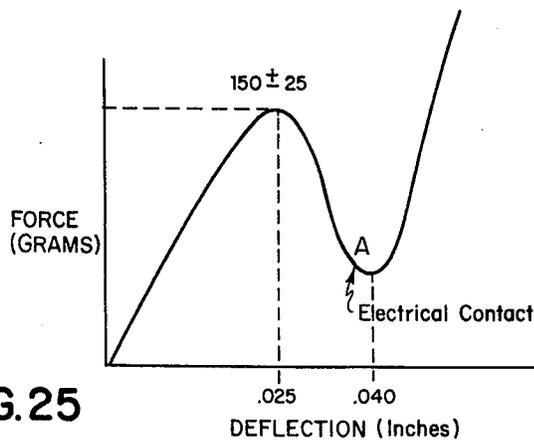


FIG. 25

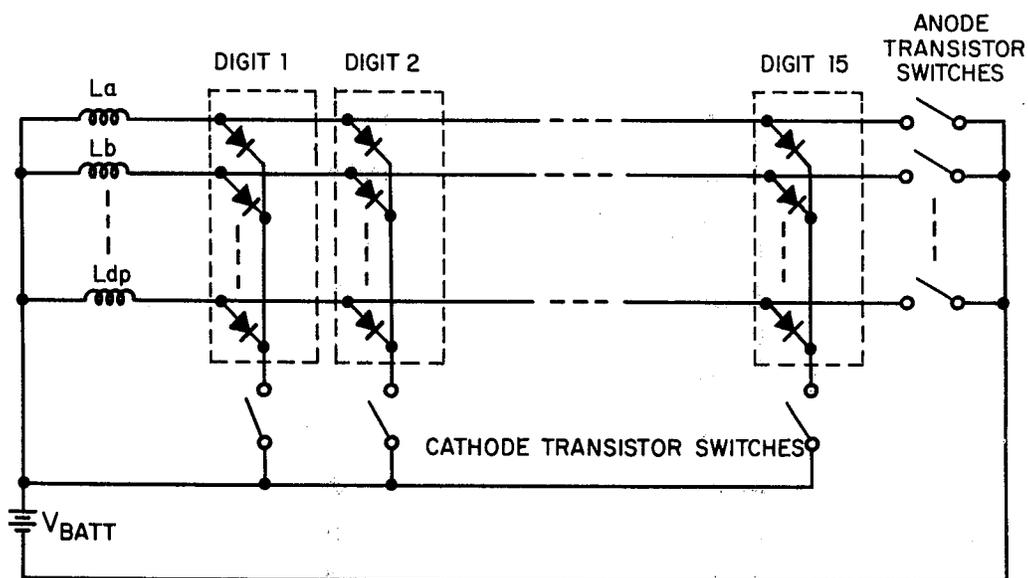


FIG. 26


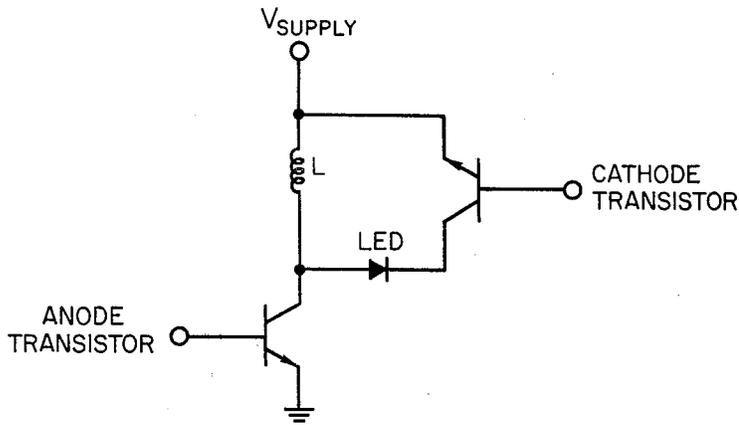


FIG. 27

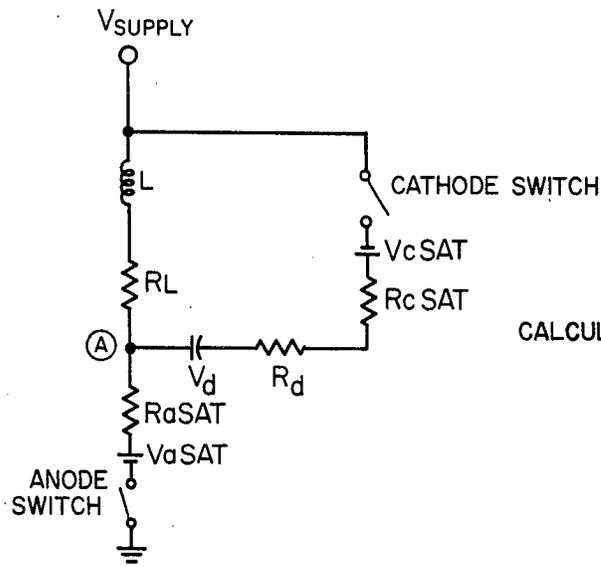

CALCULATOR PARAMETERS

- $L = 130 \mu\text{h}$
- $R_L = 4 \Omega$
- $R_{aSAT} = 1 \Omega$
- $R_d = 1 \Omega$
- $R_{cSAT} = 1 \Omega$
- $V_d = 1.7 \text{ Volts}$
- $V_{aSAT} = .3 \text{ Volts}$
- $V_{cSAT} = .45 \text{ Volts}$

FIG. 28

Inductor Current And LED Anode Voltages

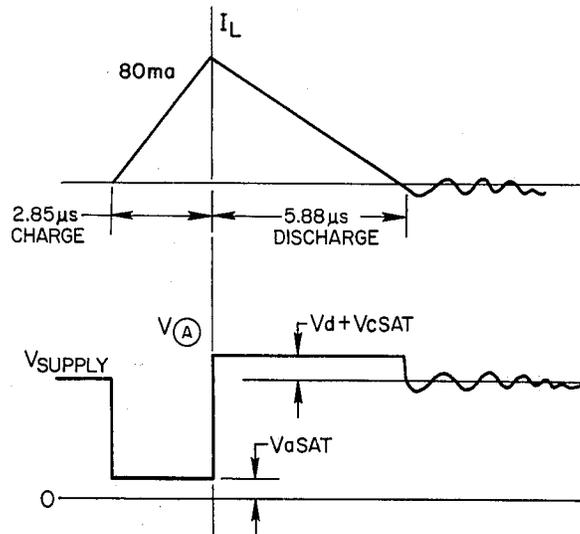


FIG. 29

POSSIBLE TRANSFER PATHS BETWEEN ROMS

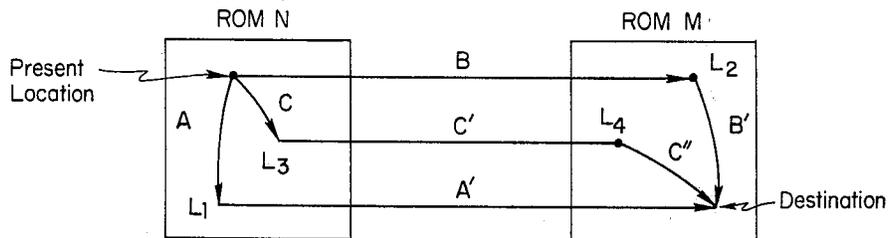


FIG. 30

FLOW DIAGRAM OF DISPLAY WAIT LOOP

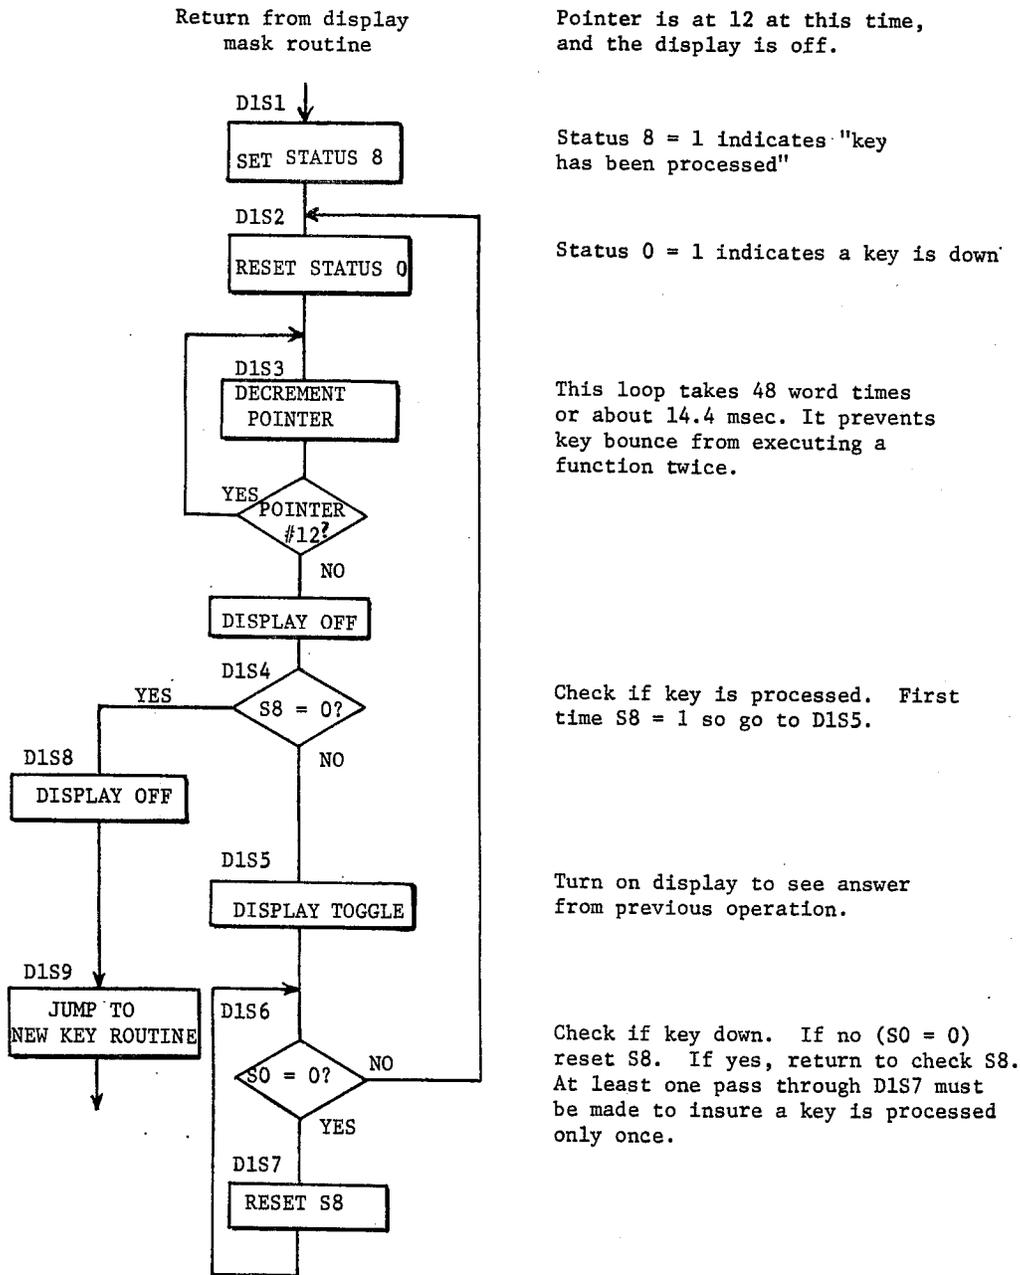


FIG. 31

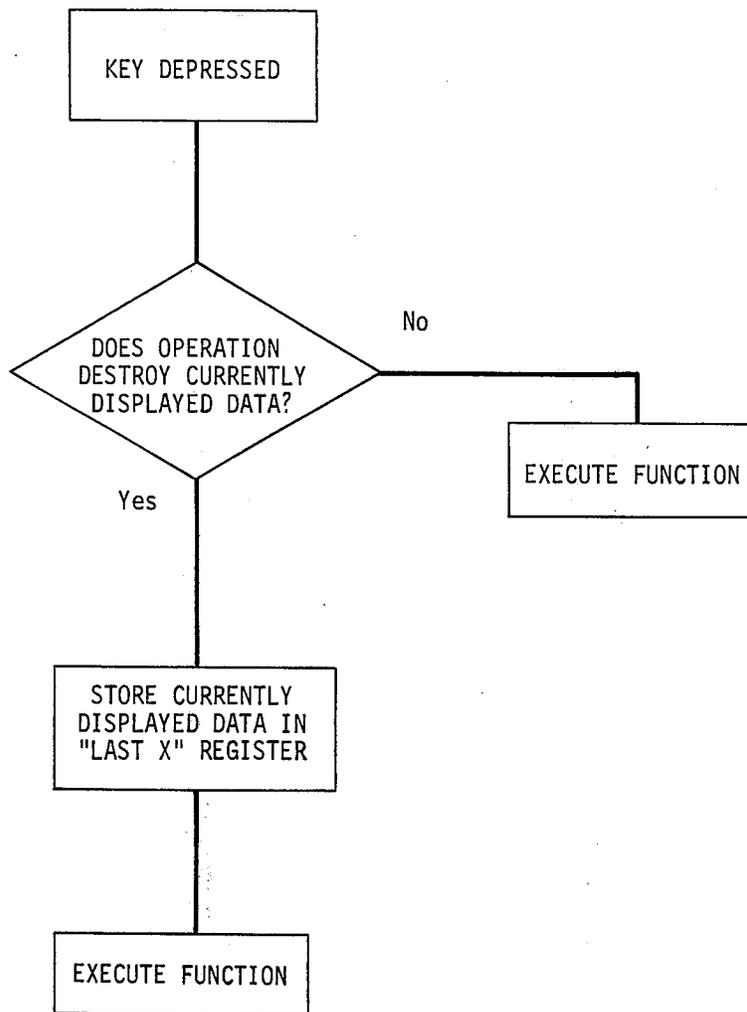


Figure 32

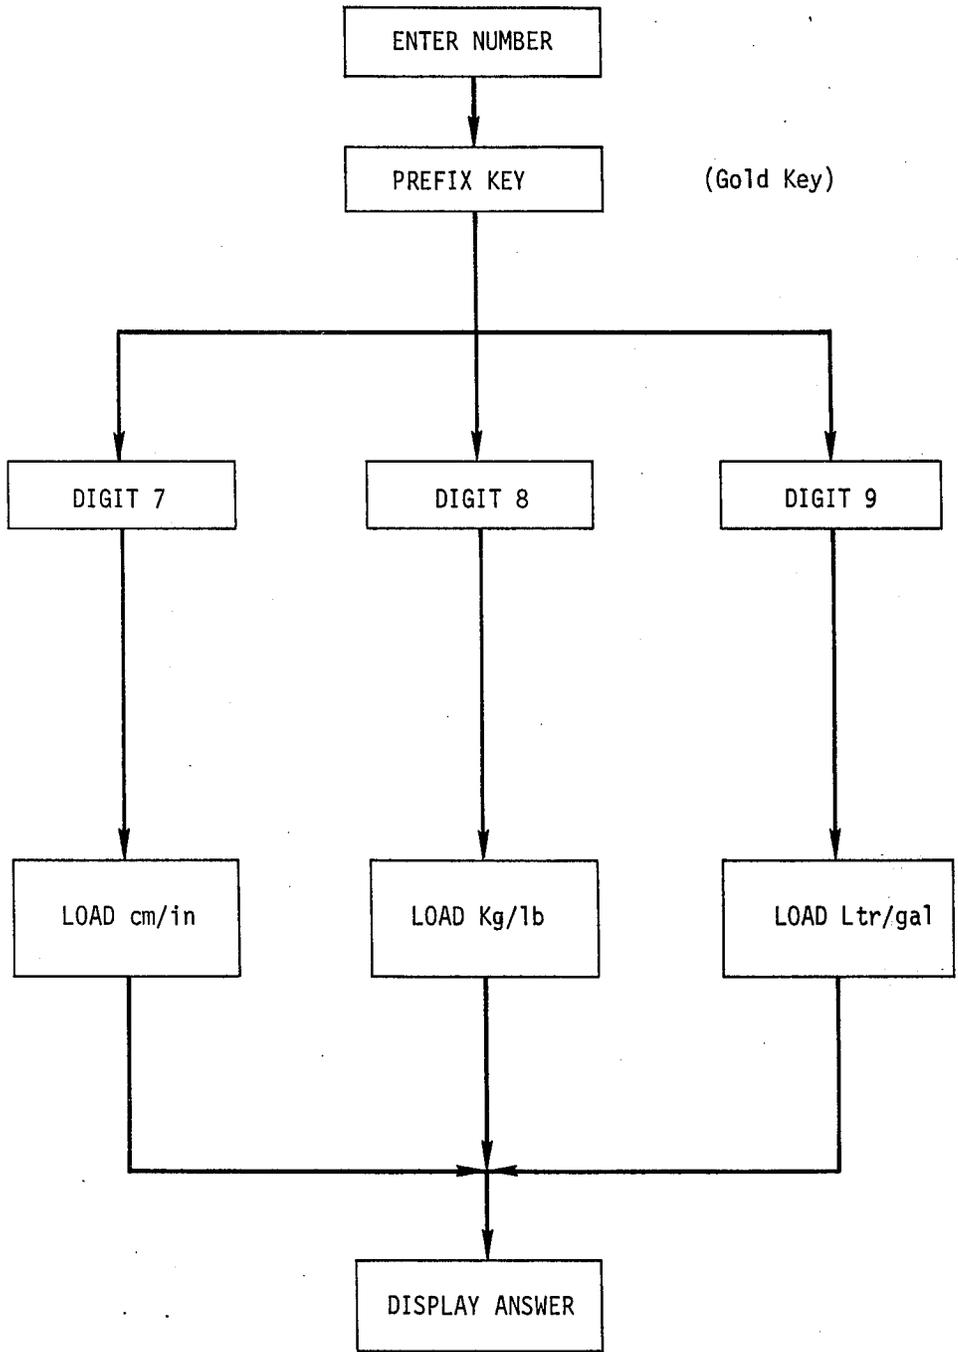


Figure 33

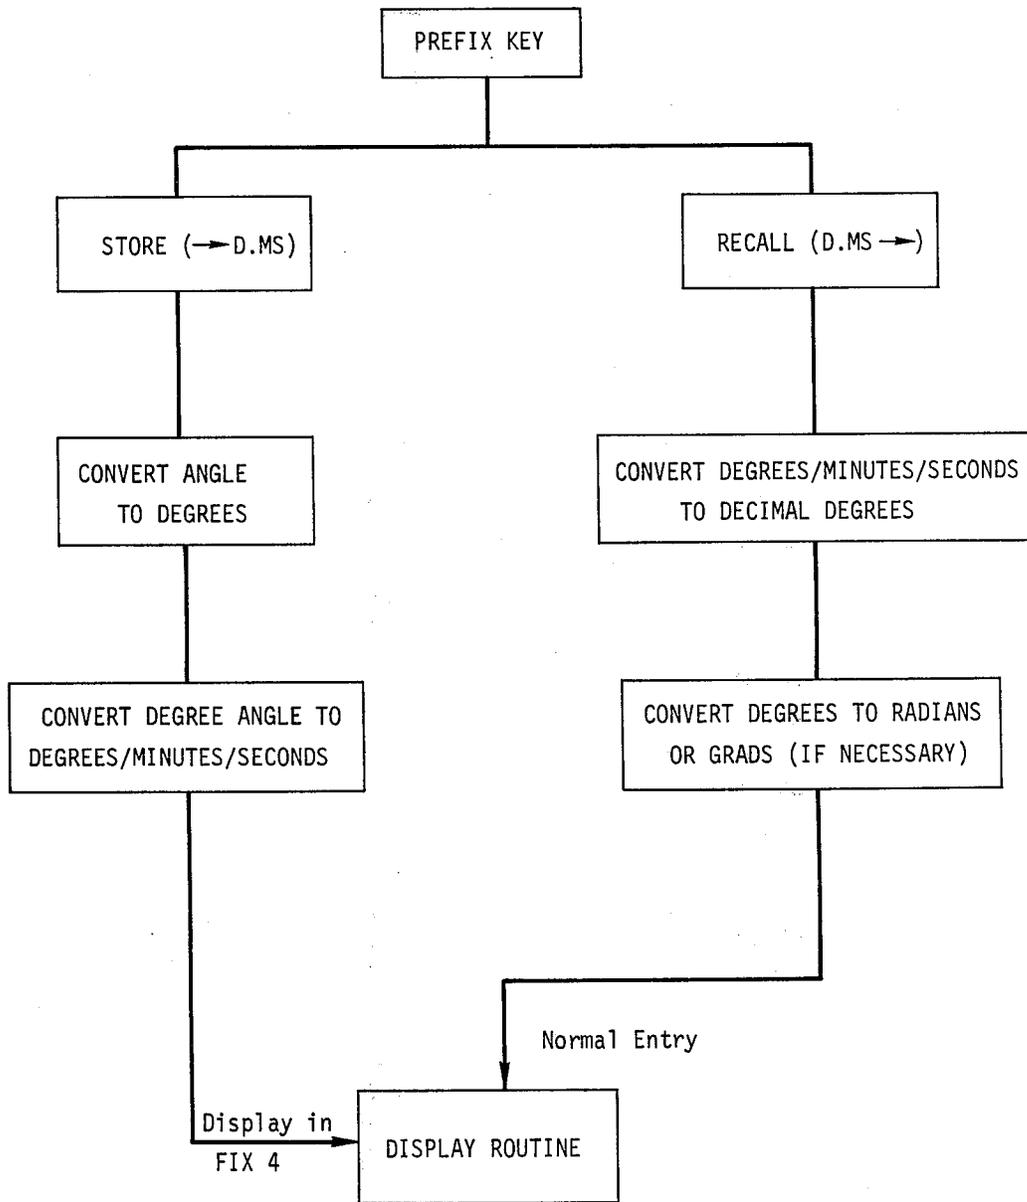


Figure 34

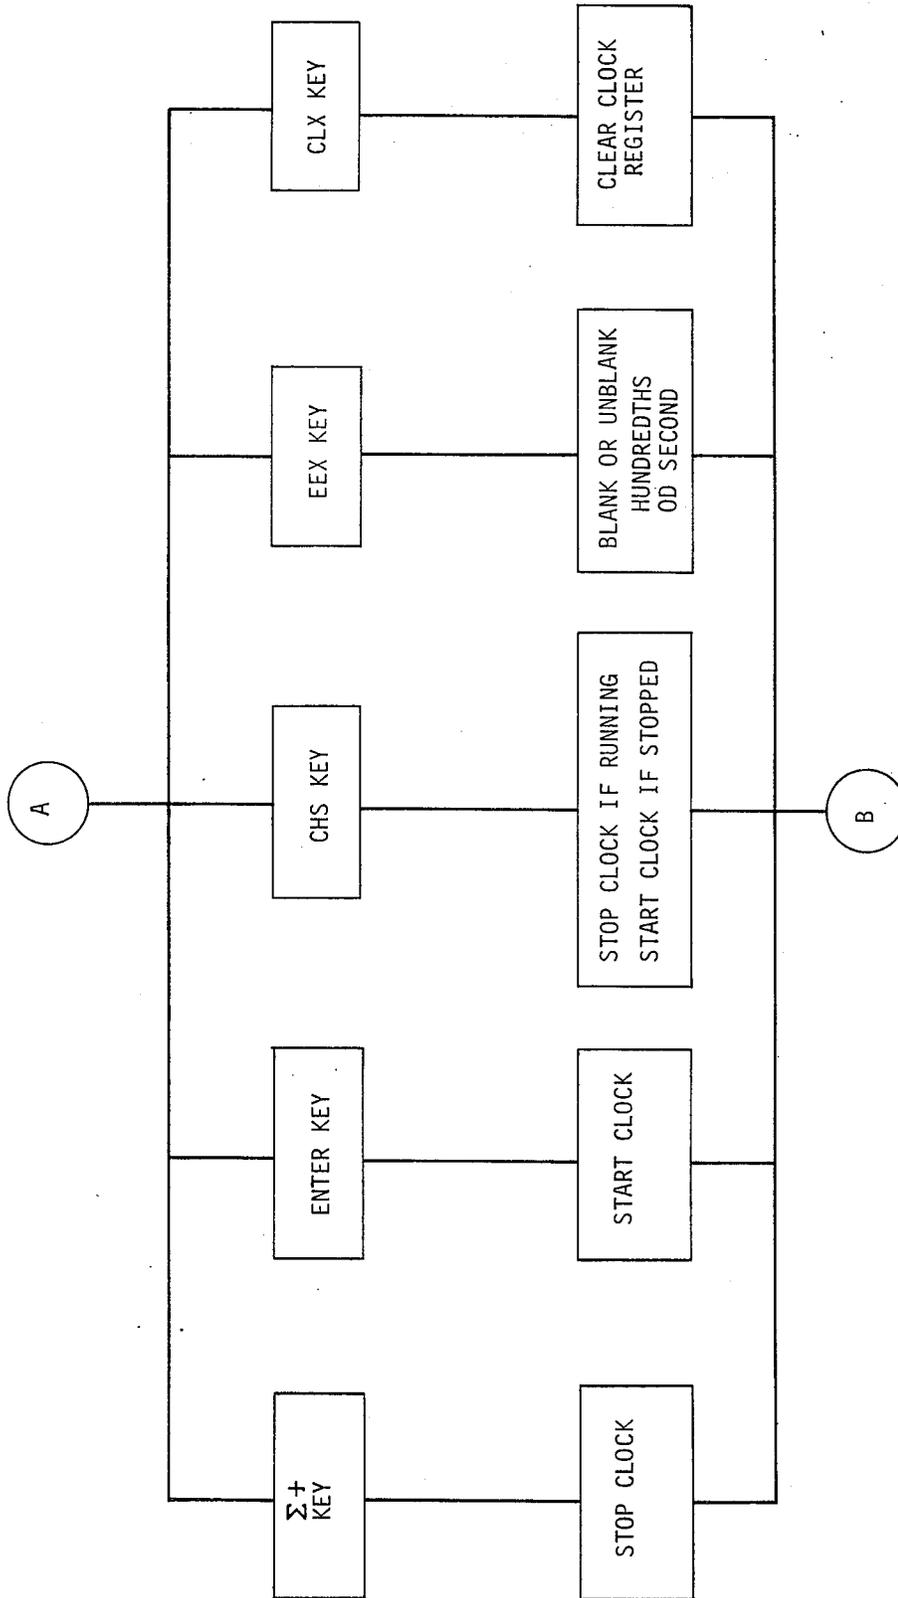


Figure 35

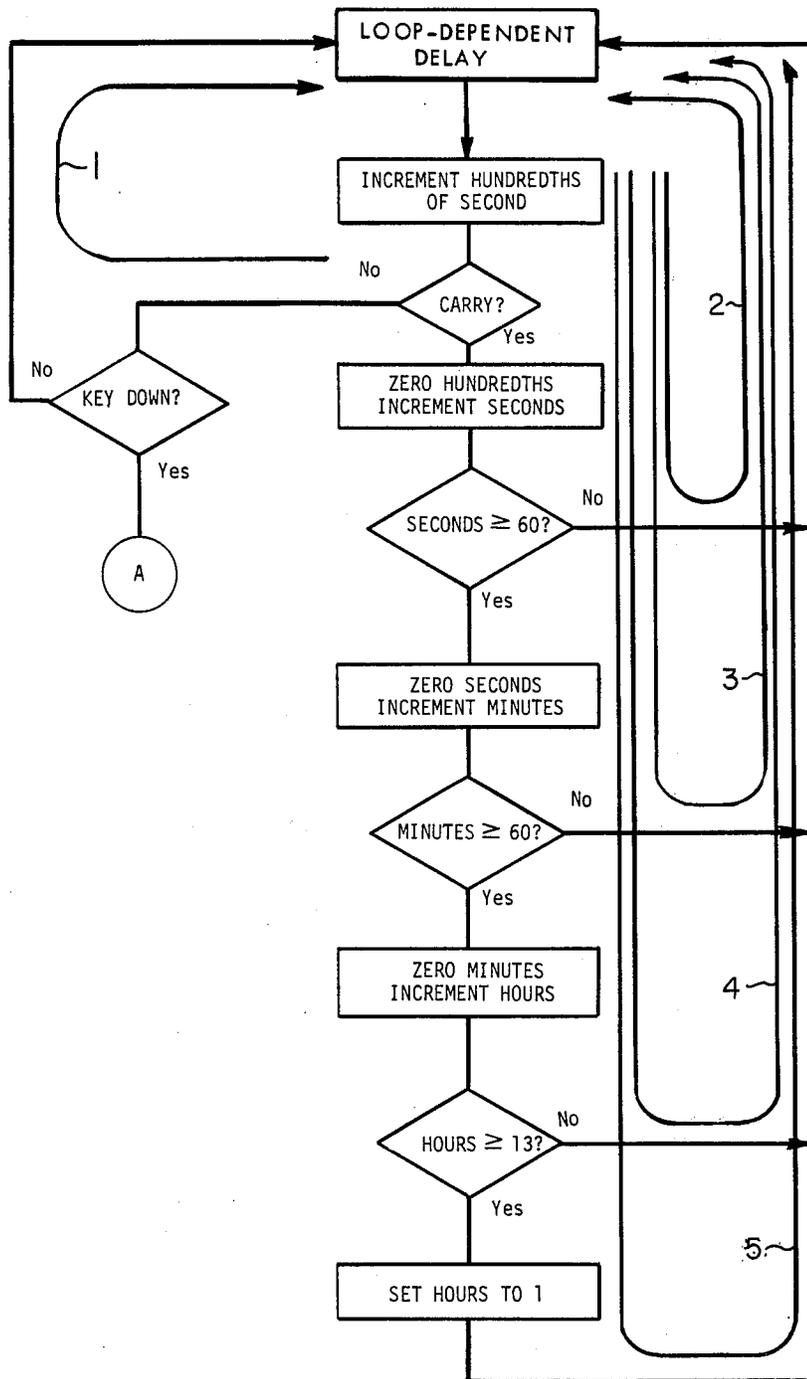


Fig 36

NOTE: ALL LOOPS CONTAIN NUMBER OF PROGRAM STEPS

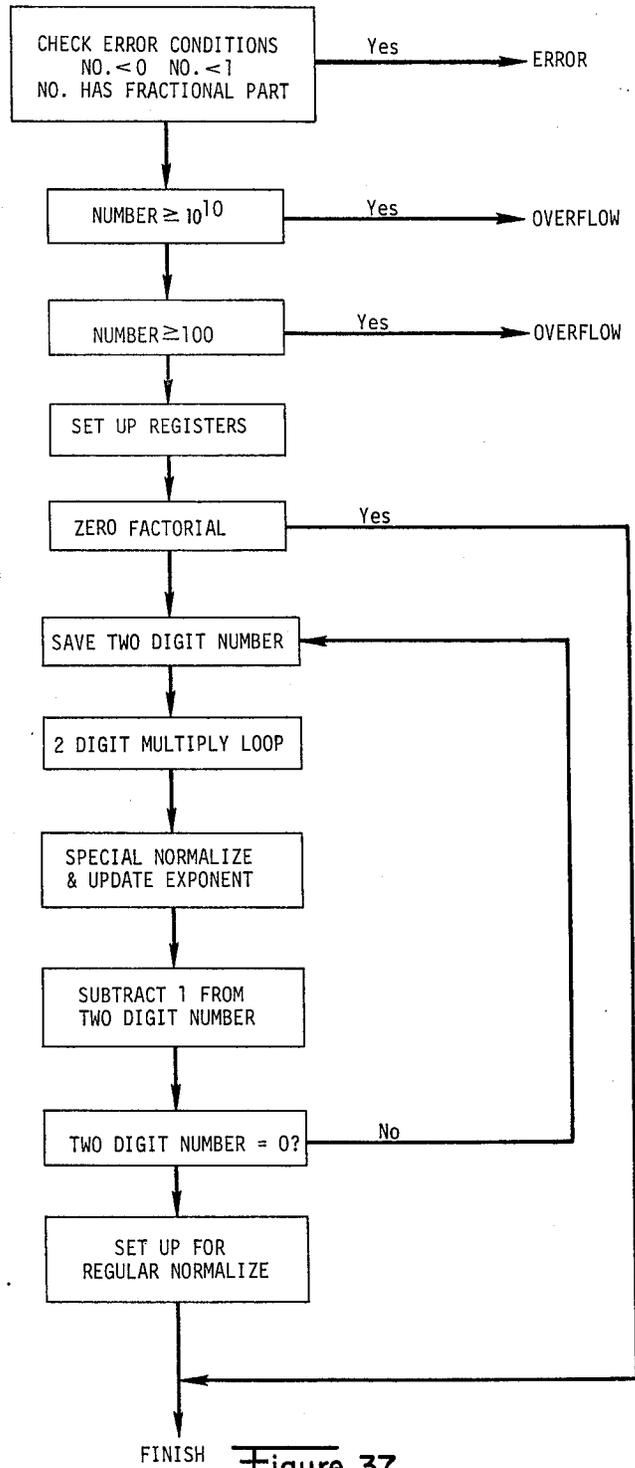


Figure 37

**GENERAL PURPOSE CALCULATOR HAVING
SELECTIVE DATA STORAGE, DATA
CONVERSION AND TIME-KEEPING
CAPABILITIES**

CROSS-REFERENCE TO RELATED APPLICATION

This application is a division of U.S. pat. application, Ser. No. 364,570 entitled "Improved Scientific Calculator" filed by Peter D. Dickinson, et al. on May 29, 1973 now abandoned in favor of continuation application Ser. No. 566,143 entitled "General Purpose Calculator Having Selective Data Storage, Data Conversion and Time-Keeping Capabilities" filed by Peter D. Dickinson et al. on Apr. 8, 1975.

**BACKGROUND AND SUMMARY OF THE
INVENTION**

This invention relates generally to calculators and improvements therein and more particularly to non-programmable scientific calculators. While many prior art calculators can perform some complex calculations involving more than one mathematical function or operation several even redundant keystrokes are usually required. The preferred embodiment of the present invention is capable of performing mathematical operations necessary to convert from one unit of measure to another with a minimum of keystrokes and without the user having to look up the appropriate factor to enter into the calculator to perform the conversion.

A calculator having the features of the preferred embodiment of the present invention incorporates easily accessible conversion factors to convert measurements in inches to centimeters, in gallons to liters and in pounds to kilograms. In addition, the calculator incorporates a conversion function for converting degrees-minutes-seconds (D MS) to decimal degrees, radians or grads. These conversions and their converse accurate to ten digits are initiated by actuation of only three keys on the keyboard and without having to enter the appropriate conversion factors via the keyboard. To preserve readout accuracy when converting from decimal degrees to D MS units the calculator automatically displays the answer in fixed point notation with four digits after the decimal point ("fixed-4" notation) regardless of the display format entered or otherwise specified by the user.

DESCRIPTION OF THE DRAWINGS

FIG. 1 is a top view of a scientific calculator according to the preferred embodiment of the invention.

FIG. 2 is a block diagram of the calculator of FIG. 1.

FIG. 3 is a waveform diagram illustrating the timing sequence of the interconnecting busses and lines of FIG. 2.

FIG. 4 is a block diagram of the control and timing circuit of FIG. 2.

FIG. 5 is a more detailed block diagram of the keyboard scanning circuitry of FIG. 4.

FIG. 6 is a block diagram of one of ROM's 0-7 of FIG. 2.

FIG. 7 is a waveform diagram illustrating a typical address signal and a typical instruction signal.

FIG. 8 is a timing diagram illustrating the important timing points for a typical addressing sequence.

FIG. 9 is a waveform diagram illustrating the word select signals generated in the control and timing cir-

cuit of FIGS. 2 and 4 and in ROM's 0-7 of FIGS. 2 and 6.

FIG. 10 is a block diagram of the arithmetic and register circuit of FIG. 2.

FIG. 11 is a path diagram of the actual data paths for the registers A-F and M of FIG. 10.

FIG. 12 is a waveform diagram illustrating the output signals for the display decoder outputs A-E of FIGS. 2, 10, and 11.

FIG. 13 is a waveform diagram illustrating the actual signals on the display decoder outputs A-E of FIGS. 2, 10, and 11 when the digit 9 is decoded.

FIG. 14 is a waveform diagram illustrating the timing of the START signal generated by the display decoder of FIG. 10.

FIG. 15 is a schematic diagram of the clock driver of FIG. 2.

FIG. 16 is a waveform diagram illustrating the timing relationship between the input and output signals of the clock driver of FIG. 15.

FIG. 17 is a logic diagram of the anode driver of FIG. 2.

FIG. 18 is a waveform diagram illustrating the timing relationship between the input, output, and other signals of the anode driver of FIG. 17.

FIG. 19 is a schematic diagram of the basic inductive drive circuit for one of the LED's employed in the LED display of FIG. 2.

FIG. 20 is a waveform diagram illustrating the timing relationship between the decimal point drive signals for the LED display of FIG. 2.

FIG. 21 is a schematic diagram of the inductive drive circuit for one digit in the LED display of FIG. 2.

FIG. 22 is a logic diagram of the cathode driver of FIG. 2.

FIG. 23 is a top view of a metal strip employed in the keyboard input unit of FIGS. 1 and 2.

FIG. 24 is a side view of the metal strip of FIG. 23.

FIG. 25 is a force-deflection curve for a typical key in the keyboard input unit of FIGS. 1 and 2.

FIG. 26 is a schematic diagram of the LED display of FIGS. 1 and 2 and the inductive drive circuits therefor.

FIG. 27 is a schematic diagram of one segment of the LED display of FIG. 26.

FIG. 28 is an equivalent piecewise-linear model for the circuitry of FIG. 27.

FIG. 29 is a waveform diagram illustrating the inductor current and LED anode voltages in the circuitry of FIG. 27.

FIG. 30 is a path diagram illustrating the possible transfer paths between ROM's 0-7 of FIG. 2.

FIG. 31 is a flow diagram of the display wait loop employed in the calculator of FIGS. 1 and 2.

FIG. 32 is a flow diagram of the Last-X function of the calculator of FIGS. 1 and 2.

FIG. 33 is a flow diagram of the metric-U.S. conversion constant function of the calculator of FIGS. 1 and 2.

FIG. 34 is a flow diagram of the conversion function between the decimal system and the degrees, minutes, and seconds system of the calculator of FIGS. 1 and 2.

FIG. 35 is a flow diagram showing the keys to be operated in performing functions when the calculator of FIGS. 1 and 2 is in the clock mode.

FIG. 36 is a flow diagram of the program clock of the calculator of FIGS. 1 and 2 showing loops depicting hundredths of a second, seconds, minutes and hours.

FIG. 37 is a flow diagram of the factorial function of the calculator of FIGS. 1 and 2.

DESCRIPTION OF THE PREFERRED EMBODIMENT

System Architecture

Referring to FIGS. 1 and 2, there is shown a pocket-size electronic calculator 10 including a keyboard input unit 12 for entering data and instructions into the calculator and a seven-segment LED output display unit 14 for displaying each data entry and the results of calculations performed by the calculator. As shown in FIG. 2, calculator 10 also includes an MOS control and timing circuit 16, an MOS read-only memory circuit 18 (including ROM's 0-7), an MOS arithmetic and register circuit 20, a bipolar clock driver 22, a solid state power supply unit 24, and an MOS auxiliary data storage circuit 25.

The four MOS circuits are two-phase dynamic MOS/LSI circuits with low thresholds allowing compatibility with TTL bipolar circuits and allowing extremely low-power operation (less than 100 milliwatts for all three circuits). They are organized to process 14-digit BCD words in a digit-serial, bit-serial manner. The maximum bit rate or clock frequency is 200 kilohertz, which gives a word time of 280 microseconds (permitting a floating point addition to be completed in 60 milliseconds).

Control and timing circuit 16, read-only memory circuit 18, arithmetic and register circuit 20, and auxiliary data storage circuit 25 are tied together by a synchronization (SYNC) buss 26, an instruction (I_n) buss 28, a word select (WS) buss 30, an instruction address (I_n) line 32, and a carry line 34. All operations occur on a 56 bit (b_0 - b_{55}) word cycle (fourteen four-bit BCD digits). The timing sequence for the interconnecting busses and lines 26-34 is shown in FIG. 3.

The SYNC buss 26 carries synchronization signals from control and timing circuit 16 to ROM's 0-7 in read-only memory circuit 18 and to arithmetic and register circuit 20 to synchronize the calculator system. It provides one output each word time. This output also functions as a 10-bit wide window (b_{45} - b_{54}) during which I_n buss 28 is active.

The I_n buss 28 carries 10-bit instructions from the active ROM in the read-only memory circuit 18 to the other ROM's, control and timing circuit 16, arithmetic and register circuit 20, and auxiliary data storage circuit 25, each of which decodes the instructions locally and responds to or acts upon them if they pertain thereto and ignores them if they do not. For instance, the ADD instruction affects arithmetic and register circuit 20 but is ignored by control and timing circuit 16. Similarly, the SET STATUS BIT 5 instruction sets status flip-flop 5 in control and timing circuit 16 but is ignored by arithmetic and register circuit 20.

The actual implementation of an instruction is delayed one word time from its receipt. For example, an instruction may require the addition of digit 2 in two of the registers in arithmetic and register circuit 20. The ADD instruction would be received by arithmetic and register circuit 20 during bit times b_{45} - b_{54} of word time N and the addition would actually occur during bit times b_8 - b_{11} of word time N + 1. Thus, while one instruction is being executed the next instruction is being fetched.

The WS buss 30 carries an enable signal from control and timing circuit 16 or one of the ROM's in read-only

memory circuit 18 to arithmetic and register circuit 20 to enable the instruction being executed thereby. Thus, in the example of the previous paragraph, addition occurs only during digit 2 since the adder in the arithmetic and register circuit 20 is enabled by WS buss 30 only during this portion of the word. When WS buss 30 is low, the contents of the registers in arithmetic and register circuit 20 are recirculated unchanged. Three examples of WS timing signals are shown in FIG. 3. In the first example, digit 2 is selected out of the entire word. In the second example, the last 11 digits are selected. This corresponds to the mantissa portion of a floating point word format. In the third example, the entire word is selected. Use of the word select feature allows selective addition, transfer, shifting or comparison of portions of the registers within arithmetic and register circuit 20 with only one basic ADD, TRANSFER, SHIFT, or COMPARE instruction. Some customization in the ROM word select fields is available via masking options.

The I_n line 32 serially carries the addresses of the instructions to be read from ROM's 0-7. These addresses originate from control and timing circuit 16, which contains an instruction address register that is incremented each word time unless a JUMP SUBROUTINE or a BRANCH instruction is being executed. Each address is transferred to ROM's 0-7 during bit times b_{19} - b_{26} and is stored in an address register of each ROM. However, only one ROM is active at a time, and only the active ROM responds to an address by outputting an instruction on the I_n line 28. Control is transferred between ROM's by a ROM SELECT instruction. This technique allows a single eight-bit address, plus eight special instructions, to address up to eight ROM's of 256 words each.

The carry line 34 transmits the status of the carry output of the adder in arithmetic and register circuit 20 to control and timing circuit 16. The control and timing circuit uses this information to make conditional branches, dependent upon the numerical value of the contents of the registers in arithmetic and register circuit 20.

A BCD input/output line 35 interconnects the auxiliary data storage circuit 25 and the C register of arithmetic and register circuit 20. This line always outputs the contents of the C register of arithmetic and register circuit 20 unless a specific instruction to input to the C register of the arithmetic and register circuit is being executed.

Control and timing circuit 16 is organized to scan a five-by-eight matrix of switches in search of an interconnection that designates actuation of a key. Any type of metal-to-metal contact may be used as a key. Bounce problems are overcome by programmed lock-outs in the key entry routine. Each key has an associated six-bit code.

A power on circuit 36 in power supply unit 24 supplies a signal forcing the calculator to start up in a known condition when power is supplied thereto. Power is supplied to the calculator when the on-off switch of keyboard input unit 12 (see FIG. 1) is moved to the on position.

The primary outputs of the calculator are five output lines 38 connected between a display decoder of arithmetic and register circuit 20 and an anode driver of output display unit 14. Data for a seven-segment display plus a decimal point is time-multiplexed onto these five output lines. A start line 40 is connected from the

display decoder of arithmetic and register circuit 20 to the auxiliary data storage circuit 25 and a cathode driver of output display unit 14 and indicates when the digit 0 occurs.

Control and Timing Circuit

Referring now to FIG. 4, control and timing circuit 16 contains the master system counter 42, scans the keyboard 12, retains status information about the system or the condition of an algorithm, and generates the next ROM address. It also originates the subclass of Word Select signals which involve the pointer 44, a four-bit counter that points to one of the register digit positions.

The control unit of control and timing circuit 16 is a microprogrammed controller 46 comprising a 58 word (25 bits per word) control ROM, which receives qualifier or status conditions from throughout the calculator and sequentially outputs signals to control the flow of data. Each bit in this control ROM either corresponds to a signal control line or is part of a group of N bits encoded into 2^N mutually exclusive control lines and decoded external to the control ROM. At each phase 2 clock, a word is read from the control ROM as determined by its present address. Part of the output is fed back to become the next address.

Several types of qualifiers are checked. Since most commands are issued only at certain bit times during the word cycle, timing qualifiers are necessary. This means the control ROM may sit in a wait loop until the appropriate timing qualifier comes true, then move to the next address to issue a command. Other qualifiers are the state of the pointer register, the PWO (power on) line, the CARRY flip flop, and the state of each of the 12 status bits.

Since the calculator is a serial system based on a 56 bit word, a six-bit system counter 42 is employed for counting to 56. Several decoders from system counter 42 are necessary. The SYNC signal is generated during bit times b_{45} - b_{54} and transmitted to all circuits in the system (see FIG. 3). Other timing qualifiers are sent to the microprogrammed control ROM 46 as mentioned in the previous paragraph.

System counter 42 is also employed as a keyboard scanner as shown in FIG. 5. The most significant three bits of system counter 42 go to a one-of-eight decoder 48, which sequentially selects one of the keyboard row lines 50. The least significant three bits of the system counter count modulo seven and go to a one-of-eight multiplexor 52, which sequentially selects one of the keyboard column lines 54 (during 16 clock times no key is scanned). The multiplexor output is called the key down signal. If a contact is made at any intersection point in the five-by-eight matrix (by depressing a key), the key down signal will become high for one state of system counter 42 (i.e., when the appropriate row and column lines are selected). The key down signal will cause that state of the system counter to be saved in key code buffer 56. This six-bit code is then transferred to the ROM address register 58 and becomes a starting address for the program which services the key that was down (two leading 0 bits are added by hardware so an eight-bit address exists). Thus, during each state of system counter 42, the decoder-multiplexor combination 48 and 52 is looking to see if a specific key is down. If it is, the state of the system counter becomes a starting address for execution of that key function (noted that 16 of the 56 states are not used for key codes). By

sharing the function of the system counter and using a keyboard scanning technique directly interfaced to the MOS circuitry, circuit complexity is reduced significantly.

A 28 bit shift register which circulates twice each 56 bit word time, is employed in control and timing circuit 16. These 28 bits are divided into three functional groups: the main ROM address register 58 (eight bits), the subroutine return address register 60 (eight bits), and the status register 62 (12 bits).

The main ROM's 0-7 each contain 256 (10 bit) words, thereby requiring an eight-bit address. This address circulates through a serial adder/subtractor 64 and is incremented during bit times b_{47} - b_{54} (except in the case of branch and jump-subroutine instructions for which the eight bit address field of the ten-bit instruction is substituted for the current address). The next address is transmitted over the I_a line 32 to each of the main ROM's 0-7 during bit times b_{19} - b_{26} .

The Status register 62 contains 12 bits or flags which are used to keep track of the state of the calculator. Such information as whether the decimal point has been hit, the minus sign set, etc. must be retained in the status bits. In each case the calculator remembers past events by setting as appropriate status bit and asking later if it is set. A yes answer to a status interrogation will set the carry flip-flop 66 as indicated by control signal IST in FIG. 4. Any status bit can be set, reset, or interrogated while circulating through the adder 64 in response to the appropriate instruction.

The instruction set allows one level of subroutine call. The return address is stored in the eight-bit return address register 60. Execution of a JUMP subroutine stores the incremented present address into return address register 60. Execution of the RETURN instruction retrieves this address for transmission over I_a line 32. Gating is employed to interrupt the 28 bits circulating in the shift register 58-62 for insertion of addresses at the proper time as indicated by the JSB control signal in FIG. 4.

An important feature of the calculator system is the capability of select and operate upon a single digit or a group of digits (such as the exponent field) from the 14 digit registers. This feature is implemented through the use of a four-bit pointer 44 which points at the digit of interest. Instructions are available to set, increment, decrement, and interrogate pointer 44. The pointer is incremented or decremented by the same serial adder/subtractor 64 used for addresses. A yes answer to the instruction "is pointer $\neq N$ " will set carry flip-flop 66 via control signal IPT in FIG. 4.

The word select feature was discussed above in connection with FIGS. 2 and 3. Some of the word select signals are generated in control and timing circuit 16, namely those dependent on pointer 44, and the remainder in the main ROM's 0-7. The pointer word select options are (1) pointer position only and (2) pointer position and all less significant digits. For instance, assume the mantissa signs of the numbers in the A and C registers of arithmetic and register circuit 20 were to be exchanged. The pointer would be set to position 13 (last position) and the A EXCHANGE C instruction with a "pointer position" word select field would be given. If all of the word except the mantissa signs were to be exchanged, the A EXCHANGE C instruction would be given with the pointer set and 12 and the word select field set to pointer and less significant digits. The control and timing circuit word-select output

30 is or-tied with the ROM word-select output 30 and transmitted to arithmetic and register circuit 20.

Any carry signal out of the adder in arithmetic and register circuit 20, with word select, also high, will set carry flip-flop 66. This flip-flop is interrogated during the BRANCH instruction to determine if the existing address should be incremented (yes carry) or replaced by the branch address (no carry). The branch address is retained in an eight-bit address buffer 68 and gated to I_a line 32 by the BRH control signal.

The power-on signal is used to synchronize and pre-set the starting conditions of the calculator. It has two functions, one of which is to get the address of control ROM 46 set to a proper starting state and the other of which is to get the system counter 42 in control and timing circuit 16 synchronized with the counter in each main ROM 0-7. As the system power comes on, the PWO signal is held at logic 1 (0 volts in this system) for at least twenty milliseconds. This allows system counter 42 to make at least one pass through bit times b_{45} - b_{54} when SYNC is high thereby setting main ROM 0 active and the rest of the ROM's inactive. When PWO goes to logic 0 (+6 volts), the address of control ROM 46 is set to 000000 where proper operation can begin.

READ-ONLY MEMORY CIRCUIT

The ROM's 0-7 in read-only memory circuit 18 store the programs for executing the functions required of the system. Since each ROM contains 256 ten-bit words, there are 1,536 words or 15,360 bits of ROM. A block diagram of each of the ROM's 0-7 is shown in FIG. 6.

The basic operation of each ROM is a serial-address in, a serial-instruction out. During every 56 bit word time the address comes in, least significant bit first from bit b_{19} through bit b_{26} . Every ROM 0-7 in the system receives this same eight-bit address and from bit time b_{45} through b_{54} tries to output onto I_s line 28. However, a ROM enable (ROE) flip-flop 70 in each ROM insures that no more than one ROM actually sends an instruction on I_s line 28 at the same time.

All output signals are inverted so that the steady-state power dissipation is reduced. The calculator circuits are P-channel MOS. Thus, the active signals that turn on a gate are the more negative. This is referred to as negative logic, since the more negative logic level is the logic 1. As mentioned above, logic 0 is +6 volts and logic 1 is 0 volts. The signals on I_a and I_s are normally at logic 0. However, when the output buffer circuits are left at logic 0 they consume more power. A decision was therefore made to invert the signals on the I_a and I_s outputs and re-invert the signals at all inputs. Thus, signals appear at the I_a and I_s outputs as positive logic. The oscilloscope pattern that would be seen for instruction 1101 110 011 from state 11 010 101 is shown in FIG. 8.

The serial nature of the calculator circuits requires careful synchronization. This synchronization is provided by the SYNC pulse, generated in control and timing circuit 16 and lasting for bit times b_{45} - b_{54} . Each ROM has its own 56 state counter 72, synchronized to the system counter 42 in control and timing circuit 16. Decoded signals from this state counter 72 open the input to the address register 74 at bit time b_{19} , clock I_s out at bit time b_{45} and provide other timing control signals.

As the system power comes on, the PWO signal is held at 0 volts (logic 1) for at least 20 milliseconds. The PWO signal is wired (via a masking option) to set ROM Output Enable (ROE) flip-flop 70 on main ROM 0 and reset it on all other ROM's. Thus when operation begins, ROM 0 will be the only active ROM. In addition, control and timing circuit 16 inhibits the address output start-up so that the first ROM address will be zero. The first instruction must be a JUMP SUBROUTINE to get the address register 58 in control and timing circuit 16 loaded properly.

FIG. 7 shows the important timing points for a typical addressing sequence. During bit times b_{19} - b_{26} the address is received serially from control and timing circuit 16 and loaded into address register 74 via I_a line 32. This address is decoded and at bit time b_{44} the selected instruction is gated in parallel into the I_s register 76. During bit times b_{45} - b_{54} the instruction is read serially onto I_s buss 28 from the active ROM (i.e., the ROM with the ROM enable flip-flop set).

Control is transferred between ROM's by a ROM SELECT instruction. Effectively this instruction will turn off ROE flip-flop 70 on the active ROM and turn on ROE flip-flop 70 on the selected ROM. Implementation is dependent upon the ROE flip-flop being a master-slave flip-flop. In the active ROM, the ROM SELECT instruction is decoded by a ROM select decoder 78 at bit time 44, and the master portion of ROE flip-flop 70 is set. The slave portion of ROE flip-flop 70 is not set until the end of the word bit time (b_{55}). In the inactive ROM's the instruction is read serially into the I_s register 76 during bit times b_{45} - b_{54} and then decoded, and the ROE flip-flop 70 is set at bit time b_{55} in the selected ROM. A masking option on the decoding from the least significant three bits of the I_s register 76 allows each ROM to respond only to its own code.

The six secondary word-select signals are generated in the main ROM's 0-7. Only the two word-select signals dependent upon the POINTER come from control and timing circuit 16. The word select of the instruction is retained in the word select register 80 (also a master-slave). If the first two bits are 01, the instruction is of the arithmetic type for which the ROM must generate a word select gating signal. At bit time b_{55} the next three bits are gated to the slave and retained for the next word time to be decoded into one of six signals. The synchronization counter 72 provides timing information to the word select decoder 82. the output WS signal is gated by ROE flip-flop 70 so only the active ROM can output on WS line 30, which is OR-tied with all other ROM's and also control and timing circuit 16. As discussed above, the WS signal goes to arithmetic and register circuit 20 to control the portion of a word time an instruction is active.

The six ROM generated word select signals used in the calculator are shown in FIG. 9. ROM's 0-7 output a 1 bit-time pulse on I_s buss 28 at bit time b_{11} to denote the exponent minus sign time. This pulse is used in the display decoder of arithmetic and register circuit 20 to convert a 9 into a displayed minus sign. The time location of this pulse is a mask option on the ROM.

Arithmetic and Register Circuit

Arithmetic and register circuit 20 shown in FIG. 10 provides the arithmetic and data storage function for the calculator. It is controlled by WS, I_s , and SYNC

lines 30, 28, and 26, respectively; receives instructions from ROM's 0-7 over the I_8 line 28; sends information back to control and timing circuit 16 via the CARRY line 34; partially decodes the display information before transmitting it via output lines 38 to the anode driver of output display unit 14; and provides a START pulse to the cathode driver of output display unit 14 to synchronize the display.

Arithmetic and register circuit 16 contains seven, fourteen-digit (56 bit) dynamic registers A-F and M and a serial BCD adder/subtractor 84. Actual data paths, not shown in FIG. 10 due to their complexity, are discussed below and shown in FIG. 11. The power and flexibility of an instruction set is determined to a great extent by the variety of data paths available. One of the advantages of a serial structure is that additional data paths are not very costly (only one additional gate per path). The structure of arithmetic and register circuit 20 is optimized for the type of algorithms required by the calculator.

The seven registers A-F and M can be divided into three groups: the working registers A, B, and C with C also being the bottom register of a four-register stack; the next three registers D, E, and F in the stack; and a separate storage register M communicating with the other registers through register C only. In FIG. 11, which shows the data paths connecting all the registers A-F and M, each circle represents the 56 bit register designated by the letter in the circle. In the idle state (when no instruction is being executed in arithmetic and register circuit 20) each register continually circulates since with dynamic MOS registers information is represented by a charge on a parasitic capacitance and must be continually refreshed or lost. This is represented by the loop re-entering each register.

Registers A, B, and C can all be interchanged. Either register A or C is connected to one adder input, and either register B or C to the other. The adder output can be directed to either register A or C. Certain instructions can generate a carry via carry flip-flop 85 which is transmitted to control and timing circuit 16 to determine conditional branching. Register C always holds a normalized version of the displayed data.

In the stack formed by registers C, D, E, and F a ROLL DOWN instruction is executed by the following transfers: $F \rightarrow E \rightarrow D \rightarrow C \rightarrow F$. A STACK UP instruction is executed by the following transfers: $C \rightarrow D \rightarrow E \rightarrow F$. Thus, it is possible to transfer a register and also let it recirculate so that in the last example the contents of C are not lost. The structure and operation of a stack such as this are further described in copending U.S. patent application Ser. No. 257,606 entitled IMPROVED PORTABLE ELECTRONIC CALCULATOR, filed on May 30, 1972, by David S. Cochran et al, and issued as U.S. Pat. No. 3,781,820 on Dec. 25, 1973.

In serial decimal adder/subtractor 84 a correction (addition of 6) to a BCD sum must be made if the sum exceeds nine (a similar correction for subtraction is necessary). It is not known if a correction is needed until the first three bits of the sum have been generated. This is accomplished by adding a four-bit holding register 86 ($A_{60}-A_{57}$) and inserting the corrected sum into a portion 88 ($A_{56}-A_{53}$) of register A if a carry is generated. This holding register 86 is also required for the SHIFT A LEFT instruction. One of the characteristics

of a decimal adder is that non-BCD codes (i.e. 1101) are not allowed. They will be modified if circulated through the adder. The adder logic is minimized to save circuit area. If four bit codes other than 0000-1001 are processed, they will be modified. This is no constraint for applications involving only numeric data (however, if ASCII codes, for instance, are operated upon, incorrect results will be obtained).

Arithmetic and register circuit 20 receives the instruction during bit times $b_{45}-b_{54}$. Of the ten types of instructions hereinafter described, arithmetic and register circuit must respond to only two types (namely, ARITHMETIC & REGISTER instructions and DATA ENTRY/DISPLAY instructions). ARITHMETIC & REGISTER instructions are coded by a 10 in the least significant two bits of I_8 register 90. When this combination is detected, the most significant five bits are saved in I_8 register 90 and decoded by instruction decoder 92 into one of 32 instructions.

The ARITHMETIC & REGISTER instructions are active or operative only when the Word Select signal (WS) generated in one of the ROM's 0-7 or in control and timing circuit 16 is at logic 1. For instance, suppose the instruction "A+C \rightarrow C, mantissa with sign only" is called. Arithmetic and register circuit 20 decodes only A+C \rightarrow C. It sets up registers A and C at the inputs to adder 84 and, when WS is high, directs the adder output to register C. Actual addition takes place only during bit times b_{12} to b_{55} (digits 3-13) since for the first three digit times the exponent and exponent sign are circulating and are directed unchanged back to their original registers. Thus, the word select signal is an "instruction enable" in arithmetic and register circuit 20 (when it is at logic 1, instruction execution takes place, and when it is at logic 0, recirculation of all registers continues).

The DATA ENTRY/DISPLAY instructions, except for digit entry, affect an entire register (the word select signal generated in the active ROM is at logic 1 for the entire word cycle). Some of these instructions are: up stack, down stack, memory exchange $M \leftrightarrow C$, and display on or toggle. A detailed description of their execution is given hereinafter.

For increased power savings display decoder 94 is partitioned to partially decode the BCD data into seven segments and a decimal point in arithmetic and register circuit 20 by using only five output lines (A-E) 38 with time as the other parameter. Information for seven segments ($a-g$) and a decimal point (dp) are time shared on the five output lines A-E. The output wave forms for output lines A-E are shown in FIG. 12. For example, output line D carries the segment e information during T_1 (the first bit time of each digit time) and the segment D information during T_2 (the second bit time of each digit time); and output E carries the segment G information during T_1 , the segment F information during T_2 , and the decimal point (dp) during T_4 . The actual signals which would appear if a digit 9 were decoded are shown in FIG. 13. The decoding is completed in the anode driver of output display unit 14 as explained hereinafter.

The registers in arithmetic and register circuit 20 hold 14 digits comprising 10 mantissa digits, the mantissa sign, two exponent digits, and the exponent sign. Although the decimal point is not allocated a register position, it is given a full digit position in the output

display. This apparent inconsistency is achieved by using both the A and B registers to hold display information. The A register is set up to hold the displayed number with the digits in the proper order. The B register is used as a masking register with digits 9 inserted for each display position that is to be blanked and a digit 2 at the decimal point location. When the anode driver of output display unit 14 detects a decimal point code during T_4 , it provides a signal to the cathode driver of the output display unit to move to the next digit position. One digit and the decimal point share one of the 14 digit times. The digit 9 mask in register B allows both trailing and leading zeros to be blanked (i.e., by programming 9's into the B register). Use of all three working registers for display (i.e., the C register to retain the number in normalized form, the A register to hold the number in the displayed form, and the B register as a mask) allows the calculator to have both a floating point and a scientific display format at the expense of only a few more ROM states.

The display blanking is handled as follows. At time T_4 the BCD digit is gated from register A into display buffer 96. If this digit is to be blanked, register B will contain a 9 (1001) so that at T_4 the end bit (B_{01}) of the B register will be a 1 (an 8 would therefore also work). The input to display buffer 96 is OR-ED with B_{01} and will be set to 1111 if the digit is to be blanked. The decimal point is handled in a similar way. A 2 (0010) is placed in register B at the decimal point location. At time T_2 the decimal point buffer flip-flop is set by B_{01} . Any digit with a one in the second position will set the decimal point (i.e., 2, 3, 6, or 7).

Display decoder 94 also applies a START signal to line 40. This signal is a word synchronization pulse, which resets the digit scanner in the cathode driver of output display unit 14 to assure that the cathode driver will select digit 1 when the digit 1 information is on outputs A, B, C, D, and E. The timing for this signal is shown in FIG. 14.

One other special decoding feature is required. A minus sign is represented in tens complement notation or sign and magnitude notation by the digit 9 in the sign location. However, the display must show only a minus sign (i.e., segment g). The digit 9 in register A in digit position 2 (exponent sign) or position 13 (mantissa sign) must be displayed as minus. The decoding circuitry uses the pulse on I_s buss 28 at bit time b_{11} (see FIG. 3) to know that the digit 9 in digit position 2 of register A should be a minus and uses the SYNC pulse to know that the digit 9 in digit position 13 of register A should also be a minus. The pulse on I_s buss 28 at bit time b_{11} can be set by a mask option, which allows the minus sign of the exponent to appear in other locations for other uses of the calculator circuits.

Clock Driver

The bipolar clock driver 22, one phase of which is shown in FIG. 15, requires less than 25 milliwatts and can drive loads up to 300 picoforads with a voltage swing of +7 to -14 volts. An ENABLE input 98 allows both outputs Q_1 and Q_2 to be held to V_{cc} , the MOS Logic 0 state. This is an effective means of

strobing the clock. During dc operation, the transistor pair Q_1 - Q_2 allows only one of the output transistor pairs Q_5 - Q_6 or Q_7 - Q_8 to conduct. Diode D_3 prohibits conduction from transistor Q_6 to transistor Q_8 during transient operation. Thus, the only possible transient short circuit current must flow from transistor Q_5 to transistor Q_7 . However, the limited current handling capability of Q_5 (a lateral PNP) limits this current to less than 5 milliamps peak. The input signals for clock driver 22 are generated on the anode driver of output display unit 14, and the outputs of the clock driver go to each of the MOS circuits in the system. The timing relationships are shown in FIG. 16.

Anode Driver

As discussed above, the display information is partially decoded in arithmetic and register circuit 20 and completely decoded into seven segment plus decimal point signals in the bipolar anode driver of output display unit 14. The anode driver also includes the basic clock generator for the system and a circuit for detecting low battery voltage to turn on all the decimal points. Such a circuit is shown and described in co-pending U.S. patent application Ser. No. 206,407 entitled LOW BATTERY VOLTAGE INDICATOR FOR A PORTABLE DIGITAL ELECTRONIC INSTRUMENT, filed on Dec. 9, 1971, by Thomas M. Whitney, and now abandoned. A logic diagram of the anode driver is shown in FIG. 17.

The clock generator uses an external LC series circuit to set the oscillator frequency. The advantages of an LC series circuit to set the frequency are: (1) the components can be specified to up to 2% tolerance; and (2) a crystal can be connected to the same external pin to set the frequency to 0.001% for timing applications.

The square-wave oscillator frequency (all times in this section will be referred to an 800 KHz oscillator frequency, which translates to a 200 KHz clock for the calculator, the actual frequency being somewhat less) is divided by flip-flop BL to 400 KHz. Flip-flops B1 and B2 are clocked off alternate phases of flip-flop B1 to provide two 200 KHz square waves as shown in FIG. 18. Flip-flop B3 is clocked from flip-flop B2 and in turn clocks flip-flop B4 to provide further count-down of the basic clock frequency. The two-phase clock signals Q_1 and Q_2 are generated from flip-flops BL and B1 and the 800 KHz oscillator 100. They are on for 625 nsec and separated by 625 μ sec as shown in FIG. 18. One other periodic signal is derived in the anode driver. Once each digit time a signal (counter-clock) is sent to the cathode driver of output display unit 14 (the trailing edge of this signal will step the display to the next digit).

The display consists of 15 characters while the basic calculator word cycle consists of 14 digits. The extra character is the decimal point. As explained above, a BCD two is placed in register B at the digit position of the decimal point. The display decoder 94 in arithmetic and register circuit 20 indicates this by a signal on outputs B and E during bit time T_4 (see FIG. 12). When

this condition is decoded by the anode driver, the decimal point is excited and an extra counter clock signal is given to step the display to the next position (see FIGS. 18, 19, and 20). Therefore all remaining digits in register A are displaced one digit in the display.

FIGS. 19 and 20 show the simplified circuit and the timing relationship for the decimal point. The timing is critical since all the inductor current in segment *b* (the last to be excited) must be decayed before the counter clock signal is given to step to the next digit or the remaining current would be discharged through the wrong digit and a faint lighting of segment *b* on the same digit with the decimal point would occur. The decimal point insertion technique is the reason all other seven segments are excited during the first half of the digit time. The decimal point charging time is one-half that of the other segments. The decimal point segment gets the same current in one-half the time and is one-half as bright as the other segments.

An inductive circuit method of driving the light-emitting diodes is employed. Basically the method involves using the time it takes current to build up in an inductor to limit current, rather than using a resistor as is normally done with LED read-outs. This saves power since the only lossy components in the drive system are the parasitic inductor and transistor resistances. The drive circuit for one digit is shown in FIG. 21. Assuming the cathode transistor switch T_c is closed, an anode switch T_a is closed for 2.5 μ sec allowing the current to build up to a value I_p along a nearly triangular waveform (the early part of an exponential buildup). When anode switch T_a is opened, the current is dumped through the LED, decaying in about 5 μ sec. The anodes are strobed according to the sequence in FIG. 18. The primary reason for sequentially exciting the anodes is to reduce the peak cathode transistor current. Since the decay time is approximately twice the buildup time, it works out that the peak cathode current is about 2.5 times the peak current in any segment. The LED's are more efficient when excited at a low duty cycle. This means high currents for short periods (80 ma. anode current, 250 ma. cathode current). FIG. 18 also shows the relationship between the anode strobing sequence and the display output signals (A-E) from arithmetic and register circuit 20.

Since the anode driver operates from the battery voltage directly and drives the decimal point segment, a circuit is provided that senses when the voltage drops below a certain limit and thereupon turns on all decimal points. An external pin is provided to connect a trimming resistor to set the voltage where the indication is to occur.

Cathode Driver

The cathode driver of output display unit 14 comprises a 15 position shift register for scanning the 15 digit display once each word time. This scanning operation moves from digit to digit in response to counter clock signals from the anode driver. Once each word time a START signal arrives from arithmetic and register circuit 20 to restart the procedure. A block diagram is shown in FIG. 22.

Keyboard

The calculator employs a reliable, low-profile, low cost keyboard with tactile feedback such as that shown and described in copending U.S. patent application Ser. No. 173,754 entitled KEYBOARD HAVING

SWITCHES WITH TACTILE FEEDBACK and filed on Aug. 23, 1971, by William W. Misson et al. The keyboard employs metal strips 102 with slots 104 etched or punched out as shown in FIG. 23, leaving an area which can be stretched to form small humps as shown in FIG. 24. The strips are spot welded to a printed circuit board such that orthogonal traces run under each hump. Pressing a key makes electrical contact between one of the horizontal strips and the corresponding vertical trace. The bounce is less than one millisecond (the calculator contains a wait loop to prevent double entries). Extensive life testing of the keyboard indicates more than a million cycles can be expected. Tolerances must be maintained carefully to prevent the possibility that a key is depressed but no contact is made and to insure uniformity.

One of the main advantages of the keyboard is the "over-center" or "fall away" feel. FIG. 25 shows a force-deflection curve for a typical key. As can be seen a force of about 100 grams must be exceeded before the metal hump "breaks" through. After this critical value the operator cannot prevent contact from being made. Similarly when the key is released, contact is maintained until a critical value when the hump bounces back. Again, past a critical point the operator cannot prevent the key from releasing. This type of action prevents a condition known as "teasing" in which a key is nearly depressed and slight movement causes multiple entries. The point on the force deflection curve at which contact is made or released is most desirably on the negative slope portion. In the calculator it is either there or exactly at the bottom (point A in FIG. 25), but never on the final positive slope portion.

LED Display

As mentioned above, the inductive drive technique employed for the LED display is inherently efficient because there are no dissipative components other than parasitic resistances and the forward voltage drop across saturated transistor switches. An inductive driver like that used in the calculator is shown and described in copending U.S. patent application Ser. No. 202,475 entitled LIGHT EMITTING DIODE DRIVER, filed on Nov. 26, 1971, by Donald K. Miller, and issued as U.S. Pat. No. 3,755,697 on Aug. 28, 1973.

The display circuitry used in the calculator is shown in FIG. 26. It comprises an 8×15 array of LED's in which the eight rows are scanned by the anode driver and the 15 columns by the cathode driver. The timing for this scanning was discussed above. A simplified circuit diagram for one segment is shown in FIG. 27. The equivalent piecewise-linear circuit model is shown in FIG. 28. An analysis of this model shows the inductor current buildup and discharge to be nearly linear for the parameters used in the calculator. The discharge-time to charge-time ratio is approximately:

$$\frac{t_{discharge}}{t_{charge}} = \frac{V_s - V_{sat}}{V_d + V_{sat}} = \frac{3.8 - 0.1}{1.6 + 0.2} = \frac{3.7}{1.8} = 2.06$$

FIG. 29 shows the inductor current for a basic calculator clock frequency of 175 KHz. The average LED current can be calculated from the formula

$$Ave I_{LED} = pulse\ current \times duty\ cycle$$

-continued

$$= \left(\frac{1}{2} \times 80 \text{ ma} \right) \frac{5.88 \text{ sec}}{\frac{1}{175 \text{ KHz}} \times 56}$$

$$= \frac{(80)(5.88)(.175)}{(2)(56)} = .735 \text{ ma}$$

instruction is either a subroutine jump or a conditional branch as selected by the second bit, with eight bits left for an address. The next largest set of instructions, the arithmetic set, starts with a zero followed by a one (right to left), leaving eight bits for encoded instructions. The ten different types of instructions, employed by the calculator are shown in the table below.

TABLE OF INSTRUCTION TYPES (X = DON'T CARE)			
TYPE	AVAILABLE INSTRUCTIONS	NAME	FIELDS
1	256 (ADDRESSES)	JUMP SUBROUTINE	8 SUBROUTINE ADDRESS 0 1
	256 (ADDRESSES)	CONDITIONAL BRANCH	BRANCH ADDRESS 1 1
2	32 × 8 = 256	ARITHMETIC/REGISTER	1 ₀ 5 3 1 ₀ OPERATION CODE WORD SELECT
			4 2 N F 0 1 0 0
3	64 (37 used)	STATUS OPERATIONS	1 ₃ 1 ₄ 1 ₃ 1 ₂ 1 ₁ 1 ₀ F = 00 F = 01
		SET BIT N INTERROGATE N	F = 10 F = 11 } (N = 0000)
		RESET N CLEAR ALL	
4	64 (30 used)	POINTER OPERATIONS	4 2 P F 1 1 0 0
		SET POINTER TO P INTERROGATE P	F = 00 F = 10
		DECREMENT P INCREMENT P	F = 01 F = 11 } P = XXXX
5	64 (20 used)	DATA ENTRY/DISPLAY	4 2 N F 1 0 0 0
		LOAD CONSTANT	F = 01 F = 1X (N = XX01)
		IS → A	F = 1X (N = XX11)
		BCD INPUT TO C REG	F = 10 N = (...0)
		STACK INSTRUCTIONS AVAILABLE	F = 00 3 2
6	32 (11 used)	ROM SELECT, MISC.	3 2 N F 1 0 0 0 0
		SELECT ROM "N"	F = 00
		KEYBOARD ENTRY	F = 10 (N = XX1)
		EXTERNAL ENTRY	(N = XX0)
		SUBROUTINE RETURN	F = 01 (N = XXX)
7	16	RESERVED FOR PROGRAM STORAGE MOS CIRCUIT	3 X X X X 1 0 0 0 0 0
8	8		X X X 1 0 0 0 0 0 0
9	7	AVAILABLE	X X X 0 0 0 0 0 0 0
10	1	NO OPERATION (NOP)	0 0 0 0 0 0 0 0 0 0

The worst case display power (i.e., 13 8's and two minus signs) is about 110 milliwatts. FIG. 29 also shows the ringing inherent with inductive drive.

Instruction Set

Every function performed by the calculator is implemented by a sequence of one or more ten-bit instructions stored in ROM's 0-7 of read-only memory circuit 18. The serial nature of the MOS calculator circuits allows the instruction bits to be decoded from LSB to MSB (right to left) serially. If the first bit is a one, the

There are two type 1 instructions, jump subroutine and conditional branch. They are decoded only by control and timing circuit 16. No word select is generated and all registers in arithmetic and register circuit 20 merely recirculate. The object of the jump subroutine instruction is to move to a new address in the ROM and to save the existing address (plus one) as a return address. The last instruction in a subroutine must be a RETURN to continue the program where it was left previously.

As discussed above, control and timing circuit 16 contains a 20 eight-bit shift register 58-62 which holds

the current eight-bit ROM address and also has eight bits of storage for one return address (see FIG. 4). During bit times $b_{47}-b_{54}$ the current ROM address flows through the adder 64 and is incremented by one. Normally, this address is updated each word time. However, if the first two bits of the instruction, which arrive at bit times $b_{45}-b_{46}$ are 10, the incremented current address is routed to the return address portion 60 of the 20 eight-bit shift register and the remaining eight bits of the instruction, which are the subroutine address, are inserted into the address portion 58. These data paths with the JSB control line are shown in FIG. 4. In this way the return address has been saved and the jump address is ready to be transmitted to the ROM at bit times $b_{19}-b_{26}$ of the next word time.

The most frequently used instruction is the conditional branch, which based upon data or system status implements the decision-making capability of the calculator. In the calculator system described here this instruction also functions as an unconditional branch.

The format of the branch instruction, as shown in the instruction table above, is two ones followed by an eight-bit branch address. The instruction is received at bit times $b_{45}-b_{54}$. The last eight bits of the instruction are stored in the address buffer register 68 (see FIG. 4). During the next word time the carry flip-flop 66 is checked at bit time b_{19} . If the carry flip-flop was set during the previous word time, the current ROM address is transmitted to ROM's 0-7. If the carry flip-flop was not set, the branch address is read from the address buffer register 68 onto the I_n buss 32 and loaded into the ROM address register 74 (see FIG. 6). Thus, the instruction is a BRANCH IF NO CARRY. There are three ways the carry flip-flop 66 can be set: (1) by a carry generated in the arithmetic and register circuit 20; (2) by a successful interrogation of the pointer position; and (3) by a successful interrogation of one of the 12 status bits. An example is given in the table below.

only if the sign is positive (i.e., was a zero), otherwise execution continues at P+2.

Note that during word time N+1 the calculator did nothing more than to select which of two addresses to send next (all registers merely recirculate). To perform a branch actually takes two word cycles to execute, one to ask a question and set the carry flip-flop 66 if the answer is YES, and the other to test if the CARRY flip-flop was set and transmit the proper address. In many cases the asking of the question is an arithmetic operation (i.e., $A+B \rightarrow A$) which must be performed anyway. Then the branch takes only one extra instruction.

Contrary to most instruction sets, this set has no unconditional branch instruction. However, since an ordinary "jump" is one of the most used instructions, the conditional branch is also used as an unconditional branch or jump by insuring that the carry flip-flop 66 is reset when an unconditional branch is desired. This is the reason the sense of the conditional branch is BRANCH ON NO CARRY. The carry flip-flop 66 is reset during execution of every instruction except arithmetic (type 2) and interrogation of pointer or status (types 3 and 4). Since only arithmetic and interrogation instructions can set the carry flip-flop 66, the constraint is not severe. The jump subroutine instruction can also be used as an unconditional branch if the previous return address does not have to be saved. In summary, conditional branch can be used as an unconditional branch provided the state of the carry flip-flop 66 is known to be reset (i.e., provided the conditional branch does not follow an arithmetic or an interrogation of pointer or status instruction).

Arithmetic and register (Type 2) instructions apply to the arithmetic and register circuit 20 only. There are 32 arithmetic and register instructions divided into eight classes encoded by the left-hand five bits of the instruction. Each of these instructions can be combined with any of eight word select signals to give a total

Example Conditional Branch Execution				
WORD	ADDRESS RECEIVED AT ROM	INSTRUCTION SENT BY ROM	INSTRUCTION EXECUTED	RESULT
N-1	P	INCREMENT SIGN DIGIT	—	—
N	P+1	CONDITIONAL BRANCH TO ADDRESS Q	INCREMENT SIGN DIGIT	CARRY GENERATED IF "A" REG. NEGATIVE
N+1	P+2	CONTENTS OF P+2	CONDITIONAL BRANCH	SEND P+2
	or	or		
	Q	CONTENTS OF Q		SEND Q

A typical test condition is to determine the sign of a number. Suppose at address P in the program a branch to location Q is desired if the sign of A is positive, while program execution is to continue if the sign is negative. In the example given in the table above, the instruction "increment the A register, word select of sign digit only" is given at location P. During word time N-1 the instruction is received by arithmetic and register circuit 20 and is executed at word time N (the same word time when the CONDITIONAL BRANCH instruction is received by control and timing circuit 16). If the sign of A is negative, there will be a nine in the sign digit. Incrementing this position will generate a carry and set the carry flip-flop 66 in control and timing circuit 16. Since the instruction is a branch if no carry is generated, the program execution will jump to location Q

capability of 256 instructions. The 32 arithmetic and register instructions are listed in the table below.

TABLE OF TYPE TWO INSTRUCTIONS (in order of binary code)			
CODE	INST	CODE	INST
0 0000	O-B	1 0000	A-B
0 0001	O \rightarrow B	1 0001	B \leftrightarrow C
0 0010	A-C	1 0010	SHIFT C RIGHT
0 0011	C-1	1 0011	A-1
0 0100	B \rightarrow C	1 0100	SHIFT B RIGHT
0 0101	O-C \rightarrow C	1 0101	C+C \rightarrow C
0 0110	O \rightarrow C	1 0110	SHIFT A RIGHT

-continued

TABLE OF TYPE TWO INSTRUCTIONS
(in order of binary code)

CODE	INST	CODE	INST
0 0111	$O-C-1 \rightarrow C$	1 0111	$O \rightarrow A$
0 1000	SHIFT A LEFT	1 1000	$A-B \rightarrow A$
0 1001	$A \rightarrow B$	1 1001	$\leftrightarrow B$ A
0 1010	$A-C \rightarrow C$	1 1010	$A-C \rightarrow A$
0 1011	$C-1 \rightarrow C$	1 1011	$A-1 \rightarrow A$
0 1100	$C \rightarrow A$	1 1100	$A+B \rightarrow A$
0 1101	$O-C$	1 1101	$A \leftrightarrow C$
0 1110	$A+C \rightarrow C$	1 1110	$A+C \rightarrow A$
0 1111	$C+1 \rightarrow C$	1 1111	$A+1 \rightarrow A$

KEY: A,B,C, are registers; \rightarrow means goes into; \leftrightarrow means interchange

The eight classes of arithmetic and register instructions are:

1. Clear (3);
2. Transfer/Exchange (6);
3. Add/Subtract (7);
4. Compare (6);
5. Complement (2);
6. Increment (2);
7. Decrement (2); and
8. Shift (4).

There are three clear instructions. These instructions are $O \rightarrow A$, $O \rightarrow B$, and $O \rightarrow C$. They are implemented by simply disabling all the gates entering the designated register. Since these instructions can be combined with any of the eight word select options, it is possible to clear a portion of a register or a single digit.

There are six transfer/exchange instructions. These instructions are $A \rightarrow B$, $B \rightarrow C$, $C \rightarrow A$, $A \leftrightarrow B$, $B \leftrightarrow C$, and $C \leftrightarrow A$. This variety permits data in registers A, B, and C to be manipulated in many ways. Again, the power of the instruction must be viewed in conjunction with the word select option. Single digits can be exchanged or transferred.

There are seven add/subtract instructions which use the adder circuitry 84. They are $A \pm C \rightarrow C$, $A \pm B \rightarrow A$, $A \pm C \rightarrow A$, and $C+C \rightarrow C$. The last instruction can be used to divide by five. This is accomplished by first adding the number to itself via $C+C \rightarrow C$, multiplying by two, then shifting right one digit, and dividing by 10. The result is a divide by five. This is used in the square root routine.

There are six compare instructions. These instructions are always followed by a conditional branch. They are used to check the value of a register or a single digit in a register and still not modify or transfer the contents. These instructions may easily be found in the type two instruction table above since there is no transfer arrow present. They are:

1. 0-B (Compare B to zero);
2. A-C (Compare A and C);
3. C-1 (Compare C to one);
4. 0-C (Compare C to zero);
5. A-B (Compare A and B); and
6. A-1 (Compare A to one).

If, for example, it is desired to branch if B is zero (or any digit or group of digits is zero as determined by WS), the 0-B instruction is followed by a conditional branch. If B was zero, no carry (or borrow) would be generated and the branch would occur. The instruction can be read: IF U V THEN BRANCH. Again it is easy to compare single digits or a portion of a register by appropriate word select options.

There are two complement instructions. The number representation system in the calculator is sign and magnitude notation for the mantissa, and tens complement notation in the exponent field. Before numbers can be subtracted, the subtrahend must be tens-complemented (i.e., $0-C \rightarrow C$). Other algorithms require the nines complement (i.e., $0-C-1 \rightarrow C$).

There are four increment/decrement instructions (two of each). They are $A \pm 1 \rightarrow A$ and $C \pm 1 \rightarrow C$.

There are four shift instructions. All three registers A, B, and C can be shifted right, while only A has a shift left capability. The arithmetic and register instructions set is summarized by class in the table below.

TABLE OF TYPE TWO INSTRUCTIONS
(divided by class)

Class	Instruction	Code
1) Clear	$O \rightarrow A$	10111
	$O \rightarrow B$	00001
	$O \rightarrow C$	00110
2) Transfer/ Exchange	$A \rightarrow B$	01001
	$B \rightarrow C$	00100
	$C \rightarrow A$	01100
	$A \leftrightarrow B$	11001
	$B \leftrightarrow C$	10001
	$C \leftrightarrow A$	11101
3) Add/ Subtract	$A+C \rightarrow C$	01110
	$A-C \rightarrow C$	01010
	$A+B \rightarrow A$	11100
	$A-B \rightarrow A$	11000
	$A+C \rightarrow A$	11110
	$A-C \rightarrow A$	11010
	$C+C \rightarrow C$	10101
4) Compare	$O-B$	00000
	$O-C$	01101
	$A-C$	00010
	$A-B$	10000
	$A-1$	10011
	$C-1$	00011
5) Complement	$O-C \rightarrow C$	00101
	$O-C-1 \rightarrow C$	00111
6) Increment	$A+1 \rightarrow A$	11111
	$C+1 \rightarrow C$	01111
7) Decrement	$A-1 \rightarrow A$	11011
	$C-1 \rightarrow C$	01011
8) Shift	Sh A Right	10110
	Sh B Right	10100
	Sh C Right	10010
	Sh A Left	01000

The 20 eight-bit register 58-62 in control and timing circuit 16 contains 12 status bits or flags used to remember conditions of an algorithm or some past event (e.g., the decimal point key has already been depressed). These flags can be individually set, reset, or interrogated or all bits can be cleared (reset simultaneously). The format for the status operation (type 3) instructions given in the instruction types table above is repeated below

Bit No.	I ₉ I ₈ I ₇ I ₆	I ₅ I ₄	I ₃	I ₂ I ₁ I ₀	
FIELD	N	F	0	1 0 0	
	F	INSTRUCTION			
	0 0	SET FLAG N			
	0 1	INTERROGATE FLAG N			
	1 0	RESET FLAG N			
	1 1	CLEAR ALL FLAGS (N=0000)			

If status bit N is one when the instruction "interrogate N" is executed, the CARRY flip-flop 66 in control and timing circuit 16 will be set. The status bit will remain set. Interrogate is always followed by a conditional branch instruction. The form of the interrogation is: "If status bit N=0, then branch", or "If status bit N ≠ 1, then branch." The reason for this negative orientation is that all branches occur if the test is false (i.e., CARRY flip-flop=0), a result derived from using the conditional and unconditional branches as the same instruction.

Status bit 0 is set when a key is depressed. If cleared it will be set every word time as long as the key is down.

A four-bit counter 44 in control and timing circuit 16 acts as a pointer or marker to allow arithmetic instructions to operate on a portion of a register. Instructions are available to set and interrogate the pointer at one of

14 locations or to increment or decrement the present position. The pointer instruction decoding is given in the table below.

BIF NO.	9 8 7 6	5 4	3	2 1 0	
FIELD	P	F	I	1 0 0	
	F	INSTRUCTION			
	00	Set pointer to P			
	10	Interrogate if pointer at P			
	01	Decrement pointer			
	11	Increment pointer			
		} P = XXXX i.e. don't care			

As with the status interrogate instruction, the CARRY flip-flop 66 is set if the pointer is at P when the "pointer at P?" instruction is executed (as with status interrogation, the actual question is in the negative form: "IF P ≠ N, THEN BRANCH" or "IF P = OTHER THAN N, THEN BRANCH"). This instruction would be followed by a conditional branch. In a math routine the pointer allows progressive operation on a larger and larger portion of a word. After each iteration (cycle) through a loop, the pointer is decremented (or incremented) and then tested for completion to force another iteration or a jump out of the loop.

The data entry and display (type 5) instructions are used to enter data into arithmetic and register circuit 20, manipulate the stack and memory registers, and blank the display (16 instructions in this set are not recognized by any of the existing circuits, and are therefore available for other external circuits that might be employed with other embodiments of the calculator). The table below contains a detailed decoding of the data entry and display (type 5) instructions.

TABLE OF TYPE FIVE INSTRUCTION DECODING

(X = don't care, which in this context means the instruction does not depend on this bit; either a 1 or a 0 here will cause the same execution.)

I ₉ I ₈	I ₇ I ₆	I ₅	I ₄	I ₃ I ₂ I ₁ I ₀	INSTRUCTION
0000	→ 1111	0	0		16 Available instructions
				N	
10	0000	→ 1001	0	1	Enters 4 bit code N into C Register at pointer position (LOAD CONSTANT)
	0 0 0	0 1	X		Display Toggle
	0 0 1	0 1	X		Exchange Memory, C → M → C
	0 1 0	0 1	X		Up Stack, C → C → D → E → F
8	0 1 1	0 1	X		Down Stack, F → F → E → D → A
	1 0 0	0 1	X		Display OFF
	1 0 1	0 1	X		Recall Memory, M → M → C
	1 1 0	0 1	X		Rotate Down, C → F → E → D → C
	1 1 1	0 1	X		Clear all registers O → A,B,C,D,E,F,M
1	X X 0	1 1	X		I _n → A register (56 bits)

instruction, a third possibility may be used that is less efficient in states but does not depend on program locations. A transfer to L3 is made, then a ROM select, and then an additional transfer from L4 to the final desired location. With this method, L3 and L4 are overhead states.

Bits $I_6I_5 = 01$ designate a subroutine return (RET). There are eight bits of storage in the 20 eight-bit shift register 58-62 of control and timing circuit 16 for retaining the return address when Jump Subroutine is executed. This address has already been incremented so execution of RET is simply a matter of outputting the address on I_a line 32 at bit times $b_{19}-b_{26}$ and also inserting it into the ROM address portion 58 of the shift register. It is also still retained in the return address portion 60.

A key code is entered into control and timing circuit 16 by depressing a key on the keyboard. A key depression is detected by a positive interrogation of status bit 0. During a computation the keyboard is locked out because this status bit would ordinarily not be interrogated until return to the display loop. The actual key depression saves the state of the system counter (which is also the key code) in the key code buffer 56 (see FIG. 4) and also sets status bit 0. Execution of the KEYBOARD ENTRY instruction routes the key code (6 bits) in the key code buffer 56 onto I_a line 32 and into ROM address register 58 at bit times $b_{19}-b_{26}$. The most significant two bits b_{25} and b_{26} are set to zero so that a keyboard entry always jumps to one of the first 64 states.

The data storage instructions given at the end of the TABLE OF TYPE SIX INSTRUCTION DECODING are used by auxiliary data storage circuit 25, which contains 10 56 bit shift registers. The first of these instructions alerts auxiliary data storage circuit 25 to listen to BCD line 35 for an address transmitted from the C register of arithmetic and register circuit 20. When an address is transmitted over BCD line 35, the selected shift register in auxiliary data storage circuit 25 is enabled. The other two of these instructions allow the selected register in auxiliary data storage circuit 25 to receive data from or send data to the C register of arithmetic and register circuit 20 over BCD line 35.

Thus, an address type instruction is normally followed by a SEND DATA (i.e., BCD \rightarrow C Register) or a RECEIVE DATA (i.e., C \rightarrow BCD) instruction. More than one data transfer can take place with the same register without additional addressing instructions.

Two algorithms used in the calculator will now be discussed to further illustrate the instruction set. The first of these algorithms is a display wait loop, used after a key has been processed and while waiting for another key to be actuated. The second of these algorithms is a floating point multiply operation.

A flow diagram of the display wait loop is shown in FIG. 31. This loop is entered after a keystroke has been processed, register A has been properly loaded with the number to be displayed, and register B contains the display "mask" as discussed above. Two flags or status bits are required. Status bit 0 (S0) is hardwired in control and timing circuit 16 to automatically set whenever a key is down. Status bit 8 (S8) is used in this program to denote the fact that the key which is presently down has already been processed (since a routine may be finished before the key is released). In states D1S1 and D1S2 these two status bits are initialized. Then a loop is used as a time delay (about 14.4 ms.) to wait out any key bounce. In D1S4 status bit 8 (S8) is checked. The first time through the algorithm it must be 1 since it was set in D1S1 to denote the key has been processed. In state D1S5 the display is turned on (actually it is toggled since it must previously have been off; there is no DISPLAY ON instruction). At this time the answer appears to the user. In D1S6 status bit 0 (S0) is checked to see if a key is down. If not (i.e., $S0=0$), the previous key has been released, and status bit 8 (S8) is reset to 0 (D1S7). The machine is now ready to accept a new key since the previous key has been processed and released. The algorithm cycles through D1S6 and D1S7 waiting for a new key. This is the basic wait cycle of the calculator. If $S0=1$ in D1S6, the key which is down may be the old key (i.e., the one just processed) or a new key. This can be determined upon return to D1S4 where status bit 8 (S8) is checked. If a new key is down ($S8=0$), execution jumps to D1S8, the display is blanked, and a jump out is made to service the key. A listing of the algorithm is given in the table below.

LABEL	OPERATION	COMMENT
D1S1:	1 \rightarrow S8	Set Status 8
D1S2:	0 \rightarrow S0	Reset Status 0
D1S3:	P-1 \rightarrow P IF P NO. 12 THEN GO TO D1S3 DISPLAY OFF	Decrement pointer, 48 word loop (3 \times 16) to wait out key bounce
D1S4:	IF S8 NO. 1 THEN GO TO D1S8:	If key not processed, leave routine
D1S5:	DISPLAY TOGGLE	Turn on display
D1S6:	IF S0 NO. 1 THEN GO TO D1S7: GO TO D1S2:	If key up, reset S8 and wait Key down. Check if same key
D1S7:	0 \rightarrow S8 GO TO D1S6:	Indicate key not processed Back to wait for key
D1S8:		Blank display
D1S9:	KEYS \rightarrow ROM ADDRESS \downarrow	Jump to start of program to process key that was down.
	CONTINUE	

The floating point multiply algorithm multiplies x times y , where register C contains x in scientific notation and register D contains y (note that in the calculator register C corresponds to the user's X register and register D to the user's Y register). When the multiply key is depressed, the wait loop algorithm will jump to a ROM address corresponding to the first step of the multiply algorithm because of the way the instruction

-continued

Register D	scientific form of y
------------	------------------------

The algorithm for executing floating point multiply is given in the table below. The letters in parentheses indicate word select options as follows:

P pointer position	M mantissa field without sign
WP Up to pointer position	MS mantissa with sign
X Exponent field	W entire word
XS Exponent sign	S mantissa sign only

TABLE OF FLOATING POINT MULTIPLY ALGORITHM

LABEL	OPERATION	COMMENT
MPY1:	STACK → A	Transfer y to A. Drop stack
MPY2:	A+C → C(X)	Add exponents to form exponent of answer
	A+C → C(S)	Add signs to form sign 1
	IF NO CARRY GO TO MPY3	of answer.
	O → C(S)	Correct sign if both negative
MPY3:	O → B(W)	Clear B, then transfer
	A → B(M)	mantissa of y . B(X) = 0.
	O → A(W)	Prepare A to accumulate product
	2 → P	Set pointer to LSD (Least Significant
MPY4	P+1 → P	Digit) Multiplier (Minus 1) Increment to next digit.
MPY5	A+B → A(W)	Add multiplier mantissa to partial
	C-1 → C(P)	product C(P) times. When C(P)=0,
	IF NO CARRY GO TO MPY5	stop and go to next digit
	SHIFT RIGHT A(W)	Shift partial product right.
	IF P NO. 12	Check if multiply is complete
	THEN GO TO MPY4	i.e. is pointer at MSD.
	IF A(P) > 1	Check if MSD = 0. If so must
	THEN GO TO MPY6	shift left and correct exp.
	SHIFT LEFT A(M)	Multiply by 10 and decrement exponent
MPY6	C-1 → C(X)	Always do this to correct for factor
	C+1 → C(X)	of 10 too small
	A → B(XS)	Duplicate extra product digits
	A+B → A(XS)	add 11th digits
	IF NO CARRY GO TO MPY7	If sum less than 10, then done
	A+1 → A(M)	If sum more than 10, add 1
	IF NO CARRY GO TO MPY7	If answer was not all 9's, then done
	A+1 → A(P)	If answer was all 9's add 1
	C+1 → C(X)	and increment exponent
MPY7	A EXCHANGE C(M)	Get answer mantissa into C
	GO TO MASK 1	Go to routine to position the answer in A and make the proper mask in B. Then to the DISPLAY program.

KEYS → ROM ADDRESS (state D1S9 in FIG. 31) is executed. The key code actually becomes the next ROM address. At this time the contents of registers A-D are indicated by the following:

Register A	floating point form of x
Register B	display mask for x
Register C	scientific form of x

Referring now to FIGS. 1, 2, and 32, a calculator according to the present invention includes a Last-X function which automatically stores the currently displayed number (for example, the last entered from keyboard input unit 12 or the result of the last function performed by the calculator) in a Last-X shift register of auxiliary data storage circuit 25 whenever the next function to be performed by the calculator would destroy the currently displayed number. That stored number may then be immediately recalled and displayed by

simply pressing a prefix key 110 and a Last-X key 12 of the keyboard input unit.

In order to perform this Last-X function, a Last-X subroutine is stored in ROM's 3 and 6, as shown in the detailed listing given below for those ROM's. In ROM 3 this subroutine begins on line 4 and ends on line 91, and in ROM 6 begins on line 99 and then jumps to line 165 and continues through line 187 where the subroutine terminates and the recalled number is then displayed. ROM's 3 and 6 are connected by IS instruction line 28 to auxiliary data storage circuit 25 where the Last-X function to be saved is stored. The latter circuit is connected to Start line 40 to synchronize operation of this circuit with the rest of the calculator and is also connected to arithmetic and register circuit 20 by BCD line 35. Referring to FIG. 32, the Last-X subroutine determines whether the currently displayed number would be destroyed by the next function to be performed by the calculator. The number is automatically stored in the Last-X register of auxiliary data storage circuit 25 if the key code of the next key actuated (i.e. the state of the system counter as described above with reference to FIG. 5) corresponds to any key except SCI/FIX, $x > y$, R↓, STO, RCL, ENTER, CHS, EEX, CLX and any numeric key or alternate function associated a numeric key.

The Last-X function is useful for correcting errors, such as pressing the wrong arithmetic operator key or entering the wrong number. For example, suppose one were performing a long calculation where the number 3 must be subtracted from the number 12, but instead of pressing the subtraction key, the division key is pressed and as a result the number 4 appears in the display. This error can be corrected by pressing the prefix key 110 and the Last-X key 112 to recall the number 3; by pressing the multiplication key to reverse the division and cause the number 12 to appear in the display; by again pressing the prefix key 110 and the Last-X key 112, to again recall the number 3 to the display; and, finally, by pressing the subtraction key to accomplish the operation originally intended. The convenience afforded by the Last-X function will be appreciated even more if instead of a single number like 3, the number destroyed by pressing the wrong function key were, for instance, 3,56789. The Last-X function is also useful for calculations involving the same number more than once. For example, sine N is multiplied by cosine N, where N equals 3.15672, by consecutively entering N, pressing the sine key, pressing the prefix key 110 and the Last-X key 112, pressing the cosine key, and pressing the multiplication key to obtain the final result. While the value of N was used twice in this calculation, it was entered into the calculator only once.

This invention also provides built-in conversion constants, accurate to ten digits, for conversion of a number to and from the following metric and U.S. systems of units: inches and centimeters; gallons and liters; and pounds and kilograms. These constants are: 1 inch = 2.54000000 centimeters; 1 pound = 0.453592370 kilograms; and 1 gallon = 3.785411784 liters. With reference to FIGS. 1, 2, and 33, 12 inches are converted to centimeters by consecutively entering the number 12, pressing the prefix key 110, pressing the centimeter/inches key 114 to obtain and display the conversion factor 2.540000000, and pressing the multiplication function key to obtain and display the result 30.48. Other conversion operations are similarly performed.

These conversions are implemented by storing each conversion constant directly in ROM 6, as part of a conversion subroutine. When the appropriate key is pressed, the instructions of this conversion subroutine load the constant into a particular register for appropriate combination with the entered number. Each conversion subroutine is given in detail below on lines 129-163 of the listing for ROM 6.

A similar feature of the present invention permits conversion of numerical quantities expressed in DMS to decimal notation and conversely. With reference to FIGS. 1, 2, and 34, a number expressed in DMS is converted to decimal notation by consecutively pressing the prefix key 110, pressing the DEG key 116 to set the calculator in the degree mode, entering the digits representing the number one by one as if they were a homogeneous number, pressing the prefix key 110 again, and pressing the DMS key 118 to compute and display the decimal degrees. The converse operation is accomplished by pressing the prefix key 110, pressing the DEG key 116, entering the decimal argument, pressing the prefix key 110 again, and pressing the DMS key 122 to compute and display the final result in DMS. The DMS value is displayed in fixed point notation with four digits to the right of the decimal point regardless of what display format the operator may have otherwise specified. This is accomplished by means of a branch which avoids instructions that check the format setting and directs special entry of the DMS value downstream of the display program. Of the four digits shown to the right of the decimal point, the first two represent minutes and the last two represent seconds.

The implementation of the DMS conversion is accomplished by means of a conversion subroutine stored in ROM 0. The instructions relating to this conversion subroutine are given below on lines 1-19 and 80-96 of the listing for ROM 0.

A calculator according to the preferred embodiment of the present invention also calculates factorials and easily solves combination and permutation problems. Factorials can be calculated for positive integers from 0 to 69. For example, the factorial of the number 5 (i.e., 5!) can be calculated as shown in FIGS. 1, 2, and 37 by consecutively entering the number 5 into the calculator, pressing the prefix key 110, and pressing the factorial (n!) key 124 to obtain and display the result 120. This feature is implemented by a subroutine given below on lines 188-201 and 203-243 of the listing for ROM 6.

In the clock mode of the present invention, the calculator operates as a clock or a stopwatch which stores and displays split times. Referring to FIGS. 1, 2, 35 and 36, the clock mode operates as follows: a time of day is entered into the calculator display where the two digits to the left of the decimal point represent hours, the two digits immediately to the right of the decimal point represent minutes, the next two digits represent seconds, and the last two digits represent hundredths of a second. The clock mode is initiated by pressing Recall key (RCL) 118 followed by Enter key 116. Enter key 116 will always start the clock; Change Sign key (CHS) will toggle the clock and make it start or stop (whichever it is not doing when this key is pressed); Enter Exponent key (EEX) will blank or unblank the hundredths of a second portion of the display (whichever is not being done when this key is pressed), although the clock will continue running. The clear X key (CLX)

clears the clock to zero, and the summation key ($\Sigma+$) always stops the clock.

Split times are stored by pressing a digit key while the clock is running, which stores the time at which the digit key is pressed in a storage register of the same number as the digit key pressed. If the clock is not running, pressing a digit key will recall the constant (e.g. previously stored split) in the register of the same number as the digit key pressed.

There are many applications for the clock mode of the present invention. For use as a stopwatch the clock is started when a race begins. When the first runner crosses the finish line, the "one" digit key is pressed and his time of arrival is stored in register one, without interrupting clock operation. When the second runner crosses the finish line, the "two" digit key is pressed and his time is stored in register two, and so forth up to ten finishers. At the end of the race, pressing the summation key ($\Sigma+$) stops the clock. Pressing the digit keys corresponding to the respective arrivals then recalls the elapsed time for each runner during the race.

The clock mode is based on the characteristic that the same number of instructions are executed by the calculator every one-hundredth of a second as controlled by the 800 KHz oscillator 100 shown in FIG. 17. Referring to FIG. 36, loops 1, 2, 3, 4 and 5 each never contain more than 35 instructions which is equal to the time taken to increment the hundredths-of-a-second register. While 35 instructions are required to adhere to the clock standard, many fewer than 35 instructions are required to execute any loop of the program. Therefore, loop execution must include additional instructions equivalent to the difference between 35 instructions and the number of instructions required to execute the loop. However, the amount of delay, i.e. the number of no-op code or other instructions to be added that are unrelated to operation of the clock, is "loop-dependent," since the number of instructions required to execute each loop is different. For example, during execution of loop 1, which is executed when there is no carry in the hundredths-of-a-second register, the status of the keys associated with clock control on

the keyboard is determined every one hundredth of a second until there is such a carry. During execution of loop 2, a few of the remainder of the 35 instructions available are used to zero the hundreds-of-a-second register and to add one to the seconds register. Every 59 seconds, a few more of the remainder of the 35 available instructions for execution of loop 3 are used to zero the seconds register and add one to the minutes register; every 59 minutes, some more of the remainder of the 35 available instructions for execution of loop 4 are used to zero the minutes register and increment the hours register; and finally every 12 hours a few more of the remainder of the 35 available instructions for execution of loop 5 are used to reset the hours register to one. Thus, every 12 hours the hundreds-of-a-second register is zeroed 360,000 times, the seconds register is zeroed 3,600 times and the minutes register is zeroed 60 times.

Detailed Listing of Routines and Subroutines of Instructions

A complete listing of all of the routines and subroutines of instructions employed by the calculator and of all of the constants employed by these routines and subroutines is given below. All of these routines, subroutines, and constants are stored in ROM's 0-7, as indicated at the top of the first page associated with each ROM. Each line in each ROM is separately numbered in the first column from the left-hand side of the page. This facilitates reference to different parts of the listing. Each address in ROM's 0-7 is represented in octal form in the second column from the left-hand side of the page. The first digit identifies which ROM, and the next three digits represent a nine-bit address (the L preceding these four digits is merely an address identifier). The instruction or constant stored in each address of ROM's 0-7 is represented in binary form in the third column from the left-hand side of the page. Branching addresses are represented in octal form by four digits in the fourth column from the left-hand side of the page. Explanatory comments are given in the remaining columns.

ROM 0

0	L00000:	. . . 1 . 1 . 1 . 1 . 1	-> L0053	PW01 :	JSB PW02
1	L00001:	11 . . . 1	-> L6002	***** TMS5 :	SELECT ROM 6
2	L00002:	. 1 . . . 1 . . . 1	-> L0112	TMS2 :	JSB FRAC
3	L00003:	11 . . . 1 . 111 . .			A EXCHANGE BCWJ
4	L00004:	11111 . . . 11 . .			A + 1 -> ACWJ
5	L00005:	. 1 . . . 111 . 1 .			A -> BCXJ
6	L00006:	11 . 1111 . 1 .			A - 1 -> ACXJ
7	L00007:	111 . . . 111 . .			A + B -> ACWJ
8	L00010:	1 . 111 . 1 . 1 .			0 -> ACXJ
9	L00011:	111 . . . 1 . . 1	-> L0342		JSB NLOP
10	L00012:	111 . . . 1 . . 1	-> L0342		JSB NLOP
11	L00013:	1 . 111 . 1 . 1 .			0 -> ACXJ
12	L00014:	11 . . . 1 . . 1 . 1	-> L0311		JSB NORM
13	L00015:	. 11 . . . 1 . . 11	-> L0144		GO TO TMS4
14	L00016:	1 1 . 1 . .		DMDTZ4 :	IF S8 # 1
15	L00017:	. 1 . 1 . . . 111	-> L0121		THEN GO TO DMT2
16	L00020:	1 111 . 1	-> L0207	TMS :	JSB MODE
17	L00021:	111 . 1 . 111 .			A EXCHANGE CIWJ
18	L00022:	. 11 . . . 111 .			C -> ACWJ
19	L00023: 1 . 11	-> L0002		GO TO TMS2
20	L00024:	1 . 1 . . . 1	-> L5025	***** PW03 :	SELECT ROM 5
21	L00025:	1 111 . 1	-> L0207	TPL4 :	JSB MODE
22	L00026:	111 . 1 . 111 .			A EXCHANGE CIWJ
23	L00027:	1 1	-> L4030	***** :	SELECT ROM 4
24	L00030:	. . 1 . . 1	-> L1031	***** RET1 :	SELECT ROM 1

```

25 L00031: . . . 11.1.1.1
26 L00032: . . . 11. . . 11 -> L0030
27 L00033: . 1. . . 1. . .
28 L00034: . . 11. . 111.
29 L00035: 1. . 111. . . .
30 L00036: . . . . .
31 L00037: 1. 11111. . .
32 L00040: 111. 1. 111.
33 L00041: 1. . 1111. . 1 -> L0236
34 L00042: 11. . . 11. . 1 -> L0306
35 L00043: 1. 1. . . 1. . 1 -> L0242
36 L00044: 11. . . 11. . 1 -> L0306
37 L00045: 1. 11111111.
38 L00046: 1. 11111. . .
39 L00047: . 11. 11111.
40 L00050: . . 1. 11. 111 -> L0055
41 L00051: 11. 1111111.
42 L00052: . . 1. 11. 1. 1 -> L0055
43 L00053: . . . 1. 1. . 11 -> L0024
44 L00054: . . . 1. . . 1. . . -> L1055
45 L00055: 111. 1. 111.
46 L00056: 1. . . . 1. 1.
47 L00057: 1111. . 1. 11 -> L0362
48 L00059: . . 11111111.
49 L00061: 1111. . 1. . 1 -> L0362
50 L00062: . . . 1. 1. 1.
51 L00063: . . 1. 11. . 11 -> L0054
52 L00064: 1. 1. . 1. 1.
53 L00065: . 11. 1. . 111 -> L0151
54 L00066: . . 111. 1. 11 -> L0072
55 L00067: . . 1. . . 1. . . -> L1070
56 L00070: . 11. . . 111.
57 L00071: . . 1. . . 1. . . -> L1072
58 L00072: 111. 1. 111.
59 L00073: . 11. . . 111.
60 L00074: . 111111. 1.
61 L00075: . 1. . . 11. 11 -> L0106
62 L00076: . 11. 1. 1. 1.
63 L00077: . 1. . . 11. 11 -> L0106
64 L00100: . . 11. . 111.
65 L00101: . . . . .
66 L00102: . 1. 1. 11. . .
67 L00103: 11. . . . 11.
68 L00104: . 111. . 1. 1.
69 L00105: 111. 1. 1111 -> L0353
70 L00106: 1. 1. . 1. 1.
71 L00107: . 111. 1. 111 -> L0165
72 L00110: 111. 1. 111.
73 L00111: . . 111. . . 11 -> L0070
74 L00112: . 11. . . 1. 1.
75 L00113: . . . . . 11.
76 L00114: . 1. 1. 11. . .
77 L00115: 11. 1. . 1. 1.
78 L00116: 1. . 1111. 1.
79 L00117: 11. . 11. . 11 -> L0314
80 L00120: 1111111111 -> L0377
81 L00121: . 1. . 1. 1. . 1 -> L0112
82 L00122: 111. . . 11. 1 -> L0343
83 L00123: . . . . 1. 111.
84 L00124: 11. . 11. . 1.
85 L00125: 11. . 1. 111.
86 L00126: . 1. . . . 111.
87 L00127: 111. . . 1. 1. 1 -> L0345
88 L00130: . 111. . . 1.
89 L00131: 11. . 1. . 1. 1 -> L0311
90 L00132: . . 11. . 111.
91 L00133: . . 11. 11. . .
92 L00134: . 11. . 11. . .
93 L00135: 11. . . . 11.
94 L00136: 1. . 1111. . 1 -> L0236
95 L00137: 1. . . . 11. . 1 -> L0206
96 L00140: . 11111. 111 -> L0175
97 L00141: . 1111. 1. 1.
98 L00142: . 1111. . . 1.
99 L00143: 1. . . . 1111 -> L0203

```

```

TRC1Z1: IF S3 # 1
        THEN GO TO RET1
C -> STACK
0 -> CCWJ
C -> DATA ADDRESS
NO OPERATION
DATA -> C
A EXCHANGE CCWJ
JSB DIV1
JSB EXCH
JSB MUL1
JSB EXCH
0 -> ACSJ
DATA -> C
IF C[CSJ] = 0
    THEN GO TO TRC2
A - 1 -> ACSJ
JSB TRC2
PW02 : GO TO PW03
SQT1 : SELECT ROM 1
TRC2 : A EXCHANGE CCWJ
        IF S8 # 1
            THEN GO TO REG924
0 - C - 1 -> C[CSJ]
JSB REG924
SRTZ3: IF S1 # 1
        THEN GO TO SQT1
        IF S10 # 1
            THEN GO TO TN12
GO TO MAG1Z1
***** TANX : SELECT ROM 1
SN12 : C -> ACWJ
***** MAG1Z1: A EXCHANGE CCWJ
        C -> ACWJ
        C + 1 -> C[CSJ]
        IF NO CARRY GO TO MAG3
        IF C[X] = 0
            THEN GO TO MAG3
0 -> CCWJ
0 -> P
LOAD CONSTANT 5
12 -> P
A + C -> C[X]
IF NO CARRY GO TO MAG4
MAG3 : IF S10 # 1
        THEN GO TO ROM1
        A EXCHANGE CCWJ
        GO TO SN12
FRAC : 0 -> C[X]
        0 -> P
LOAD CONSTANT 5
A - C -> AC[X]
IF AC[X] >= 1
    THEN GO TO FRC1
GO TO ERR2
DNT2 : JSB FRAC
        JSB MLP0
        0 -> BCWJ
        A EXCHANGE BCWJ
        A EXCHANGE BCWJ
        SHIFT LEFT ACWJ
        JSB MLP2
        1 -> S7
        JSB NORM
        0 -> CCWJ
LOAD CONSTANT 3
LOAD CONSTANT 6
12 -> P
JSB DIV1
JSB MOD0
GO TO FST0
RTFG : C + 1 -> C[X]
        C + 1 -> C[P]
        IF NO CARRY GO TO DVML

```

```

100 L00144: . . 11 . 111 .
101 L00145: . . 1 . 11 .
102 L00146: . 1 . . 11 . .
103 L00147: 111 . 1 . 111 .
104 L00150: . . . . . 111 -> L0001
105 L00151: . . 1 . 1 . . . -> L1152
106 L00152: . 111 . . 1 .
107 L00153: . 1 . . . 1 .
108 L00154: . 111 . 1111 -> L0163
109 L00155: . 1 . 1 . 111 .
110 L00156: . 111 . 1111 .
111 L00157: . 1 . 11 . 11 .
112 L00160: . 111 . 1 . 11 -> L0162
113 L00161: . . 11111111 .
114 L00162: . 1 . 1 . 11 . 1 -> L0246
115 L00163: . . . 1 . . 1 .
116 L00164: . . . 1 . 1 . 111 -> L0025
117 L00165: . . 1 . 1 . . . -> L1166
118 L00166: . 1 . . . 1 . 1 .
119 L00167: . 11 . 1 . 1 . 11 -> L0152
120 L00170: . 1 . . . 111 . 1 -> L0207
121 L00171: . . . 1 . . . 1 .
122 L00172: . 1 . 1 . . 1 . 1 .
123 L00173: . . 111 . 1 . 11 -> L0072
124 L00174: 1111 . . 1111 -> L0363
125 L00175: 111 . 1 . 111 .
126 L00176: . 11 . . 1 . . . -> L3177
127 L00177: . 1 . 11 . 1 . 1 .
128 L00200: . 1 . 11 . 1 . 1 .
129 L00201: . 111 . . 1 . .
130 L00202: . 1 . 11 . . 1 . 1 .
131 L00203: . 1 . 1 . . 1 . 1 .
132 L00204: . 1 . . 1111 . 11 -> L0236
133 L00205: . 1 . 1 . . 1 . 11 -> L0242
134 L00206: . 1 . 1 . 1 . 1 .
135 L00207: . 111 . . 1 . .
136 L00210: . 1 . . 1 . 1 .
137 L00211: . 11 . . . 1 .
138 L00212: . 1 . 1 . 1 . 1 .
139 L00213: . 11 . 11111 .
140 L00214: . 1 . . 111 . 11 -> L0216
141 L00215: . 1 . . . . 1 .
142 L00216: . 11111111 .
143 L00217: . 1 . 1 . . 111 -> L0221
144 L00220: . 11 . 1 . 1 .
145 L00221: . . 11 . . 111 .
146 L00222: . 1111 . 1 . 1 .
147 L00223: . . . 1 . 1 . 1 .
148 L00224: 11 . . . . . 11 -> L0300
149 L00225: . 1 . . . 1 . 1 .
150 L00226: 111 . . . 111 -> L0341
151 L00227: . 1111 . 1 .
152 L00230: . 11 . . 1 . 1 .
153 L00231: . 1 . . . . 1 . 11 -> L0202
154 L00232: . 11 . . . 111 -> L0141
155 L00233: . 1 . 1 . 1 . 1 . 11 -> L0252
156 L00234: . 1 . 1 . . 1 . 1 .
157 L00235: . 1 . 1 . . 1 . 11 -> L0242
158 L00236: . 1 . 11 . . 1 .
159 L00237: . . . 11 . . 1 .
160 L00240: . . . . 1 . 111 .
161 L00241: . 1 . 1 . 1 . 111 -> L0245
162 L00242: . 1 . 11 . . 1 .
163 L00243: . . . 11 . . 1 .
164 L00244: . . 1 . 1 . . . -> L1245
165 L00245: . . 1 . 1 . . . -> L1246
166 L00246: . 1 . 11 . . 1 .
167 L00247: . . 11111111 .
168 L00250: . . . 11 . . 1 .
169 L00251: . . 1 . 1 . . 1 .
170 L00252: . . . . 1 . 111 .
171 L00253: 11111111 . 1 .
172 L00254: 11111111 . 1 .
173 L00255: . 1111111 . 1 .
174 L00256: . 1111111 . 1 .

```

```

TMS4 : 0 -> C[W]
        2 -> P
        LOAD CONSTANT 4
        A EXCHANGE C[W]
        GO TO TMS5
***** TN12 : SELECT ROM 1
        TPOL : 1 -> S7
        IF S4 # 1
            THEN GO TO TPL3
        C + C -> C[W]
        A + C -> C[S]
        IF C[W] >= 1
            THEN GO TO TPL2
        TPL2 : JSB SUB1
        TPL3 : 1 -> S1
        GO TO TPL4
***** RON1 : SELECT ROM 1
        DRG1Z1: IF S8 # 1
            THEN GO TO TPOL
        DRG0 : JSB MODE
        1 -> S1
        IF S10 # 1
            THEN GO TO MAC1Z1
        GO TO REGX
        FST0 : A EXCHANGE C[W]
        FST1 : SELECT ROM 3
        GTFD : C - 1 -> C[X]
        C - 1 -> C[X]
        1 -> S7
        DTRF : C - 1 -> C[P]
        DVML : IF S10 # 1
            THEN GO TO DIV1
        GO TO MUL1
        MOD0 : 0 -> S10
        MODE : 1 -> S7
        0 -> S4
        1 -> S6
        M -> C
        IF C[S] = 0
            THEN GO TO MOD2
        1 -> S4
        MOD2 : C + 1 -> C[S]
        IF NO CARRY GO TO MOD3
        0 -> S6
        MOD3 : 0 -> C[W]
        C + 1 -> C[X]
        IF S1 # 1
            THEN GO TO DEGR
        IF S4 # 1
            THEN GO TO RET0
        0 -> S7
        IF S6 # 1
            THEN GO TO DTRF
        GO TO RTFG
        ADD3Z1: GO TO ADD3
        MLDV : IF S10 # 1
            THEN GO TO MUL1
        DIV1 : 1 -> S11
        DIV0 : 0 -> S1
        0 -> B[W]
        GO TO DIVX
        MUL1 : 1 -> S11
        MUL0 : 0 -> S1
        ***** MULX : SELECT ROM 1
        ***** DIVX : SELECT ROM 1
        SUB1 : 1 -> S11
        SUB0 : 0 - C - 1 -> C[S]
        ADD0ZK: 0 -> S1
        0 -> S2
        ADD3 : 0 -> B[W]
        A + 1 -> A[X]
        A + 1 -> A[X]
        C + 1 -> C[X]
        C + 1 -> C[X]

```

```

175 L00257: ...1.1.1.1.
176 L00260: 1.11.1.1.11 -> L0262
177 L00261: 111.1.111.
178 L00262: 111.1.11.
179 L00263: .11.1.11.
180 L00264: 1.11.11.11 -> L0266
181 L00265: 111.1.111.
182 L00266: 1.1.1.11.
183 L00267: .1.1.1.1.
184 L00270: 1.1111.11 -> L0276
185 L00271: 1.1.1.111.
186 L00272: 11111.1.1
187 L00273: .....111.
188 L00274: 1.11111.11 -> L0276
189 L00275: 1.11.11111 -> L0267
190 L00276: .1.1.1.1.1. -> L1277
191 L00277: 1111111111 -> L0377
192 L00300: .11.1.1.1.
193 L00301: 111.1.111 -> L0341
194 L00302: .1111.1.1.
195 L00303: .1.1.1.1.1.
196 L00304: 1.1.1.1.11 -> L0282
197 L00305: .1111111111 -> L0177
198 L00306: .11.1.1.1.1.
199 L00307: .1.1.1.1.1.
200 L00310: .....11.1.1.
201 L00311: 1.11.1.1.1.
202 L00312: .1.1.1.1.1. -> L1313
203 L00313: .1.1.1.1.1. -> L1314
204 L00314: 1.1.1.1.11.
205 L00315: 1.1.1.111.
206 L00316: 11111.1.1.
207 L00317: 11.11.111 -> L0315
208 L00320: 1.111.111.
209 L00321: .11.1.11.1.
210 L00322: .....11.1.1.
211 L00323: 1.11.1.1.1.
212 L00324: 11.11.1.11 -> L0330
213 L00325: 1.1.1.111.
214 L00326: .111.1.1.1.
215 L00327: 1.111.1.11 -> L0234
216 L00330: .1.1.1.1.1. -> L1331
217 L00331: 11.1.1.11.
218 L00332: 11.1.1.1111 -> L0323
219 L00333: 1.11.1.1.1.
220 L00334: 11111.1111 -> L0371
221 L00335: 1.11.1.1.1.
222 L00336: .111.1.1.1.
223 L00337: 11.1.1.1111 -> L0313
224 L00340: 1.111.1.1.
225 L00341: .....11.1.1.
226 L00342: .....1.141.
227 L00343: 11.11.1.1.
228 L00344: 1.1.1.111.
229 L00345: 1.1.1.11.1.
230 L00346: 111.1.111.
231 L00347: .....111.1.
232 L00350: .1.1.1.11.
233 L00351: 111.11.111 -> L0346
234 L00352: .....11.1.1.
235 L00353: .1.11.111.
236 L00354: .1111.1.1.
237 L00355: 1.1.1.1.1.
238 L00356: .1.11.11111 -> L0057
239 L00357: .1.1.1.111 -> L0151
240 L00359: .1.1.1.1.1.
241 L00361: .111111.11 -> L0176
242 L00362: 111.1.111.
243 L00363: .1.11.111.
244 L00364: .1.11.1.1.
245 L00365: .1.11.111.1.
246 L00366: .1.11.111.
247 L00367: 1.1111.1.1.
248 L00373: .11111.111 -> L0175

```

```

IF A >= C[X]
THEN GO TO ADD4
A EXCHANGE C[W]
ADD4 : A EXCHANGE C[M]
IF C[M] = 0
THEN GO TO ADD5
A EXCHANGE C[W]
B EXCHANGE C[M]
ADD5 : B EXCHANGE C[M]
ADD6 : IF A >= C[X]
THEN GO TO ADD7
ADD8 : SHIFT RIGHT B[W]
A + 1 -> A[C]
IF B[W] = 0
THEN GO TO ADD7
GO TO ADD6
***** ADD7 : SELECT ROM 1
ERR221: GO TO ERR2
DEGR : IF S6 # 1
THEN GO TO RET0
0 -> S7
IF S4 # 1
THEN GO TO DTFR
GO TO STFD
EXCH : STACK -> A
C -> STACK
RETURN
HORM : 1 -> S11
***** SELECT ROM 1
***** PII2 : SELECT ROM 1
FRC1 : B EXCHANGE C[M]
FRC2 : SHIFT RIGHT B[W]
A + 1 -> A[C]
IF NO CARRY GO TO FRC2
0 -> A[W]
6 -> P
RETURN
PII4 : IF S11 # 1
THEN GO TO PIRT
C + C -> C[W]
1 -> S7
GO TO MLDV
***** PIRT : SELECT ROM 1
PII4Z1: 12 -> P
GO TO PII4
RETN21: IF S11 # 1
THEN GO TO RTRN
1 -> S11
IF S7 # 1
THEN GO TO PII2
0 -> S11
RET0 : RETURN
MLOP : 0 -> B[W]
MLP0 : A EXCHANGE B[W]
SHIFT RIGHT B[W]
MLP2 : 10 -> P
MLP3 : A + B -> A[W]
P - 1 -> P
IF P # 4
THEN GO TO MLP3
RETURN
MAG4 : 0 -> C[W]
C + 1 -> C[P]
IF S10 # 1
THEN GO TO TANX
GO TO TH12
REG9 : IF S1 # 1
THEN GO TO FST1
REG9Z4: A EXCHANGE C[W]
REGX : 0 -> C[W]
C - 1 -> C[P]
C -> DATA ADDRESS
0 -> C[W]
C -> DATA
GO TO FST0

```

249	L02371:	11111111		RT2N :	IF S3 # 1
250	L00372:	11111111	-> L0360		THEN GO TO REG9
251	L00373:	11111111			IF S10 # 1
252	L00374:	11111111	-> L0376		THEN GO TO RET5
253	L00375:	11111111	-> L0376	*****	RET4 : SELECT ROM 4
254	L00376:	11111111	-> L0377	*****	RET5 : SELECT ROM 5
255	L00377:	11111111	-> L0400	*****	ERR2 : SELECT ROM 2

ROM 1

0	L1000:	11111111			B EXCHANGE C[S]
1	L1001:	11111111	-> L1363		GO TO TAN13
2	L1002:	11111111		TAN15 :	A EXCHANGE BCW]
3	L1003:	11111111	-> L1060		JSB TMM11
4	L1004:	11111111			DATA -> C
5	L1005:	11111111			A EXCHANGE C[W]
6	L1006:	11111111	-> L1060		JSB TMM11
7	L1007:	11111111			DATA -> C
8	L1010:	11111111			A EXCHANGE C[W]
9	L1011:	11111111		TANX :	IF S9 # 1
10	L1012:	11111111	-> L1014		THEN GO TO TAN16
11	L1013:	11111111			A EXCHANGE C[W]
12	L1014:	11111111		TAN16 :	IF S5 # 1
13	L1015:	11111111	-> L1032		THEN GO TO ASN12
14	L1016:	11111111			IF C[S] >= 1
15	L1017:	11111111	-> L1021		THEN GO TO TAN17
16	L1020:	11111111			0 -> S8
17	L1021:	11111111		TAN17 :	0 -> C[S]
18	L1022:	11111111	-> L1246		JSB DIV11
19	L1023:	11111111		ASN11 :	C -> DATA
20	L1024:	11111111	-> L1245		JSB MPY11
21	L1025:	11111111	-> L1230		JSB ADD10
22	L1026:	11111111	-> L1055		JSB SQT11
23	L1027:	11111111			DATA -> C
24	L1030:	11111111	-> L0031	*****	SELECT ROM 0
25	L1031:	11111111		ASN120:	A EXCHANGE C[W]
26	L1032:	11111111	-> L1246	ASN12 :	JSB DIV11
27	L1033:	11111111			IF S10 # 1
28	L1034:	11111111	-> L1332		THEN GO TO RTN12
29	L1035:	11111111		ATN11 :	0 -> ACW]
30	L1036:	11111111			A + 1 -> ACP]
31	L1037:	11111111			A -> BCM]
32	L1040:	11111111			A EXCHANGE C[M]
33	L1041:	11111111		ATN12 :	C - 1 -> CCX]
34	L1042:	11111111			SHIFT RIGHT BCWP]
35	L1043:	11111111			IF C[X] = 0
36	L1044:	11111111	-> L1041		THEN GO TO ATN12
37	L1045:	11111111		ATN13 :	SHIFT RIGHT ACWP]
38	L1046:	11111111			C + 1 -> CCX]
39	L1047:	11111111	-> L1045		IF NO CARRY GO TO ATN13
40	L1050:	11111111			SHIFT RIGHT ACW]
41	L1051:	11111111			SHIFT RIGHT BCW]
42	L1052:	11111111			C -> DATA
43	L1053:	11111111		ATN14 :	B EXCHANGE C[W]
44	L1054:	11111111	-> L1106		GO TO ATN13
45	L1055:	11111111		SQT11 :	B EXCHANGE C[W]
46	L1056:	11111111			4 -> P
47	L1057:	11111111	-> L1336		GO TO SQT14
48	L1060:	11111111		TMM11 :	C -> DATA
49	L1061:	11111111			A EXCHANGE C[W]
50	L1062:	11111111			IF CCP] = 0
51	L1063:	11111111	-> L1065		THEN GO TO TMM12
52	L1064:	11111111			0 - C -> C[W]
53	L1065:	11111111		TMM12 :	C -> ACW]
54	L1066:	11111111			B -> CCX]
55	L1067:	11111111	-> L1313		GO TO ADD15
56	L1070:	11111111	-> L1011	TANX20:	GO TO TANX
57	L1071:	11111111	-> L0072	*****	TPLOZJ: SELECT ROM 0
58	L1072:	11111111		SIN12 :	IF S5 # 1
59	L1073:	11111111	-> L1035		THEN GO TO ATN11
60	L1074:	11111111			0 - C - 1 -> C[S]
61	L1075:	11111111			A EXCHANGE C[S]
62	L1076:	11111111	-> L1023		GO TO ASN11
63	L1077:	11111111		ATN15 :	SHIFT RIGHT BCWP]
64	L1100:	11111111		ATN16 :	A - 1 -> ACS]

```

65 L1101: .111111111 -> L1077
66 L1102: .111111111
67 L1103: 11.11.11
68 L1104: .111.1.1.1
69 L1105: 11.1.1.111
70 L1106: .1.1.1.111
71 L1107: 11.1.1.1.1
72 L1110: .1.1.1.11 -> L1100
73 L1111: 111.1.111
74 L1112: 1.11111.1
75 L1113: 1.1.1.111
76 L1114: 111.11111
77 L1115: 11.1.1.111
78 L1116: .1.1.1.1.1
79 L1117: 1.1111.1
80 L1120: 111111111
81 L1121: 111111111
82 L1122: .1.1.1.111 -> L1053
83 L1123: .11.1.111
84 L1124: .1.1.1.1.1
85 L1125: 1.11.1.11
86 L1126: 1.11.1.1.1 -> L1262
87 L1127: 11.11.1.1
88 L1130: 1.11111.1
89 L1131: .1.1.1.11
90 L1132: 1.1.1.1.1 -> L1244
91 L1133: .11.1.11.1
92 L1134: 1.11.11.1 -> L1233
93 L1135: 1.1.1.11.1
94 L1136: 1.11.11.1 -> L1233
95 L1137: .1.1.1.11
96 L1140: 1.1.1.11.1
97 L1141: 1.1.1.11.1
98 L1142: 1.11.11.1 -> L1233
99 L1143: 1.1.111.1 -> L1216
100 L1144: 1.11.11.1 -> L1233
101 L1145: 11.11.1.1 -> L1314
102 L1146: .1.1.1.11
103 L1147: 1.11.11.1 -> L1233
104 L1150: .1.1.1.11
105 L1151: 11.1.1.11.1 -> L1313
106 L1152: 11.11.1.1 -> L1314
107 L1153: 1.1.1.111
108 L1154: 1.1.1.1.1
109 L1155: .111.1.111 -> L1165
110 L1156: 1.1.1.1.1
111 L1157: .111.1.111 -> L1165
112 L1160: 111.1.111
113 L1161: .11111111
114 L1162: 1.11.1.1.1 -> L1232
115 L1163: 11.11.1.1 -> L1314
116 L1164: 1.1.1.111
117 L1165: .1.1.1.1.1 -> L0166
118 L1166: 11.11.1.1 -> L1314
119 L1167: 1.1.1.111
120 L1170: 1.1.1.111
121 L1171: 1.1.1.1.1.1 -> L1225
122 L1172: 1.1.1.111
123 L1173: 111.1.11.1 -> L1353
124 L1174: 11.11.1.1 -> L1314
125 L1175: 1.1.1.11.1
126 L1176: 1.1.111.1 -> L1234
127 L1177: 1.1.111.1 -> L1216
128 L1200: 1.1.1.11.1
129 L1201: 1.1.111.1.1 -> L1235
130 L1202: .1.1.1.11
131 L1203: 1.1.1.11.1
132 L1204: .11.1.11.1
133 L1205: 1.1.111.1 -> L1234
134 L1206: .1.1.1.11.1
135 L1207: 1.1.111.1 -> L1234
136 L1210: 1.1.111.1 -> L1234
137 L1211: 11.1.1.111
138 L1212: 1.1.1.111
139 L1213: 11.1.1.11
140 L1214: .1.1.11.1

```

```

IF NO CARRY GO TO ATN15
C + 1 -> C[S]
A EXCHANGE B[WP]
A + C -> C[WP]
A EXCHANGE B[WP]
ATN18 : A -> B[WP]
A - C -> A[WP]
IF NO CARRY GO TO ATN16
A EXCHANGE C[WP]
DATA -> C
SHIFT RIGHT C[WP]
A EXCHANGE C[S]
A EXCHANGE B[WP]
SHIFT LEFT A[WP]
C -> DATA
A + 1 -> A[S]
A + 1 -> A[S]
IF NO CARRY GO TO ATN14
0 -> C[WP]
0 -> B[X]
SHIFT RIGHT A[MS]
JSB DIV14
A - 1 -> A[P]
DATA -> C
4 -> P
ATN17 : JSB P0013
6 -> P
JSB PMU11
8 -> P
JSB PMU11
2 -> P
LOAD CONSTANT 8
10 -> P
JSB PMU11
JSB ATCD1
JSB PMU11
JSB ATC1
SHIFT LEFT A[WP]
JSB PMU11
B -> C[WP]
JSB ADD15
TAN12 : JSB ATC1
C + C -> C[WP]
IF S10 # 1
THEN GO TO ROM0
IF S9 # 1
THEN GO TO ROM0
A EXCHANGE C[WP]
0 - C - 1 -> C[S]
JSB ADD11
JSB ATC1
C + C -> C[WP]
SELECT ROM 8
LPI11 : JSB ATC1
C + C -> C[WP]
C + C -> C[WP]
JSB RTH11
C + C -> C[WP]
JSB PRE11
JSB ATC1
10 -> P
JSB P0011
JSB ATCD1
8 -> P
JSB P0012
2 -> P
LOAD CONSTANT 8
6 -> P
JSB P0011
4 -> P
JSB P0011
JSB P0011
A EXCHANGE B[WP]
SHIFT RIGHT C[WP]
13 -> P
LOAD CONSTANT 5

```

141 L1215: 111111.11 -> L1374
 142 L1216: .11.11.11.
 143 L1217: 1.1.11.11.
 144 L1220: .11.11.11.
 145 L1221: .1.1.11.11.
 146 L1222: .1.1.11.11.
 147 L1223: .1.1.11.11.
 148 L1224: 1.1.1.11.11.
 149 L1225: .1.1.1.1.11.
 150 L1226: 11.11.1.1.11 -> L1332
 151 L1227: .1.1.1.1.11.
 152 L1230: 1.111.111.
 153 L1231: 11111.111.
 154 L1232: .1.1.1.1.11. -> L0233
 155 L1233: .1.1.1.1.11. -> L2234
 156 L1234: .1.1.1.1.11.
 157 L1235: 1.1.1.1.11.
 158 L1236: 1.1.1.1.11.
 159 L1237: 1.1.1.1.111 -> L1241
 160 L1240: .11111111.
 161 L1241: 11.1.1.1.11.
 162 L1242: 1.1.1.1.11. -> L1240
 163 L1243: 111.1.1.1.11.
 164 L1244: .1.1.1.1.11. -> L2245
 165 L1245: .1.1.1.1.11. -> L2246
 166 L1246: .1.1.1.1.11.
 167 L1247: .1.1.1.1.11. -> L2250
 168 L1250: .1111.111.
 169 L1251: 11.1.1.1.11.
 170 L1252: 1.1.1.1.11. -> L1250
 171 L1253: 1111.111.
 172 L1254: .1.1.1.1.11.
 173 L1255: .1.1.1.1.11.
 174 L1256: 1.1.1.1.1.1.
 175 L1257: .1.1.1.1.11.
 176 L1260: 1.1.1.1.111 -> L1251
 177 L1261: .1.1.1.1.111 -> L1065
 178 L1262: .1111.111.
 179 L1263: 11.1.1.1.11.
 180 L1264: 1.1.1.1.11. -> L1262
 181 L1265: 111.1.1.11.
 182 L1266: .1.1.1.1.11.
 183 L1267: .1.1.1.1.11.
 184 L1270: .1.1.1.1.11.
 185 L1271: 1.11.1.1111 -> L1263
 186 L1272: .1.11.1.1111 -> L1065
 187 L1273: .1.1.1.1.11.
 188 L1274: 111.1.1.11.
 189 L1275: 11.11.1111 -> L1333
 190 L1276: .1.1.1.1.11. -> L0277
 191 L1277: .1.1.1111.1.
 192 L1300: .1.1111.1.
 193 L1301: 1.111.1.1.1.
 194 L1302: 11.1.1.1111.
 195 L1303: 1.1.111111.
 196 L1304: 11.1.1.1.11 -> L1306
 197 L1305: .1.1.1.1.11. -> L2306
 198 L1306: 1.1.1.1.11.
 199 L1307: 11.1.1.1.11 -> L1312
 200 L1310: .1.1111111.
 201 L1311: 11.1.1.111.
 202 L1312: 11.1.1.111.
 203 L1313: .1.1.1.1.11. -> L2314
 204 L1314: .1.11.1.111.
 205 L1315: 1.11.1.11.
 206 L1316: .111.11.11.
 207 L1317: 1.1.1.1.11.
 208 L1320: .1.1.1.1.11.
 209 L1321: .1.11.1.11.
 210 L1322: 1.1.1.1.11.
 211 L1323: 1.1.1.1.11.
 212 L1324: .1.1.1.1.11.
 213 L1325: .1.11.1.11.
 214 L1326: .1.11.1.11.
 215 L1327: .1.1.1.1.11.
 216 L1330: .1.1.1.1.11. -> L0331

ATCD1 : GO TO TAN14
 6 -> P
 LOAD CONSTANT 8
 LOAD CONSTANT 6
 LOAD CONSTANT 5
 LOAD CONSTANT 2
 LOAD CONSTANT 4
 LOAD CONSTANT 9
 RTN11 : IF S1 # 1
 THEN GO TO RTN12
 RETURN
 ADD10 : 0 -> ACWJ
 A + 1 -> ALPJ
 SELECT ROM 0
 SELECT ROM 2
 SHIFT LEFT ACWJ
 SHIFT RIGHT BCMSJ
 B EXCHANGE CCWJ
 GO TO PQ016
 PQ015 : C + 1 -> CJSJ
 PQ016 : A - B -> ACWJ
 IF NO CARRY GO TO PQ015
 A + B -> ACWJ
 SELECT ROM 2
 SELECT ROM 2
 MPY11 : SELECT ROM 2
 DIV11 : A - C -> CCXJ
 SELECT ROM 2
 SQT15 : C + 1 -> CIPJ
 SQT16 : A - C -> ACWJ
 IF NO CARRY GO TO SQT15
 A + C -> ACWJ
 SHIFT LEFT ACWJ
 P - 1 -> P
 SQT17 : SHIFT RIGHT CCMPJ
 IF P # 0
 THEN GO TO SQT15
 GO TO TMM12
 DIV14 : C + 1 -> CIPJ
 DIV15 : A - B -> ACMSJ
 IF NO CARRY GO TO DIV14
 A + B -> ACMSJ
 SHIFT LEFT ACMSJ
 DIV16 : P - 1 -> P
 IF P # 0
 THEN GO TO DIV15
 GO TO TMM12
 SQT12 : P - 1 -> P
 A + B -> ACMSJ
 IF NO CARRY GO TO SQT18
 SELECT ROM 0
 ADD12 : C - 1 -> CCXSJ
 C - 1 -> CCXSJ
 0 -> ACXJ
 A - C -> ACSJ
 IF ACSJ >= 1
 THEN GO TO ADD13
 SELECT ROM 2
 ADD13 : IF A >= BCMJ
 THEN GO TO ADD14
 0 - C - 1 -> CJSJ
 A EXCHANGE BCWJ
 ADD14 : A - B -> ACWJ
 ADD15 : SELECT ROM 2
 ATC1 : 0 -> CIWJ
 11 -> P
 LOAD CONSTANT 7
 LOAD CONSTANT 8
 LOAD CONSTANT 5
 LOAD CONSTANT 3
 LOAD CONSTANT 9
 LOAD CONSTANT 8
 LOAD CONSTANT 1
 LOAD CONSTANT 6
 LOAD CONSTANT 3
 LOAD CONSTANT 5
 SELECT ROM 0

```

217 L1331: ....11....
218 L1332: .....1..... -> L0333
219 L1333: 111...1.1.
220 L1334: 11.1111.11 -> L1336
221 L1335: .1.11...1.
222 L1336: .11111111.
223 L1337: ....1.11...
224 L1340: 1.111.1111 -> L1273
225 L1341: 111.1.1.1.
226 L1342: 1.111.1.1.
227 L1343: ...11...1.
228 L1344: 111...11.11 -> L1346
229 L1345: 1.11...111.
230 L1346: 1...1...111.
231 L1347: 1...1.1.1.
232 L1350: ..11...1.1.
233 L1351: 11....11...
234 L1352: 1.1.111.11 -> L1256
235 L1353: .1...1..... -> L2354
236 L1354: 1.1...1...1.
237 L1355: 1.1...1...1.
238 L1356: .1.111111.
239 L1357: 111.11...11 -> L1354
240 L1360: .111.1...1.
241 L1361: 11...1...1.
242 L1362: 1...11...1.
243 L1363: ...1...111.
244 L1364: 11.111111.
245 L1365: 111.111.11 -> L1356
246 L1366: 111.11111.
247 L1367: 1.11111...
248 L1370: 111.1.111.
249 L1371: .....1111.
250 L1372: .....1.11 -> L1002
251 L1373: .1...111.
252 L1374: 111.11...1.
253 L1375: 1.1111...
254 L1376: 1.1...1...1.
255 L1377: .1.111111.

```

ROM 2

```

0 L2000: 11...1... -> L6001
1 L2001: 11...11111.
2 L2002: 111111111.
3 L2003: 1...1.1.11.
4 L2004: .1...1...1.
5 L2005: ...1...1.11 -> L2022
6 L2006: .11.1.1...
7 L2007: 1.1...11...1 -> L2246
8 L2010: .11...111.
9 L2011: 1...1.1...
10 L2012: .1...1.11 -> L2192
11 L2013: 1.111.111.
12 L2014: 11.1...11.
13 L2015: .....11 -> L2000
14 L2016: 1.11...111.
15 L2017: .1.111111.
16 L2020: .....11 -> L2000
17 L2021: .11111111.
18 L2022: .1...1.111.
19 L2023: 1...1.11...1 -> L2226
20 L2024: 11.11...1.
21 L2025: ...1...111 -> L2021
22 L2026: 11...11...1.
23 L2027: 111...1111.
24 L2030: .....111 -> L2001
25 L2031: .111...11...
26 L2032: .11.11.1.1 -> L2155
27 L2033: 1...1...11...
28 L2034: 1...111.1.1 -> L2235
29 L2035: 1...1...11...
30 L2036: 1...111...1 -> L2234
31 L2037: 1111111...1 -> L2376
32 L2040: 1.1...11...
33 L2041: 1...111...1 -> L2234

```

```

RETURN
***** RTN12 : SELECT ROM 0
SQT18 : A + B -> ACXJ
IF NO CARRY GO TO SQT14
C - 1 -> CCPJ
SQT14 : C + 1 -> CCSJ
IF P # 0
THEN GO TO SQT12
A EXCHANGE CCXJ
0 -> ACXJ
IF CCPJ >= 1
THEN GO TO SQT13
SHIFT RIGHT ACWJ
SQT13 : SHIFT RIGHT CCWJ
B EXCHANGE CCXJ
0 -> CCXJ
12 -> P
GO TO SQT17
***** PRE11 : SELECT ROM 2
TAN18 : SHIFT RIGHT BCWPJ
SHIFT RIGHT BCMPJ
TAN19 : C - 1 -> CCSJ
IF NO CARRY GO TO TAN13
A + C -> CCMPJ
A - B -> ACMPJ
B EXCHANGE CCWJ
TAN13 : B -> CCWJ
A - 1 -> ACSJ
IF NO CARRY GO TO TAN19
A EXCHANGE CCSJ
DATA -> C
A EXCHANGE COWJ
IF BCSJ = 0
THEN GO TO TAN15
SHIFT LEFT ACWJ
TAN14 : A EXCHANGE CCMPJ
C -> DATA
SHIFT RIGHT BCWPJ
C - 1 -> CCSJ

```

```

***** ERR21 : SELECT ROM 6
LN24 : A EXCHANGE BCSJ
A + 1 -> ACSJ
SHIFT RIGHT CINSJ
SHIFT LEFT ACMPJ
GO TO LN25
XTY22 : STACK -> A
JSB NPY21
XTY21 : C -> ACWJ
IF SS # 1
THEN GO TO EXP21
LN22 : 0 -> ACWJ
A - C -> ACWJ
IF NO CARRY GO TO ERR21
SHIFT RIGHT ACWJ
C - 1 -> CCSJ
IF NO CARRY GO TO ERR21
LN25 : C + 1 -> CCSJ
LN26 : A -> BCWJ
JSB ECA22
A - 1 -> ACPJ
IF NO CARRY GO TO LN25
A EXCHANGE BCWPJ
A + B -> ACSJ
IF NO CARRY GO TO LN24
7 -> P
JSB PQ023
8 -> P
JSB PMU22
9 -> P
JSB PMU21
JSB LNCD3
10 -> P
JSB PMU21

```

```

34 L2042: .11111.1.1 -> L2175
35 L2043: 1.11..11..
36 L2044: 1..111...1 -> L2234
37 L2045: 11.11111.1 -> L2337
38 L2046: 1..111...1 -> L2234
39 L2047: 1.111..1.1 -> L2271
40 L2050: 1..111...1 -> L2234
41 L2051: 1111.11..1 -> L2366
42 L2052: 111.1.111.
43 L2053: .1.1..111.
44 L2054: .....11.1.
45 L2055: .1.1.111111 -> L2057
46 L2056: .1.1..111.
47 L2057: 11..1.111.
48 L2060: .....111..
49 L2061: .1...111.
50 L2062: ...11.11..
51 L2063: ..11....11 -> L2060
52 L2064: 111.1.111.
53 L2065: .11.11111.
54 L2066: ..111...11 -> L2070
55 L2067: ..111...11.
56 L2070: .1111.1.1.
57 L2071: 1.11..11..
58 L2072: 11..1.1.1 -> L2305
59 L2073: 1..1.1.1..
60 L2074: .....11.11 -> L2006
61 L2075: .1.1.1.1..
62 L2076: 1..1.1..11 -> L2224
63 L2077: 1111.11..1 -> L2366
64 L2100: 1.1..111.1 -> L2247
65 L2101: 1..1.1..11 -> L2224
66 L2102: 1111.11..1 -> L2366
67 L2103: 111.11..1 -> L2354
68 L2104: 1.111..1.1 -> L2271
69 L2105: 1.11..11..
70 L2106: 1..11.11.1 -> L2233
71 L2107: 11.11111.1 -> L2337
72 L2110: 1.1..11..
73 L2111: 1..11.11.1 -> L2233
74 L2112: .11111.1.1 -> L2175
75 L2113: 1..1..11..
76 L2114: 1..11.11.1 -> L2233
77 L2115: 1111111..1 -> L2376
78 L2116: 1.....11..
79 L2117: 1..11.11.1 -> L2233
80 L2120: 1..11.11.1 -> L2233
81 L2121: 1..11.11.1 -> L2233
82 L2122: .11...11..
83 L2123: 1.1111..1.
84 L2124: 11.1..11..
85 L2125: 1...1.111.
86 L2126: 111.1.111.
87 L2127: .11..11...
88 L2130: 1...111.11 -> L2216
89 L2131: ..1..1.1..
90 L2132: .1.1111.11 -> L2136
91 L2133: 11111.1.1.
92 L2134: 1..1111.1.
93 L2135: 11...1.11 -> L2302
94 L2136: 11...1.11.
95 L2137: .1.11..111 -> L2131
96 L2140: 111..1.11.
97 L2141: .1...111.
98 L2142: .1.11.1.1.
99 L2143: .1.111..11 -> L2134
100 L2144: 1.11..111.
101 L2145: ..11.1..1.
102 L2146: 111.1.1.1.
103 L2147: .11.11111.
104 L2150: .11.11..11 -> L2154
105 L2151: 11..1.111.
106 L2152: 11...111.
107 L2153: ..111.111.
108 L2154: 1.11..111.

```

```

JSB LNCD2
11 -> P
JSB PMU21
JSB LNCD1 -> L2337
JSB PMU21
JSB LNC2
JSB PMU21
JSB LNC10
A EXCHANGE CCW]
A - C -> CCW]
IF BCXS] = 0
    THEN GO TO LN27
A - C -> CCW]
LN27 : A EXCHANGE BCW]
LN28 : P - 1 -> P
SHIFT LEFT ACW]
IF P # 1
    THEN GO TO LN28
A EXCHANGE CCW]
IF CS] = 0
    THEN GO TO LN29
0 - C - 1 -> CCW]
LN29 : C + 1 -> CCX]
11 -> P
JSB MPY27
IF S9 # 1
    THEN GO TO XTY22
IF S5 # 1
    THEN GO TO RTN21
JSB LNC10
JSB MPY22
GO TO RTN21
EXP21 : JSB LNC10
JSB PRE21
JSB LNC2
11 -> P
JSB P0021
JSB LNCD1
10 -> P
JSB P0021
JSB LNCD2
9 -> P
JSB P0021
JSB LNCD3
8 -> P
JSB P0021
JSB P0021
JSB P0021
6 -> P
0 -> ACWP]
13 -> P
B EXCHANGE CCW]
A EXCHANGE CCW]
LOAD CONSTANT 6
GO TO EXP23
PRE23 : IF S2 # 1
    THEN GO TO PRE24
A + 1 -> ACX]
PRE29 : IF ACXS] >= 1
    THEN GO TO PRE27
PRE24 : A - B -> ACMS]
IF NO CARRY GO TO PRE23
A + B -> ACMS]
SHIFT LEFT ACW]
C - 1 -> CCX]
IF NO CARRY GO TO PRE29
PRE25 : SHIFT RIGHT ACW]
0 -> CCWP]
A EXCHANGE CCX]
PRE26 : IF CS] = 0
    THEN GO TO PRE28
A EXCHANGE BCW]
A - B -> ACW]
0 - C - 1 -> CCW]
PRE28 : SHIFT RIGHT ACW]

```

109 L2155: 1...1.111.
 110 L2156: ..11..111.
 111 L2157: .1.11..11.
 112 L2160: ..1..1.1..
 113 L2161: .111.11.11 -> L2166
 114 L2162: .1...11...
 115 L2163: .1111..11.
 116 L2164: .1111..111 -> L2171
 117 L2165: .11..11...
 118 L2166: ...11.11..
 119 L2167: .111.1.111 -> L2165
 120 L2170: 1..1..111.
 121 L2171: 1..1..111.
 122 L2172: .1..1.1..
 123 L2173: 1..1.1..11 -> L2224
 124 L2174:11...
 125 L2175: .111..11..
 126 L2176: ..11.11...
 127 L2177: ..11.11...
 128 L2200:11...
 129 L2201: 1....11...
 130 L2202: .1.1.11...
 131 L2203:11...
 132 L2204: 1..1.11...
 133 L2205: 111.1.1.11 -> L2352
 134 L2206: 1..1.11..1 -> L2226
 135 L2207: 11111..1.
 136 L2210: .1..1.111.
 137 L2211: .1.111111.
 138 L2212: 1...11.11 -> L2206
 139 L2213: 1.11.1..1.
 140 L2214: 111.1.111.
 141 L2215: .1...1.11.
 142 L2216: 111.1.111.
 143 L2217: 11.111111.
 144 L2220: 1...1...11 -> L2210
 145 L2221: 11..1.111.
 146 L2222: 11111...1.
 147 L2223: 11..11..1 -> L2314
 148 L2224: ..1..1... -> L1225
 149 L2225: 1.11.1..1.
 150 L2226: 11.111111.
 151 L2227: 1..1.1.111 -> L2225
 152 L2230: 1.1111111.
 153 L2231: 111...111.
 154 L2232:1P...
 155 L2233: ..1..1... -> L1234
 156 L2234: 1.11..111.
 157 L2235: 1...1.111.
 158 L2236: 1.1.....11 -> L2240
 159 L2237: 111...111.
 160 L2240: .1.111111.
 161 L2241: 1..1111111 -> L2237
 162 L2242: 111.1.111.
 163 L2243: .1...1.11.
 164 L2244: 111.1.111.
 165 L2245: .11.11.111 -> L2155
 166 L2246: ..11..11..
 167 L2247: .111..1.1.
 168 L2250: .1.1.1111.
 169 L2251: 1.1.1.1111 -> L2253
 170 L2252: ..1.11111.
 171 L2253: 11..1..11.
 172 L2254: 1.11.111.
 173 L2255: 11..1.11..
 174 L2256: 11...1.111 -> L2305
 175 L2257: ...11..11.
 176 L2260: 1.11.11.11 -> L2266
 177 L2261: ...1.1.1..
 178 L2262:11 -> L2000
 179 L2263: 1.1..1... -> L5264
 180 L2264: 11.11.1111 -> L2333
 181 L2265:
 182 L2266: 1...11..1.
 183 L2267: 111.1..11.

P0023 : B EXCHANGE CCMJ
 0 -> CCMJ
 C - 1 -> CCMJ
 IF S2 # 1
 THEN GO TO P0028
 LOAD CONSTANT 4
 C + 1 -> CCMJ
 IF NO CARRY GO TO P0024
 P0027 : LOAD CONSTANT 6
 P0028 : IF P # 1
 THEN GO TO P0027
 SHIFT RIGHT CCMJ
 P0024 : SHIFT RIGHT CCMJ
 NRM26 : IF S2 # 1
 THEN GO TO RTN21
 RETURN
 LNC02 : 7 -> P
 LNC6 : LOAD CONSTANT 3
 LOAD CONSTANT 3
 LOAD CONSTANT 0
 LNC7 : LOAD CONSTANT 8
 LOAD CONSTANT 5
 LOAD CONSTANT 0
 LOAD CONSTANT 9
 GO TO LNC9
 EXP29 : JSB ECA22
 A + 1 -> ACPJ
 EXP22 : A -> BCMJ
 C - 1 -> CJSJ
 IF NO CARRY GO TO EXP29
 SHIFT RIGHT ACWPJ
 A EXCHANGE CCMJ
 SHIFT LEFT ACMSJ
 EXP23 : A EXCHANGE CCMJ
 A - 1 -> ACSJ
 IF NO CARRY GO TO EXP22
 A EXCHANGE BCMJ
 A + 1 -> ACPJ
 JSB NRM21
 ***** RTN21 : SELECT ROM 1
 ECA21 : SHIFT RIGHT ACWPJ
 ECA22 : A - 1 -> ACSJ
 IF NO CARRY GO TO ECA21
 0 -> ACSJ
 A + B -> ACMJ
 RETURN
 ***** P0021 : SELECT ROM 1
 PMU21 : SHIFT RIGHT ACMJ
 PMU22 : B EXCHANGE CCMJ
 GO TO PMU24
 PMU23 : A + B -> ACMJ
 PMU24 : C - 1 -> CCSJ
 IF NO CARRY GO TO PMU23
 A EXCHANGE CCMJ
 SHIFT LEFT ACMSJ
 A EXCHANGE CCMJ
 GO TO P0023
 MPY21 : 3 -> P
 MPY22 : A + C -> CCMJ
 DIV21 : A - C -> CCSJ
 IF NO CARRY GO TO DIV22
 0 - C -> CCSJ
 DIV22 : A EXCHANGE BCMJ
 0 -> ACMJ
 IF P # 12
 THEN GO TO MPY27
 IF CCMJ >= 1
 THEN GO TO DIV23
 IF S1 # 1
 THEN GO TO ERR21
 ***** SELECT ROM 5
 GO TO NRM25
 NO OPERATION
 DIV23 : B EXCHANGE CCMJ
 A EXCHANGE CCMJ

184 L2270: . . 1 . . 1 -> L1271 *****
 185 L2271: 1 . . . 1 . . 1 . . . LNC2 :
 186 L2272: . . 11 . . 11
 187 L2273: 1 . . 1 . 11
 188 L2274: . . 11 . . 11
 189 L2275: . . . 1 . 11
 190 L2276: . 1 . . . 11
 191 L2277: . 111 . 11
 192 L2300: . . . 1 . 11
 193 L2301: 111 . . 11 . 11 -> L2346
 194 L2302: 11111 . . 11
 195 L2303: . 11 . . 1 . 11 -> L2144
 196 L2304: 111 . . . 111
 197 L2305: . 1 . 11 . . . 1
 198 L2306: 11 . . . 1 . 11 -> L2304
 199 L2307: 1 . 11 . . 111
 200 L2310: 1111
 201 L2311: 11 . 11 . 11
 202 L2312: 11 . . . 1 . 111 -> L2305
 203 L2313: . 1111 . 1 . 1
 204 L2314: 1 . 1111111
 205 L2315: 11 11
 206 L2316: 1 . 111
 207 L2317: 1 . . 11 . . . 1
 208 L2320: 11 . 1 . 11 . 11 -> L2326
 209 L2321: . 1 111
 210 L2322: . 1 . 11 . 1 . 1
 211 L2323: 1 . . 11 . 111
 212 L2324: 11 . . 1111111 -> L2317
 213 L2325: . . 11 . . . 111
 214 L2326: . 1 . . 1 . 1 . 1
 215 L2327: 111 . . . 111
 216 L2330: 1 . . 1111111
 217 L2331: 11 . . . 111111 -> L2307
 218 L2332: 111 . 1 . . 11
 219 L2333: . 11 . . . 111
 220 L2334: 1 . 111
 221 L2335: 11 11
 222 L2336: . 1111 . 1 . 11 -> L2172
 223 L2337: 1 . . 1 . . 11
 224 L2340: . . 11 . 11
 225 L2341: . . . 1 . 11
 226 L2342: 11
 227 L2343: . . . 1 . 11
 228 L2344: . 111 . 11
 229 L2345: 1 . . 1 . 11
 230 L2346: 1 11
 231 L2347: 11
 232 L2350: . 1 . 1 . 11
 233 L2351: . 1 . 1 . 11
 234 L2352: . . 11 . 11
 235 L2353: 11 . 111 . 111 -> L2335
 236 L2354: 111 . 1 . 111
 237 L2355: . 1 . . 1 . 111
 238 L2356: . 11 11
 239 L2357: 1 . 1 . 111 . 1
 240 L2360: . 1 . 1111 . 11 -> L2136
 241 L2361: . 111111 . 1
 242 L2362: 1 . 11 . . 111
 243 L2363: . 1111 . 1 . 1
 244 L2364: 1111 . . 1 . 11 -> L2362
 245 L2365: . 11 . . 11111 -> L2147
 246 L2366: . . 11 . . . 111
 247 L2367: 11 11
 248 L2370: . . 1 . . 11
 249 L2371: . . 11 . 11
 250 L2372: 11
 251 L2373: . 1 . . 11
 252 L2374: . 1 . 1 . 11
 253 L2375: 1 111 -> L2201
 254 L2376: . 1 . 1 . . 11
 255 L2377: . 111111 . 11 -> L2176

SELECT ROM 1
 0 -> 00
 LOAD CONSTANT 6
 LOAD CONSTANT 9
 LOAD CONSTANT 3
 LOAD CONSTANT 1
 LOAD CONSTANT 4
 LOAD CONSTANT 7
 LOAD CONSTANT 1
 GO TO LNC8
 PRE27 : A + 1 -> ACMJ
 IF NO CARRY GO TO PRE25
 MPY26 : A + B -> ACMJ
 MPY27 : C - 1 -> CCPJ
 IF NO CARRY GO TO MPY26
 MPY28 : SHIFT RIGHT ACMJ
 P + 1 -> P
 IF P # 13
 THEN GO TO MPY27
 NRM20 : C + 1 -> CCXJ
 NRM21 : 0 -> ACSJ
 12 -> P
 0 -> BCWJ
 NRM23 : IF ACPJ >= 1
 THEN GO TO NRM24
 SHIFT LEFT ACMJ
 C - 1 -> CCXJ
 IF ACMJ >= 1
 THEN GO TO NRM23
 0 -> CCWJ
 NRM24 : A -> BCXJ
 A + B -> ACMJ
 IF ACSJ >= 1
 THEN GO TO MPY28
 A EXCHANGE CCMJ
 NRM25 : C -> ACMJ
 0 -> BCWJ
 NRM27 : 12 -> P
 GO TO NRM26
 LNC1 : 9 -> P
 LOAD CONSTANT 3
 LOAD CONSTANT 1
 LOAD CONSTANT 0
 LOAD CONSTANT 1
 LOAD CONSTANT 7
 LOAD CONSTANT 9
 LNC8 : LOAD CONSTANT 8
 LOAD CONSTANT 0
 LOAD CONSTANT 5
 LOAD CONSTANT 5
 LNC9 : LOAD CONSTANT 3
 GO TO NRM27
 PRE21 : A EXCHANGE CCMJ
 A -> BCWJ
 C -> ACMJ
 C + C -> CCXSJ
 IF NO CARRY GO TO PRE24
 C + 1 -> CCXSJ
 PRE22 : SHIFT RIGHT ACMJ
 C + 1 -> CCXJ
 IF NO CARRY GO TO PRE22
 GO TO PRE26
 LNC10 : 0 -> CCWJ
 12 -> P
 LOAD CONSTANT 2
 LOAD CONSTANT 3
 LOAD CONSTANT 0
 LOAD CONSTANT 2
 LOAD CONSTANT 5
 GO TO LNC7
 LNC13 : 5 -> P
 GO TO LNC6

ROM 3

0	L3000:	1....1....	-> L4001	*****	FFFF	SELECT ROM 4
1	L3001:				NO OPERATION
2	L3002:	.1..1.1.11.	-> L3112		FIN1	GO TO FIN2
3	L3003:	.1.11..111	-> L3131		EMFN	GO TO EMF1
4	L3004:	.1.11.1.11	-> L3132		EMMN	GO TO EMN22
5	L3005:				NO OPERATION
6	L3006:	.1....1.11	-> L3104		IMVX	GO TO IMV1
7	L3007:	.1....1....	-> L2010	*****	LEAX	SELECT ROM 2
8	L3010:	1....1....	-> L4011	*****	PERC	SELECT ROM 4
9	L3011:	11....1....	-> L6012	*****	PH02	SELECT ROM 6
10	L3012:	.11..11.11	-> L3146		ROAL	GO TO ROL0
11	L3013:	.11.1....11	-> L3150		STOR	GO TO STP0
12	L3014:	11..1.1....			ROLD	DOWN ROTATE
13	L3015:	.1111111111	-> L3177			GO TO FST12K
14	L3016:	.11.1.1....			END1	STACK -> A
15	L3017:	.1..1.1....				C -> STACK
16	L3020:	.111111.11	-> L3176			GO TO FSTXZJ
17	L3021:	.111111111	-> L3077		FST225:	GO TO ENT2
18	L3022:	11111.111.			DIG5	A + 1 -> AIWJ
19	L3023:	11111.111.			DIG5	A + 1 -> AIWJ
20	L3024:	11111.111.			DIG4	A + 1 -> AIWJ
21	L3025:	...11.1.11	-> L3032			IF NO CARRY GO TO DIG3
22	L3026:	1....1....	-> L4027	*****	ADD0	SELECT ROM 4
23	L3027:	1....111.1	-> L3207		FIN3	JSB DSP024
24	L3030:	.1....111.				SHIFT LEFT AIWJ
25	L3031:	.1.1..1.11	-> L3122			GO TO FMT1
26	L3032:	11111.111.			DIG3	A + 1 -> AIWJ
27	L3033:	11111.111.			DIG2	A + 1 -> AIWJ
28	L3034:	11111.111.			DIG1	A + 1 -> AIWJ
29	L3035:11....				RETURN
30	L3036:	1....1....	-> L4037	*****	MULT	SELECT ROM 4
31	L3037:	...11.1....			TKRA	KEYS -> ROM ADDRESS
32	L3040:	1....1..1..			SIG1	0 -> S8
33	L3041:	1....1....	-> L4042	*****		SELECT ROM 4
34	L3042:	.1.1....11	-> L3040		SIGP	GO TO SIG1
35	L3043:	.11..11..			DCPT	3 -> P
36	L3044:11....			DIG0	RETURN
37	L3045:	1....1....	-> L4046	*****	DVID	SELECT ROM 4
38	L3046:	.1.1..1.111	-> L3045		DIVD	GO TO DIVD
39	L3047:	.1.1..1..			TAN2	1 -> S5
40	L3050:	.11..1...1	-> L3144		TANG	JSB SAV9
41	L3051:	.1....1.11	-> L3102			GO TO SBT124
42	L3052:	.1..11..11	-> L3114		COSS	GO TO COS2
43	L3053:	.1..111111	-> L3047		SINN	GO TO TAN2
44	L3054:	1....1....	-> L4055	*****	TPOL	SELECT ROM 4
45	L3055:				NO OPERATION
46	L3056:	.11....1.1	-> L3141		SOAR	JSB SAVE
47	L3057:	.1..1...11	-> L3116			GO TO MUL0
48	L3060:				NO OPERATION
49	L3061:1....	-> L0062	*****	SQT2	SELECT ROM 0
50	L3062:	11111.111.			DIG9	A + 1 -> AIWJ
51	L3063:	11111.111.			DIG8	A + 1 -> AIWJ
52	L3064:	11111.111.			DIG7	A + 1 -> AIWJ
53	L3065:	...1..1.11	-> L3022			IF NO CARRY GO TO DIG6
54	L3066:	1....1....	-> L4067	*****	SUBT	SELECT ROM 4
55	L3067:				NO OPERATION
56	L3070:	1.1..11..1	-> L3246		CLRX	JSB OFL2
57	L3071:	1....111	-> L3201			GO TO FST22X
58	L3072:	1.111.1111	-> L3273		EEXX	GO TO EEM2
59	L3073:	11....111	-> L3301		CHS1	GO TO CHS2
60	L3074:1.111.			CLOK	0 -> BCWJ
61	L3075:	111..1....	-> L7076	*****		SELECT ROM 7
62	L3076:	.1..1.1....			ENT1	C -> STACK
63	L3077:	1.1..111.1	-> L3247		ENT2	JSB OFL1
64	L3100:	1....111	-> L3201			GO TO FST22X
65	L3101:	.11....1.1	-> L3141		SQT0	JSB SAVE
66	L3102:	1..11..1..			SQT124:	0 -> S9
67	L3103:	.11....111	-> L3051		SQT1	GO TO SQT2
68	L3104:	.11....1.1	-> L3141		INVI	JSB SAVE
69	L3105:	1.111.111.				0 -> ACWJ
70	L3106:	11111..1.				A + 1 -> ACPJ
71	L3107:	.1..1..111	-> L3111			IF NO CARRY GO TO DIV0
72	L3110:	1....1....	-> L4111	*****	MUL0	SELECT ROM 4

```

73 L3111: 1....1.... -> L4112
74 L3112: 1..11..1..
75 L3113: ...1.11111 -> L3027
76 L3114: .11..1...1 -> L3144
77 L3115: 1..1...1..
78 L3116: .1.1...1..
79 L3117: ..11...111 -> L3061
80 L3120: .1....111.
81 L3121: 11111.111.
82 L3122: .1....111.
83 L3123: ..1.1.1...
84 L3124: 111.1.1.1.
85 L3125: ..1.1.1...
86 L3126: .111..1.11 -> L3162
87 L3127: .....
88 L3130: .....
89 L3131: 1...1...1..
90 L3132: 1..1...1..
91 L3133: .11...1.1 -> L3141
92 L3134: ..1...1..
93 L3135: .....11111 -> L3007
94 L3136: 1...111.1 -> L3207
95 L3137: .1.1...11 -> L3120
96 L3140: ..11...1..
97 L3141: 1.1.1...1..
98 L3142: 11...1.... -> L6143
99 L3143: 11...1.... -> L6144
100 L3144: ...1...1..
101 L3145: .11...111 -> L3141
102 L3146: 1..1...1..
103 L3147: .11.1...111 -> L3151
104 L3150: 1..11...1..
105 L3151: ..1...1..
106 L3152: 1...111.1 -> L3207
107 L3153: .111.1.1.1 -> L3165
108 L3154: .11...11.1 -> L3143
109 L3155: 1..1.1.1..
110 L3156: .111...111 -> L3161
111 L3157: 1111.11..1 -> L3366
112 L3160: .111111.11 -> L3176
113 L3161: 1.1111....
114 L3162: .111.1.1..
115 L3163: ..11111111 -> L3077
116 L3164: .111111111 -> L3177
117 L3165: .....11..
118 L3166: 1..11...1.
119 L3167: 1111111111 -> L3377
120 L3170: .111..1.11 -> L3162
121 L3171: 1...111.1 -> L3207
122 L3172: .111.1.1.1 -> L3165
123 L3173: 1...1.... -> L4174
124 L3174: .....
125 L3175: .....
126 L3176: 111.1.111.
127 L3177: 1.1..111.1 -> L3247
128 L3200: .111...1..
129 L3201: 1...1.1.1 -> L3205
130 L3202: 1111.1.1.1 -> L3365
131 L3203: 11.1.11.11 -> L3326
132 L3204: ..1111111.
133 L3205: 1.1.1...1..
134 L3206: 1...1...11 -> L3210
135 L3207: 1.11...111.
136 L3210: .11...1111.
137 L3211: 1...1...1..
138 L3212: 1..1.1...11 -> L3224
139 L3213: .111111.1.
140 L3214: 1...1...1..
141 L3215: .1.1.1.1..
142 L3216: 1..1..1.11 -> L3222
143 L3217: .1111.1.1.
144 L3220: 1...1.1111 -> L3213
145 L3221: ....1.1...
146 L3222: .....1.1..
147 L3223: 1...11...11 -> L3214
148 L3224: ....1...1..

```

```

***** DIV0 : SELECT ROM 4
FIX2 : 0 -> S9
GO TO FIX3
COS2 : JSB SAV9
COS2Z4: 1 -> S9
TRECZ4: 1 -> S5
GO TO SQT2
FRMT : SHIFT LEFT ACWJ
A + 1 -> ACWJ
FMT1 : SHIFT LEFT ACWJ
C EXCHANGE M
A EXCHANGE C[X]
C EXCHANGE M
FSTPZ4: GO TO FSTP
NO OPERATION
NO OPERATION
EXP1 : 0 -> S8
LNNZ24: 1 -> S9
JSB SAV6
NTY1Z4: 1 -> S2
GO TO LEXX
SCI2Z4: JSB DSP0Z4
GO TO FRMT
SAV1 : 1 -> S3
SAVE : 0 -> S10
***** - SELECT ROM 6
***** SAV2 : SELECT ROM 6
SAV9 : 1 -> S1
GO TO SAVE
RCL0 : 1 -> S9
GO TO STR1
STR0 : 0 -> S9
STR1 : 1 -> S2
JSB DSP0Z4
JSB CHK0
JSB SAV2
IF S9 # 1
THEN GO TO STR2
JSB FST4
GO TO FSTXZJ
STR2 : C -> DATA
FSTP : IF S7 # 1
THEN GO TO ENT2
GO TO FST12X
CHK0 : 0 -> P
IF ACPJ >= 1
THEN GO TO RETNZX
FSTPZ5: GO TO FSTP
ASMDZ4: JSB DSP0Z4
JSB CHK0
***** SELECT ROM 4
NO OPERATION
NO OPERATION
FSTXZJ: A EXCHANGE C[W]
FST12X: JSB OFL3
FST1ZJ: 1 -> S7
FST2ZX: JSB DSP1
JSB FST3
GO TO DEN2
CHS3 : 0 - C - 1 -> C[S]
DSP1 : 0 -> S10
GO TO DSP7
DSP0Z4: SHIFT RIGHT ACWJ
DSP7 : C -> A[C]
0 -> S8
GO TO DSP8
DSP2 : C + 1 -> C[X]
DSP3 : 1 -> S8
IF S5 # 1
THEN GO TO DSP5
C + 1 -> C[X]
IF NO CARRY GO TO DSP2
DSP4 : DISPLAY TOGGLE
DSP5 : IF S0 # 1
THEN GO TO DSP3
DSP8 : 0 -> S0

```

```

149 L3225: .....111..
150 L3226: 11...1.11..
151 L3227: 1...1.1.111  -> L3225
152 L3230: 1...1.1.1..
153 L3231: 1...1.1.1..
154 L3232: 1...1.1.111  -> L3221
155 L3233: .1...1.11..
156 L3234: .1.11...1..
157 L3235: 1.1...1.1..
158 L3236: ...11111111  -> L3037
159 L3237: 1...1.1...  -> L4240 *****
160 L3240: .....
161 L3241: ..11.1...1.
162 L3242: .1.111...1.
163 L3243: ...11.11.1.
164 L3244: 111...1.1.
165 L3245: 1.1...11111  -> L3247
166 L3246: ..11...111.
167 L3247: ...11.1...
168 L3250: .11...111.
169 L3251: 11...11..
170 L3252: .1...1.1.1.
171 L3253: .11...1.1.
172 L3254: .11.111.1.
173 L3255: 1.11...111  -> L3261
174 L3256: ..1.1.1.1.
175 L3257: .1.1111.1.
176 L3260: 1.1...111  -> L3241
177 L3261: 111.1.1.1.
178 L3262: .1...1.1.1..
179 L3263: ...1...111  -> L3011
180 L3264: 11...1.1.1.
181 L3265: ...1.1.1.1.
182 L3266: 1...1.1.1.  -> L3205
183 L3267: 11...1.11..
184 L3270: 1...11411  -> L3207
185 L3271: .1...1.1.1.
186 L3272: 1.11111.11  -> L3276
187 L3273: .1...1.1..
188 L3274: 1.11.1.1..
189 L3275: ...111...11  -> L3034
190 L3276: 1.11...111.
191 L3277: 111.11...1.
192 L3300: 11...11.11  -> L3306
193 L3301: 1.11...111.
194 L3302: .1...1.1.1..
195 L3303: 1...1...11  -> L3204
196 L3304: 111.11...1.
197 L3305: ...11111.1.
198 L3306: .11...111.
199 L3307: .11.111.1.
200 L3310: 11...1.111  -> L3313
201 L3311: ..11.11.1.
202 L3312: ..1.1.1.1.
203 L3313: 11.1...11..
204 L3314: .1...1.11..
205 L3315: .1.11.1.1.
206 L3316: 1...111111.
207 L3317: 111.11...11  -> L3354
208 L3320: 1...111.11.
209 L3321: 11...11...11  -> L3314
210 L3322: ..11...1.1.
211 L3323: 1...1.1.1.  -> L3205
212 L3324: 1.11.1.11.
213 L3325: .11...1111.
214 L3326: 11...1.11..
215 L3327: 11.1111111  -> L3337
216 L3330: ..1...111.
217 L3331: .1111.111.
218 L3332: ...1...11..
219 L3333: .1...1...1.
220 L3334: ....1111..
221 L3335: .11.1...1.
222 L3336: 11.11.1111  -> L3333
223 L3337: 111.1.111.
224 L3340: ..111.11..

```

```

DSP6 : P - 1 -> P
      IF P # 12
      THEN GO TO DSP6
      DISPLAY OFF
      IF S8 # 1
      THEN GO TO DSP4
      SHIFT LEFT ACWJ
      0 -> S5
      IF S10 # 1
      THEN GO TO TKRA
      SELECT ROM 4
      NO OPERATION
OFL1 : 0 -> CCWPJ
      C - 1 -> CCWPJ
      0 -> CCXSJ
      A + B -> ACXJ
      IF NO CARRY GO TO OFL3
OFL2 : 0 -> CCWJ
OFL3 : CLEAR STATUS
      C -> ACWJ
OFL4 : 12 -> P
      A -> BCXJ
      C -> ACXJ
      IF CCXSJ = 0
      THEN GO TO OFL5
      0 - C -> CCXJ
      C - 1 -> CCXSJ
      IF NO CARRY GO TO OFL1
OFL5 : A EXCHANGE CCWJ
      IF S4 # 1
      THEN GO TO AND0
      A EXCHANGE BCXJ
      0 -> BCXJ
      JSB DSP1
      IF P # 12
      THEN GO TO DSP024
      SHIFT LEFT ACXJ
      GO TO EEX3
EEX2 : 1 -> S4
      IF S11 # 1
      THEN GO TO DIG1
EEX3 : SHIFT RIGHT ACWJ
      A EXCHANGE CCWPJ
      GO TO EEX4
CHS2 : SHIFT RIGHT ACWJ
      IF S4 # 1
      THEN GO TO CHS3
      A EXCHANGE CCWPJ
      0 - C - 1 -> CCXSJ
EEX4 : C -> ACWJ
      IF CCXSJ = 0
      THEN GO TO EEX5
      0 -> CCXSJ
      0 - C -> CCXJ
EEX5 : 13 -> P
EEX6 : SHIFT LEFT ACMSJ
      C - 1 -> CCXJ
      IF ACSJ >= 1
      THEN GO TO EEX8
      IF ACMSJ >= 1
      THEN GO TO EEX6
      0 -> CCXJ
DEN1 : JSB DSP1
      SHIFT RIGHT ACMSJ
DEN7 : C -> ACSJ
DEN2 : IF P # 12
      THEN GO TO DEN4
      B -> CCWJ
      C + 1 -> CCWJ
      1 -> P
DEN3 : SHIFT LEFT ACWPJ
      P + 1 -> P
      IF CCPJ = 0
      THEN GO TO DEN3
DEN4 : A EXCHANGE CCWJ
      IF P # 3

```

```

225 L3341: 111.1.111 -> L3345
226 L3342: .111.1.1.
227 L3343: .11.1.1.1.
228 L3344: 11.1.11.11 -> L3305
229 L3345: .11.1.1.1.
230 L3346: 111.1.1.11 -> L3350
231 L3347: .111.1.1.1.
232 L3350: 1.1.1.1.1.
233 L3351: 11.1.11.11 -> L3305
234 L3352: .111.1.1.1.
235 L3353: .1111.1.1.1.
236 L3354: .111.1.1.1.
237 L3355: 111.1.1.11 -> L3352
238 L3356: 1.11.1.1.1.
239 L3357: 1.11.1.11.1.
240 L3360: 111.1.1.11.
241 L3361: .1.1.1.1.1.
242 L3362: 11.1.1111 -> L3323
243 L3363: 1.1.1.1.1.1 -> L3251
244 L3364: 1.1.1.1.11 -> L3201
245 L3365: 1.1111.11.
246 L3366: .111.1.1.1.
247 L3367: 11111.1111 -> L3371
248 L3370: .1.1.1.1.1.
249 L3371: .111.1.1.1.
250 L3372: .11.1.111.
251 L3373: .1.11.111.
252 L3374: .1.1.11111.
253 L3375: .111111111.
254 L3376: 1.1.1.111.
255 L3377: .11.1.1.1.

```

```

THEN GO TO DEN5
0 -> CCXJ
1 -> S6
GO TO EEX4
IF S6 # 1
THEN GO TO DEN6
P - 1 -> P
DEN6 : SHIFT RIGHT BOMPJ
JSB EEX4
EEX7 : P - 1 -> P
C + 1 -> CCXJ
EEX8 : IF BCPJ = 0
THEN GO TO EEX7
1 -> S11
SHIFT RIGHT ACMSJ
A EXCHANGE CCMJ
IF S4 # 1
THEN GO TO DEN1
EEX9 : JSB OFL4
GO TO FST22X
FST3 : 0 -> ACMSJ
FST4 : IF S7 # 1
THEN GO TO FST5
C -> STACK
FST5 : 1 -> S7
0 -> CCMJ
C - 1 -> CCMJ
0 - C -> CISMJ
C + 1 -> CISMJ
B EXCHANGE CCMJ
RETNZX: RETURN

```

ROM 4

```

0 L4000: .111.1.1.1.
1 L4001: 1.1.1.1.11 -> L4204
2 L4002: .1.111.1.11 -> L4134
3 L4003: 11.1.1.1.11 -> L4310
4 L4004: .1.11.1.1.11 -> L4130
5 L4005: 11.1.1.1.1. -> L5006 *****
6 L4006: .11.1.1.1.1 -> L4141
7 L4007: .1.111.1.11 -> L4132
8 L4010: 1.1.11.1.11 -> L4230
9 L4011: .1.1.1.1.11 -> L4102
10 L4012: 1.1.1.1.1.1.
11 L4013: .1.1.1.1.11 -> L4020
12 L4014: .1.1.1.1.11 -> L4040
13 L4015: .1.1.1.1.11 -> L0016 *****
14 L4016: .11.1.1.1.1 -> L4141
15 L4017: 1111111111 -> L4377
16 L4020: .11.1.1.1.1 -> L4141
17 L4021: .1.1.11.1111 -> L4015
18 L4022: 1.1.1.1.1.11 -> L4202
19 L4023: 1.1.1.1.1.11 -> L4202
20 L4024: 1.1.1.1.1.11 -> L4202
21 L4025: 1.1.1.1.1.11 -> L5026 *****
22 L4026: .11.1.1.1.1.
23 L4027: .11.1.1.1.11 -> L4150
24 L4030: 1.11.1.1111 -> L4265
25 L4031: .11.1.1.1.1.
26 L4032: 1.1.1.1.1.11 -> L4202
27 L4033: 1.1.1.1.1.11 -> L4202
28 L4034: 1.1.1.1.1.11 -> L4202
29 L4035: .11.1.1.1.1.
30 L4036: .11.1.1.1.1.
31 L4037: .11.111.1.11 -> L4156
32 L4040: .11.1.1.1.1. -> L4140
33 L4041: 1.1.1.1.1.11 -> L5042 *****
34 L4042: 11.1.1.1.11 -> L4320
35 L4043: .111.1.1.11 -> L4162
36 L4044: .111.1.1.111 -> L4161
37 L4045: .11.1.1.1.1.
38 L4046: .111.1.1111 -> L4163
39 L4047: .1.1.1.1.1.
40 L4050: .1.1111.1.1 -> L4136

```

```

PRFX : NO OPERATION
PRFXZ3: GO TO PRFX1
SCI1 : GO TO SCI2
TNX : GO TO TNX2
LOGG : GO TO LOG2
***** TNX3 : SELECT ROM 6
XT0Y : JSB SAVE
GO TO XTY1
DPCT : GO TO DPC1
PERCZ3: GO TO PCT1
DMST : 0 -> S8
TDM5 : GO TO TDM1
STDD : GO TO STD1
***** DMSD : SELECT ROM 0
FACT : JSB SAVE
GO TO FAC2
TDM1 : JSB SAVE
GO TO DMSD
DIG6 : GO TO DSP0
DIG5 : GO TO DSP0
DIG4 : GO TO DSP0
***** SIG2 : SELECT ROM 5
ADDD : NO OPERATION
ADDDZ3: GO TO AMD1
TPOLZ0: GO TO TPL3
NO OPERATION
DIG3 : GO TO DSP0
DIG2 : GO TO DSP0
DIG1 : GO TO DSP0
NO OPERATION
MULT : NO OPERATION
MULTZ3: GO TO AMD4
STD1 : JSB SAV1
*****
SIGMZ3: GO TO SGMA
DCPT : GO TO PI11
DIG0 : GO TO CONS
NO OPERATION
DIVDZ3: GO TO AMD5
ATN2 : 1 -> S5
ATAN : JSB SAV9

```

41 L4051: .1.....111 -> L4101
 42 L4052: .1...1.1111 -> L4113
 43 L4053: ..1...11111 -> L4047
 44 L4054: 1...1...1111 -> L4223
 45 L4055: 1.1.1...11 -> L4250
 46 L4056: .11...1.1 -> L4141
 47 L4057: .1.....111 -> L4101
 48 L4060:
 49 L4061:
 50 L4062: 11111.111.1
 51 L4063: 11111.111.
 52 L4064: .111...11 -> L4160
 53 L4065: 1.1...1... -> L5066
 54 L4066:
 55 L4067: .11.1.1111 -> L4153
 56 L4070: .11...1.1 -> L4141
 57 L4071: 1111.1.111 -> L4365
 58 L4072: 11111.111.
 59 L4073: ..11111111 -> L4077
 60 L4074:
 61 L4075:
 62 L4076: 11.11.111.
 63 L4077:11..
 64 L4100: .1...111.11 -> L4116
 65 L4101: .11...1... -> L3102
 66 L4102: .11...1... -> L4140
 67 L4103: 1...1...1..
 68 L4104: 11...1.1...
 69 L4105: .1...1.1...
 70 L4106: .1.11.1.1.
 71 L4107: .1.11.1.1.
 72 L4110: 1...1.1...
 73 L4111: 1.1...1111 -> L4243
 74 L4112: 1.1...111 -> L4241
 75 L4113: .1.1111...1 -> L4136
 76 L4114: .11...1... -> L3115
 77 L4115: .11...1... -> L3116
 78 L4116: .1...111.
 79 L4117:1111..
 80 L4120: 11.11.11..
 81 L4121: .1...111.11 -> L4116
 82 L4122: ..1.1.1...
 83 L4123: 111.1...1.
 84 L4124: ..1.1.1...
 85 L4125: .11...1... -> L3126
 86 L4126:
 87 L4127:
 88 L4130: .1.1...1..
 89 L4131: .11...1... -> L3132
 90 L4132: 1...111.1 -> L4207
 91 L4133: .11...1... -> L3134
 92 L4134: 1.1.1...1..
 93 L4135: .11...1... -> L3136
 94 L4136: ...1...1..
 95 L4137: .11...111 -> L4141
 96 L4140: ..11...1..
 97 L4141: 1.1...1...
 98 L4142: 11...1... -> L6143
 99 L4143: 11...1... -> L6144
 100 L4144: 11...1... -> L6145
 101 L4145: 1.1...1..
 102 L4146: ..11...1..
 103 L4147: .11...1111 -> L4143
 104 L4150: .11...1..
 105 L4151: .1...1...
 106 L4152: .111.1.111 -> L4165
 107 L4153: .11.1...1..
 108 L4154: .1...1...
 109 L4155: .111.1.111 -> L4165
 110 L4156: .11...1..
 111 L4157: .111.1...11 -> L4164
 112 L4160: 11111.111.
 113 L4161: 11...1... -> L6162
 114 L4162: 11...1... -> L6163
 115 L4163: .11.1...1..

GO TO SQT1
 ACOS : GO TO ACS1
 ASIN : GO TO ATH2
 TREC : GO TO TRC1
 TPOLZ3: GO TO TPL1
 SQT : JSB SAVE
 GO TO SQT1
 NO OPERATION
 NO OPERATION
 DIG9 : A + 1 -> ACWJ
 DIG8 : A + 1 -> ACWJ
 DIG7 : IF NO CARRY GO TO CON1
 ***** TPL6 : SELECT ROM 5
 SUBT : NO OPERATION
 SUBTZ3: GO TO AMD2
 CLER : JSB SAVE
 GO TO CLR2
 GRAB : A + 1 -> ACWJ
 RADN : IF NO CARRY GO TO MODE
 CLOK : NO OPERATION
 NO OPERATION
 DEGR : A - 1 -> ACWJ
 MODE : 0 -> P
 GO TO SHFT
 ***** SQT1 : SELECT ROM 3
 PCT1 : JSB SAV1
 0 -> S8
 C100 : DGMN ROTATE
 C -> STACK
 C - 1 -> C[X]
 C - 1 -> C[X]
 IF S8 # 1
 MUL0Z3: THEN GO TO MUL0
 DIV0Z3: GO TO DIV0
 ACS1 : JSB SAV9
 ***** SELECT ROM 3
 ***** TRC2 : SELECT ROM 3
 SHFT : SHIFT LEFT ACWJ
 P + 1 -> P
 IF P # 13
 THEN GO TO SHFT
 MRG0 : C EXCHANGE M
 A EXCHANGE C[P]
 MREG : C EXCHANGE M
 ***** SELECT ROM 3
 NO OPERATION
 NO OPERATION
 LOG2 : 1 -> S5
 ***** SELECT ROM 3
 ***** MTY1 : JSB EXCH
 ***** SELECT ROM 3
 ***** SCI2 : 0 -> S10
 ***** SELECT ROM 3
 SAV9 : 1 -> S1
 GO TO SAVE
 SAV1 : 1 -> S3
 SAVE : 1 -> S10
 ***** SELECT ROM 6
 ***** SAVX : SELECT ROM 6
 ***** ADR9 : SELECT ROM 6
 SAV2 : 1 -> S10
 1 -> S3
 GO TO SAVX
 AND1 : 1 -> S6
 1 -> S4
 GO TO AMD7
 AMD2 : 0 -> S6
 AMD3 : 1 -> S4
 GO TO AMD7
 AMD4 : 1 -> S6
 GO TO AND6
 CON1 : A + 1 -> ACWJ
 ***** CONS : SELECT ROM 6
 ***** PIII : SELECT ROM 6
 ***** AND5 : 0 -> S6

116 L4164: .1..1..1..
 117 L4165: ..1..1..1..
 118 L4166: .1111111111 -> L4177
 119 L4167: 1.1.1..1..
 120 L4170: .11..1..1.. -> L3171
 121 L4171: 1.1.1..1..1..
 122 L4172: 1.1..1..1.. -> L5173
 123 L4173:
 124 L4174: 1..1.1111 -> L4213
 125 L4175:
 126 L4176: .11..1..1.. -> L3177
 127 L4177: .11..1..1.1 -> L4141
 128 L4200: .11.1.1..1..
 129 L4201: .1111..111 -> L4171
 130 L4202: 1.1.1..1..
 131 L4203: 1...1.111 -> L4205
 132 L4204: 1.1...1..1..
 133 L4205: 1..11..1..1..
 134 L4206: .11..1..1.. -> L3207
 135 L4207: .11.1.1..1..
 136 L4210: .1..1.1..1..
 137 L4211: 111.1.111.
 138 L4212:11.....
 139 L4213: 1..1.1.1..1..
 140 L4214: 1..1...1.11 -> L4220
 141 L4215: .11.....1.1 -> L4140
 142 L4216: 111.1.111.
 143 L4217: .1111..111 -> L4171
 144 L4220: .11..1.1.1.1 -> L4145
 145 L4221: 1.1111....
 146 L4222: 1...111.11 -> L4216
 147 L4223: .1.1111..1.1 -> L4136
 148 L4224: .11.1.1..1..
 149 L4225: ..11...1..1..
 150 L4226: 1.1.1..1..1..
 151 L4227: .1..11.111 -> L4115
 152 L4230: .11.....1.1 -> L4140
 153 L4231: 11..1.1.1..1..
 154 L4232: .1..1.1.1..1..
 155 L4233: 1.1..11..1.1 -> L4246
 156 L4234: .1...1..1.11 -> L4104
 157 L4235:
 158 L4236:
 159 L4237: 1.1..1..1..1.. -> L5240
 160 L4240: ..11.1..1..1..
 161 L4241: ..111..1..1..
 162 L4242: 1.1..1.1.111 -> L4245
 163 L4243: ..111..1..1..
 164 L4244: ..1..1..1..1.. -> L1245
 165 L4245: ..1..1..1..1.. -> L1245
 166 L4246: ..11111111.
 167 L4247:1..1..1.. -> L0250
 168 L4250: .1.1111..1.1 -> L4136
 169 L4251: ..11...1..1..
 170 L4252: .1..1..1..1..
 171 L4253: .11.111111.
 172 L4254: 1.1.111.11 -> L4256
 173 L4255: .1.....1..1..
 174 L4256: 11..1.1.1..1..
 175 L4257: 1...1..1..1.1 -> L4210
 176 L4260: 1..11..1.1.1.
 177 L4261: ..11.1.1.111 -> L4065
 178 L4262: ..11.1..1..1..
 179 L4263: .1111..1..1..
 180 L4264: ..11.1.1.1.1 -> L4065
 181 L4265: ...11..1..1..
 182 L4266: 1...111.1.1 -> L4207
 183 L4267: .11...111.
 184 L4270: 1.1..1..1..1.1 -> L4244
 185 L4271: 1.1111....
 186 L4272: 11..1.1.11.1 -> L4313
 187 L4273: .11..1..1..1.1 -> L4144
 188 L4274: 1.1..1..1..1.1 -> L4244
 189 L4275: 1.111111....
 190 L4276: 1.1..111.1.1 -> L4247
 191 L4277: 11.1111.1.1.

AMD6 : 0 -> S4
 AMD7 : IF S2 # 1
 THEN GO TO AMD8
 0 -> S10
 SELECT ROM 3
 ***** AM13 : 0 -> S10
 SELECT ROM 5
 NO OPERATION
 AMD9Z3 : GO TO AMD9
 NO OPERATION
 ***** FST1 : SELECT ROM 3
 AMD8 : JSB SAVE
 STACK -> A
 GO TO AM13
 DSP0 : 0 -> S10
 GO TO DSPX
 PFX1 : 1 -> S10
 DSPX : 0 -> S9
 ***** SELECT ROM 3
 EXCH : STACK -> A
 EXC1 : C -> STACK
 A EXCHANGE C[W]
 RETURN
 AMD9 : IF S9 # 1
 THEN GO TO AM12
 AM10 : JSB SAV1
 AM11 : A EXCHANGE C[W]
 GO TO AM13
 AM12 : JSB SAV2
 C -> DATA
 GO TO AM11
 TRC1 : JSB SAV9
 STACK -> A
 1 -> S3
 0 -> S10
 GO TO TRC2
 DPC1 : JSB SAV1
 DOWN ROTATE
 C -> STACK
 JSB SUB1
 GO TO C100
 NO OPERATION
 NO OPERATION
 ***** RCXY : SELECT ROM 5
 TKRAZ3 : KEYS -> ROM ADDRESS
 DIV0 : 0 -> S3
 GO TO DIV1
 MUL0 : 0 -> S3
 ***** MUL1 : SELECT ROM 1
 ***** DIV1 : SELECT ROM 1
 SUB1 : 0 - C - 1 -> C[S]
 ***** ADD1 : SELECT ROM 0
 TPL1 : JSB SAV9
 1 -> S3
 0 -> S4
 IF C[S] = 0
 THEN GO TO TPL2
 1 -> S4
 TPL2 : DOWN ROTATE
 JSB EXC1
 IF AC[M] >= 1
 THEN GO TO TPL6
 0 -> C[M]
 C + 1 -> C[P]
 JSB TPL6
 TPL3 : 0 -> S1
 JSB EXCH
 C -> AC[W]
 JSB MUL1
 C -> DATA
 JSB REST
 JSB ADR9
 JSB MUL1
 DATA -> C
 JSB ADD1
 A - 1 -> AC[X]


```

8  L05010: .....
9  L05011: 1.111111
10 L05012: 1.1.1.1.1
11 L05013: 1111111111 -> L5377
12 L05014: 111.1.111.
13 L05015: 1.1.1.1.1
14 L05016: 1.1.111111 -> L5247
15 L05017: 1.1.1.11.11 -> L5246
16 L05020: 1.1.1.1.1 -> L3821
17 L05021: .....
18 L05022: .....
19 L05023: .....
20 L05024: .....
21 L05025: 111.1.1.11 -> L5344
22 L05026: 1.1.1.1.1
23 L05027: 1.1.1.1.1
24 L05030: 1.1.1.1.1 -> L5244
25 L05031: .....1.1.1 -> L5002
26 L05032: 1.111.11.1 -> L5273
27 L05033: 1.1.11.1.1 -> L5055
28 L05034: 1.11.1.111.
29 L05035: .....11.1 -> L5003
30 L05036: 1.1.1.1111 -> L5043
31 L05037: .....
32 L05040: .....
33 L05041: .....
34 L05042: 1.1.1.1.11 -> L5102
35 L05043: 1.111.11.1 -> L5273
36 L05044: 1.11.1.1.1 -> L5062
37 L05045: .....1.1.1 -> L5004
38 L05046: 1.111.11.1 -> L5273
39 L05047: 1.11.1.111.
40 L05050: 1.111.1.1
41 L05051: 1.11.1.111.
42 L05052: .....1.1 -> L5001
43 L05053: 1.111.11.1 -> L5273
44 L05054: 1.1.1.1.11 -> L5020
45 L05055: 1.11.1.111.
46 L05056: 1.1.111.1.1
47 L05057: .....
48 L05060: 1.111111.1
49 L05061: .....11.1.1
50 L05062: 11.1.1.1.1
51 L05063: 1.1.1.1.1
52 L05064: 1.11.1.111.
53 L05065: 1.1.11.1.1
54 L05066: 1.1.1.1.1
55 L05067: 1.1.11.1.1
56 L05070: 1.1.1.1.1.1 -> L5245
57 L05071: .....
58 L05072: .....
59 L05073: .....
60 L05074: .....
61 L05075: .....
62 L05076: .....
63 L05077: .....
64 L05108: .....
65 L05101: 1.11.1.1.1 -> L3102
66 L05102: 1.1.1.1.1
67 L05103: 1.1.1.1.1
68 L05104: .....11.1 -> L5003
69 L05105: 1.11.1.111.
70 L05106: 1.1.1.1.1 -> L5244
71 L05107: .....1.1 -> L5001
72 L05110: 1.111111.1
73 L05111: .....11 -> L5000
74 L05112: 1.1.1.1.1.1 -> L5245
75 L05113: .....1.1 -> L5002
76 L05114: 111.1.111.
77 L05115: 1.1.1.11.1 -> L5246
78 L05116: 1.1.1.1.1
79 L05117: .....1.1 -> L5001
80 L05120: 111.1.111.
81 L05121: 1.11.1.111.
82 L05122: 1.111.1.1

```

```

***** FST2
PW02Z0:
SGMAZ4:
STDBZ4:
SIGI :
REST :
YGET :
TPL0Z4:
TPL0ZJ:
***** SQT1
STDB :

```

```

NO OPERATION
DATA -> C
IF S4 # 1
    THEN GO TO RETNZX
A EXCHANGE C[W]
IF S8 # 1
    THEN GO TO ADD1
GO TO SUB1
SELECT ROM 3
NO OPERATION
NO OPERATION
NO OPERATION
NO OPERATION
GO TO PW02
1 -> S4
0 -> S10
JSB MUL1
JSB ADR6
JSB STOR
JSB REST
C -> AC[W]
JSB ADR7
GO TO SIG1
NO OPERATION
NO OPERATION
NO OPERATION
GO TO STDB
JSB STOR
JSB YGET
JSB ADR8
JSB STOR
0 -> C[W]
C + 1 -> CIP1
C -> AC[W]
JSB ADR5
JSB STOR
GO TO FST2
0 -> C[W]
C -> DATA ADDRESS
NO OPERATION
DATA -> C
RETURN
DOWN ROTATE
C -> STACK
C -> AC[W]
RETURN
0 -> S8
0 -> S9
JSB DIV1
NO OPERATION
SELECT ROM 2
0 -> S10
0 -> S4
JSB ADR7
C -> AC[W]
JSB MUL1
JSB ADR5
IF C[IS1] >= 1
    THEN GO TO ERR2
JSB DIV1
JSB ADR6
A EXCHANGE C[W]
JSB SUB1
C -> STACK
JSB ADR5
A EXCHANGE C[W]
0 -> C[W]
C + 1 -> CIP1

```

83	L05123:	1.1.11.1	-> L5246			JSB SUB1
84	L05124:	.11.1.1.				STACK -> A
85	L05125:	1.1.1.1.1	-> L5245			JSB DIV1
86	L05126:	1.1.1.1.1	-> L5101			JSB SQT1
87	L05127:	.1.1.1.1.				C -> STACK
88	L05130:	.1.1.1.1.1	-> L5203			JSB ADR7
89	L05131:	.11.1.11.				C -> ACWJ
90	L05132:	.1.1.1.1.1	-> L5001			JSB ADR5
91	L05133:	1.1.1.1.1	-> L5241			JSB DIV0
92	L05134:	.1.1.1.1.		RCXY		0 -> 84
93	L05135:	.111.1.1.				IF S7 # 1
94	L05136:	.11.1.1.1	-> L5140			THEN GO TO RXY1
95	L05137:	.1.1.1.1.				C -> STACK
96	L05140:	.11.1.11.		RXY1		C -> ACWJ
97	L05141:	.1.1.1.1.1	-> L5004			JSB ADR0
98	L05142:	.1.1.1.1.				C -> STACK
99	L05143:	.11.1.11.				C -> ACWJ
100	L05144:	.1.1.1.1.1	-> L5003			JSB ADR7
101	L05145:	.111111.11	-> L5176			GO TO FST1
102	L05146:					NO OPERATION
103	L05147:					NO OPERATION
104	L05150:					NO OPERATION
105	L05151:					NO OPERATION
106	L05152:					NO OPERATION
107	L05153:					NO OPERATION
108	L05154:					NO OPERATION
109	L05155:					NO OPERATION
110	L05156:					NO OPERATION
111	L05157:					NO OPERATION
112	L05160:					NO OPERATION
113	L05161:					NO OPERATION
114	L05162:					NO OPERATION
115	L05163:					NO OPERATION
116	L05164:					NO OPERATION
117	L05165:	1.111.11.1	-> L5273	AM10		JSB STOR
118	L05166:	111.1.111.				A EXCHANGE C[WJ
119	L05167:	.11.1.1.	-> L3170	*****		SELECT ROM 3
120	L05170:					NO OPERATION
121	L05171:					NO OPERATION
122	L05172:					NO OPERATION
123	L05173:	11.111.1.1	-> L5334	AM024		JSB STOR
124	L05174:	1.1.1.1.1.				IF 99 # 1
125	L05175:	.111.1.111	-> L5165			THEN GO TO AM10
126	L05176:	.11.1.1.	-> L3177	*****	FST1	SELECT ROM 3
127	L05177:					NO OPERATION
128	L05200:					NO OPERATION
129	L05201:					NO OPERATION
130	L05202:					NO OPERATION
131	L05203:					NO OPERATION
132	L05204:					NO OPERATION
133	L05205:					NO OPERATION
134	L05206:					NO OPERATION
135	L05207:					NO OPERATION
136	L05210:					NO OPERATION
137	L05211:					NO OPERATION
138	L05212:					NO OPERATION
139	L05213:					NO OPERATION
140	L05214:					NO OPERATION
141	L05215:					NO OPERATION
142	L05216:					NO OPERATION
143	L05217:					NO OPERATION
144	L05220:					NO OPERATION
145	L05221:					NO OPERATION
146	L05222:					NO OPERATION
147	L05223:					NO OPERATION
148	L05224:					NO OPERATION
149	L05225:					NO OPERATION
150	L05226:					NO OPERATION
151	L05227:					NO OPERATION
152	L05230:					NO OPERATION
153	L05231:					NO OPERATION
154	L05232:					NO OPERATION
155	L05233:					NO OPERATION
156	L05234:					NO OPERATION
157	L05235:					NO OPERATION

158	L05236:			NO OPERATION
159	L05237:			NO OPERATION
160	L05240:	..1.111..11	-> L5134	RCKYZ4:	GO TO RCKY
161	L05241:	..111..1..		DIV0 :	0 -> S3
162	L05242:	1.1..1.111	-> L5245		GO TO DIV1
163	L05243:	..111..1..		MUL0 :	0 -> S3
164	L05244:	..1..1....	-> L1245	*****	MUL1 : SELECT ROM 1
165	L05245:	..1..1....	-> L1245	*****	DIV1 : SELECT ROM 1
166	L05246:	..1111111.		SUB1 :	0 - C - 1 -> C[S]
167	L05247:1....	-> L0250	*****	ADD1 : SELECT ROM 0
168	L05250:			NO OPERATION
169	L05251:			NO OPERATION
170	L05252:			NO OPERATION
171	L05253:			NO OPERATION
172	L05254:			NO OPERATION
173	L05255:			NO OPERATION
174	L03256:			NO OPERATION
175	L05257:			NO OPERATION
176	L05260:	..11.1..1.		DVDF :	0 -> C[M]P
177	L05261:	..1.111..1.			C - 1 -> C[M]P
178	L05262:	..11.11.1.			0 -> C[X]S
179	L05263:	..1..1....	-> L2264	*****	SELECT ROM 2
180	L05264:	1.11..11	-> L5268	DVGFZ2:	GO TO DVDF
181	L05265:	..11.1..1.		OFL1 :	0 -> C[M]P
182	L05266:	..1.111..1.			C - 1 -> C[M]P
183	L05267:	..11.11.1.			0 -> C[X]S
184	L05270:	111..1.1.			A + B -> C[X]
185	L05271:	1.11.1111	-> L5273		IF NO CARRY GO TO STOR
186	L05272:	..11..111.			0 -> C[W]
187	L05273:	..11..111		STOR :	C -> A[W]
188	L05274:	11....11..		OFL4 :	12 -> P
189	L05275:	..1..1.1.1.			A -> B[X]
190	L05276:	..11....1.1.			C -> A[X]
191	L05277:	..11.111.1.			IF C[X]S = 0
192	L05300:	11....1..11	-> L5304		THEN GO TO OFL5
193	L05301:	..1.1.1.1.			0 - C -> C[X]
194	L05302:	..1.1111.1.			C - 1 -> C[X]S
195	L05303:	1.11.1.111	-> L5265		IF NO CARRY GO TO OFL1
196	L05304:	111.11.11.		OFL5 :	A EXCHANGE C[M]P
197	L05305:	1.11111..			DATA -> C
198	L05306:	111.1.111.			A EXCHANGE C[W]
199	L05307:	1.1111....			C -> DATA
200	L05310:11....			RETURN
201	L05311:			NO OPERATION
202	L05312:			NO OPERATION
203	L05313:			NO OPERATION
204	L05314:			NO OPERATION
205	L05315:			NO OPERATION
206	L05316:			NO OPERATION
207	L05317:			NO OPERATION
208	L05320:			NO OPERATION
209	L05321:			NO OPERATION
210	L05322:			NO OPERATION
211	L05323:			NO OPERATION
212	L05324:			NO OPERATION
213	L05325:			NO OPERATION
214	L05326:			NO OPERATION
215	L05327:			NO OPERATION
216	L05330:			NO OPERATION
217	L05331:			NO OPERATION
218	L05332:			NO OPERATION
219	L05333:			NO OPERATION
220	L05334:	..1..1.1..		DCOD :	IF S4 # 1
221	L05335:	111....111	-> L5341		THEN GO TO DCD1
222	L05336:	..11..1.1..			IF S6 # 1
223	L05337:	1.1..11.11	-> L5246		THEN GO TO SUB1
224	L05340:	1.1..11111	-> L5247		GO TO ADD1
225	L05341:	..11..11..		DCD1 :	IF S6 # 1
226	L05342:	1.1..1.111	-> L5245		THEN GO TO DIV1
227	L05343:	1.1..1..11	-> L5244		GO TO MUL1
228	L05344:	..11..111.		PW02 :	0 -> C[W]
229	L05345:	..1.111111.			C - 1 -> C[S]
230	L05346:	..1..11..			2 -> P
231	L05347:	..1..11....			LOAD CONSTANT 2
232	L05350:	..1.1.1....			C EXCHANGE M

233 L05351: . . 11 . 111.
 234 L05352: 1 111 111.
 235 L05353: 11 . . . 11 . .
 236 L05354: . 1 11 . . 11 . .
 237 L05355: 1 . 111
 238 L05356: 111 1 111 . . .
 239 L05357: . 1 . 1 1
 240 L05358: 1 1111
 241 L05361: 111 1 111 . . .
 242 L05362: . 1111 . . 1 .
 243 L05363: . 1111 . . 1 .
 244 L05364: 111 11 . 11 -> L5354
 245 L05365: 111111 11 -> L5176
 246 L05366: . . 11 . 111 .
 247 L05367: . 11 . 11 . . .
 248 L05370: 111 1 1 11 -> L5352
 249 L05371:
 250 L05372:
 251 L05373:
 252 L05374:
 253 L05375:
 254 L05376:
 255 L05377: 11

0 -> C[W]
 CLR2 : 0 -> A[W]
 12 -> P
 CLR3 : C - 1 -> C[P]
 C -> DATA ADDRESS
 A EXCHANGE C[W]
 C -> STACK
 C -> DATA
 A EXCHANGE C[W]
 C + 1 -> C[P]
 C + 1 -> C[P]
 IF NO CARRY GO TO CLR3
 GO TO FST1
 CLR124: 0 -> C[W]
 LOAD CONSTANT S
 GO TO CLR2
 NO OPERATION
 NO OPERATION
 NO OPERATION
 NO OPERATION
 NO OPERATION
 NO OPERATION
 RETNZX: RETURN

ROM 6

0 L6000: 1 1111 . 11 -> L6274
 1 L6001: 11111 -> L6007
 2 L6002: 11 1
 3 L6003: 1111111111 -> L6177
 4 L6004: 1111111 1
 5 L6005: 1111111 11 -> L6176
 6 L6006: 1111 1 . . . 1 -> L6364
 7 L6007: . 11 . 111
 8 L6010: 11 1
 9 L6011: . 1 1 . . . 1
 10 L6012: 11 . . . 111
 11 L6013: 1 1 1 1 1
 12 L6014: 111 1 111
 13 L6015: . . . 11 . 111 -> L6031
 14 L6016: 1 11 1 1 11
 15 L6017: 11111 1 1 1
 16 L6020: 111 11 -> L6016
 17 L6021: 11 1 . . 11
 18 L6022: 11 . 111 1 1
 19 L6023: 1 . . 111 1 1
 20 L6024: 111
 21 L6025: . . 1 1 1 11
 22 L6026: . . 1 11 111 -> L6055
 23 L6027: 1 111 1 111
 24 L6030: 11 11 1 1 1
 25 L6031: 1 111
 26 L6032: 1 1
 27 L6033: . . 1 . . 11
 28 L6034: . 1 . 111 1 1
 29 L6035: . 11 . . . 11
 30 L6036: . 1 . . 1 11
 31 L6037: 1 . 11 . . 1
 32 L6040: . . 1 . . 111 -> L6021
 33 L6041: 1 . . 1 . . 1
 34 L6042: 111 . . . 11
 35 L6043: . 11 . . 1 1
 36 L6044: . . 1111 1 1
 37 L6045: 111 11 -> L6016
 38 L6046: 111
 39 L6047: . 1 1 1 11
 40 L6050: . . 1 1 1 11 -> L6052
 41 L6051: . . . 1 11111 -> L6027
 42 L6052: 11 11 1 1 1
 43 L6053: . . 1 . 11 11 -> L6046
 44 L6054: . . 1 . 1 1 11 -> L6022
 45 L6055: 11 1111 1 1
 46 L6056: . . 1 1 . 11 -> L6024
 47 L6057: . 1 . 1 . . 1
 48 L6060: 111
 49 L6061: 1 1111 1 1

FACT24: GO TO FACT
 ERR221: GO TO ERRL
 TDMSZ0: CLEAR STATUS
 GO TO TDMSZJ
 OFLW : C + 1 -> C[X]S
 JSB FST1
 TENXZJ: JSB TNX3
 ERRL : 0 -> C[W]
 CLEAR STATUS
 1 -> S5
 RND023: C -> A[W]
 M -> C
 A EXCHANGE C[W]
 GO TO RNDX
 RND3 : SHIFT RIGHT A[X]S
 A + 1 -> A[X]
 IF NO CARRY GO TO RND3
 RND4 : 13 -> P
 RND5 : A EXCHANGE B[X]S
 A -> B[X]S
 RND6 : P - 1 -> P
 IF P # 2
 THEN GO TO RND7
 RNOF : 0 -> A[W]
 A - 1 -> A[X]
 RNDX : 0 -> B[W]
 1 -> S8
 1 -> P
 A -> B[X]S
 C -> A[M]
 SHIFT LEFT A[X]S
 IF ACPJ >= 1
 THEN GO TO RND4
 0 -> S8
 14 -> P
 C -> A[X]
 IF C[X]S >= 1
 THEN GO TO RND3
 RND1 : P - 1 -> P
 IF P # 2
 THEN GO TO RND2
 GO TO RNOF
 RND2 : A - 1 -> A[X]
 IF NO CARRY GO TO RND1
 GO TO RND5
 RND7 : A - 1 -> A[X]S
 IF NO CARRY GO TO RND5
 A -> B[P]
 P - 1 -> P
 0 -> ACPJ

125 L6175: .11...1...1 -> L6144
 126 L6176: .11...1...1 -> L3177
 127 L6177: ...11...1.1 -> L6031
 128 L6200: .11...1...1 -> L3201
 129 L6201: .1...111.
 130 L6202: .1...111.
 131 L6203: .111.11...1 -> L6166
 132 L6204: 11.1111.1.
 133 L6205: 1...11111 -> L6207
 134 L6206: .11111...11 -> L6174
 135 L6207: 11.1111.1.
 136 L6210: 1...11.111 -> L6215
 137 L6211: ...1...11...
 138 L6212: .1.1.11...
 139 L6213: .1...11...
 140 L6214: .111111.11 -> L6176
 141 L6215: 11.1111.1.
 142 L6216: 1...11...111 -> L6231
 143 L6217: .1...11...
 144 L6220: .1.1.11...
 145 L6221: ...11.11...
 146 L6222: .1.1.11...
 147 L6223: 1...1.11...
 148 L6224: ...1...11...
 149 L6225: ...11.11...
 150 L6226: .111.11...
 151 L6227: .1.11.1.1.
 152 L6230: .111111...1 -> L6176
 153 L6231: ...11.11...
 154 L6232: .111.11...
 155 L6233: 1...11...
 156 L6234: .1.1.11...
 157 L6235: .1...11...
 158 L6236: ...1.11...
 159 L6237: ...1.11...
 160 L6240: .111.11...
 161 L6241: 1...11...
 162 L6242: .1...11...
 163 L6243: .111111.11 -> L6176
 164 L6244: ...11...
 165 L6245: .1...111.
 166 L6246: ...1111...
 167 L6247: 11...1.11...
 168 L6250: 1.1...1.111 -> L6245
 169 L6251: 1.1111111.
 170 L6252: 111.1.111.
 171 L6253: 1...111...
 172 L6254: ...1.1.1...
 173 L6255: 1.1111...
 174 L6256: 111.1.111.
 175 L6257: 1.111...1...
 176 L6260: ...1.111.
 177 L6261: ...1.1.1...
 178 L6262: 11111.1111 -> L6273
 179 L6263: .11...1.111 -> L6145
 180 L6264: .1...1.111.
 181 L6265: 111.1.111.
 182 L6266: ...11...111.
 183 L6267: 1...111...
 184 L6270: ...1...111.
 185 L6271: 111.1.111.
 186 L6272: 1.1111...
 187 L6273: .11...1...11 -> L6144
 188 L6274: ...111111.
 189 L6275: ...11111 -> L6007
 190 L6276: ...1111.1...
 191 L6277: ...11111 -> L6007
 192 L6300: ...11.1.1.
 193 L6301: 11...1...11 -> L6304
 194 L6302: ...111...
 195 L6303: 11...1.1111 -> L6313
 196 L6304: ...111...
 197 L6305: ...111.11...
 198 L6306: 11...1...11 -> L6310
 199 L6307: ...1...1.11 -> L6004
 200 L6310: .1.11.1.1.

JSB SAV2ZX
 ***** FST1 : SELECT ROM 3
 TBNSZJ: JSB RNDX
 ***** FST2 : SELECT ROM 3
 CONS : SHIFT LEFT ACWJ
 SHIFT LEFT ACWJ
 JSB PUSH
 A - 1 -> ACXJ
 IF NO CARRY GO TO CON7
 GO TO LSTXZJ
 CON7 : A - 1 -> ACXJ
 IF NO CARRY GO TO CONS
 LOAD CONSTANT 2
 LOAD CONSTANT 5
 LOAD CONSTANT 4
 GO TO FST1
 CONS : A - 1 -> ACXJ
 IF NO CARRY GO TO CON9
 LOAD CONSTANT 4
 LOAD CONSTANT 5
 LOAD CONSTANT 3
 LOAD CONSTANT 5
 LOAD CONSTANT 9
 LOAD CONSTANT 2
 LOAD CONSTANT 3
 LOAD CONSTANT 7
 C - 1 -> CLKJ
 JSB FST1
 CON9 : LOAD CONSTANT 3
 LOAD CONSTANT 7
 LOAD CONSTANT 8
 LOAD CONSTANT 5
 LOAD CONSTANT 4
 LOAD CONSTANT 1
 LOAD CONSTANT 1
 LOAD CONSTANT 7
 LOAD CONSTANT 8
 LOAD CONSTANT 4
 GO TO FST1
 SAV2 : 0 -> P
 SAV1 : SHIFT LEFT ACWJ
 P + 1 -> P
 IF P # 12
 THEN GO TO SAV1
 0 -> ACSJ
 A EXCHANGE CCWJ
 C -> DATA ADDRESS
 0 -> S2
 DATA -> C
 A EXCHANGE CCWJ
 0 -> S11
 0 -> SCWJ
 IF S1 # 1
 THEN GO TO SVRT
 GO TO ABR924
 SAVE : A -> SCWJ
 A EXCHANGE CCWJ
 0 -> CCWJ
 C -> DATA ADDRESS
 B -> CCWJ
 A EXCHANGE CCWJ
 C -> DATA
 GO TO SAV2ZX
 FACT : IF CCSI >= 1
 THEN GO TO ERRR
 IF CCXJ >= 1
 THEN GO TO ERRR
 FAC0 : IF CIXJ >= 1
 THEN GO TO FAC1
 P - 1 -> P
 GO TO FACT1
 FAC1 : P - 1 -> P
 IF P # 3
 THEN GO TO FAC2
 GO TO OFLW
 FAC2 : C - 1 -> CCXJ

201	L6311:	11.....1	-> L6300		
202	L6312:	.1...1....	-> L2313	*****	NRM20 :
203	L6313:	...111...1			FACT1 :
204	L6314:11111	-> L6007		IF C[W] >= 1
205	L6315:	111.1.1.1.			THEN GO TO ERRR
206	L6316:	1.11...11..			A EXCHANGE C[X]
207	L6317:	.11.1.1.1.			11 -> P
208	L6320:	11.1.1.111	-> L6325		IF C[X] = 0
209	L6321:	.1.11.1.1.			THEN GO TO FACT2
210	L6322:	...11.1.1.			C - 1 -> C[X]
211	L6323:	...1.1.1.11	-> L6004		IF C[X] >= 1
212	L6324:	.1....111.			THEN GO TO OFLW
213	L6325:	111.1.111.		FACT2 :	SHIFT LEFT A[W]
214	L6326:	1.111.111.			A EXCHANGE C[W]
215	L6327:	11111...1.			0 -> A[W]
216	L6330:	...1.1.111.			A + 1 -> ACP]
217	L6331:	11...1.1.11	-> L6312		0 - C -> C[W]
218	L6332:	111.1.111.			IF NO CARRY GO TO NRM20
219	L6333:	1...1...111.			A EXCHANGE C[W]
220	L6334:	.11111111.			SHIFT RIGHT C[W]
221	L6335:	11....11..		FACT3 :	C + 1 -> C[S]
222	L6336:	.1...11.11.			12 -> P
223	L6337:	1111...111.		FACT4 :	A -> B[NS]
224	L6340:	11.1111111	-> L6337		A + C -> A[W]
225	L6341:	11.1...111.			IF NO CARRY GO TO FACT4
226	L6342:	.1....111.			A - C -> A[W]
227	L6343:	1111...111.		FACT5 :	SHIFT LEFT A[W]
228	L6344:	111...1111	-> L6343		A + C -> A[W]
229	L6345:	111111111.			IF NO CARRY GO TO FACT5
230	L6346:	11...1.111.			A + 1 -> A[S]
231	L6347:	1111.11...1	-> L6366		A EXCHANGE B[W]
232	L6350:	1.11...11..			JSB SHFT
233	L6351:	1111.11...1	-> L6366		11 -> P
234	L6352:	...1...111.			JSB SHFT
235	L6353:	...11...1.			B -> C[W]
236	L6354:	1.1...111.			0 -> B[W]
237	L6355:	11...1.111.			SHIFT RIGHT B[W]
238	L6356:	111...1.11.			A EXCHANGE B[W]
239	L6357:	11.111.111	-> L6335		A + B -> A[NS]
240	L6360:	111.1.111.			IF NO CARRY GO TO FACT3
241	L6361:	1...1.1.1.			A EXCHANGE C[W]
242	L6362:	.1111.1.1.		FACT6 :	B EXCHANGE C[X]
243	L6363:	11...1.1.1	-> L6312		C + 1 -> C[X]
244	L6364:	1...1...1..		FACT7 :	JSB NRM20
245	L6365:	.1...1....	-> L2366	*****	TNX3 :
246	L6366:1.			0 -> S8
247	L6367:	11111.1.11	-> L6372	SHFT :	SELECT ROM 2
248	L6370:	1.1...1.1.			IF BCP] = 0
249	L6371:	11111.1.1.			THEN GO TO SHFR
250	L6372:11....			SHIFT RIGHT BCP]
251	L6373:	1.1...1.1.		SHFR :	A + 1 -> A[X]
252	L6374:	1111111.11	-> L6376	SVRT :	RETURN
253	L6375:	1...1....	-> L4376	*****	IF S10 # 1
254	L6376:	.11...1....	-> L3377	*****	THEN GO TO RET3
255	L6377:		RET4 :	SELECT ROM 4
				*****	RET3 :
					SELECT ROM 3
					NO OPERATION

ROM 7

0	L7000:1.111	-> L7005	PRFX :	GO TO WT22
1	L7001:	1.1...1.11	-> L7242	WT30 :	GO TO WT29
2	L7002:1.111	-> L7005	FIX1 :	GO TO WT22
3	L7003:1.111	-> L7005	EXPN :	GO TO WT22
4	L7004:1.111	-> L7005	LNNH :	GO TO WT22
5	L7005:11.111	-> L7015	WT22 :	GO TO WT21
6	L7006:1.111	-> L7005	INVX :	GO TO WT22
7	L7007:	...1...111	-> L7021	WT18 :	GO TO WT17
8	L7010:1.111	-> L7005	PERC :	GO TO WT22
9	L7011:	1.1...11111	-> L7247	WT09 :	GO TO WT08
10	L7012:1.111	-> L7005	RCAL :	GO TO WT22
11	L7013:1.111	-> L7005	STOR :	GO TO WT22
12	L7014:1.111	-> L7005	ROLD :	GO TO WT22
13	L7015:	1.1...1.11	-> L7244	WT21 :	GO TO WT20
14	L7016:1.111	-> L7005	EXC1 :	GO TO WT22
15	L7017:	1...1.11...		REG9 :	LOAD CONSTANT 9
16	L7020:	1...1...1111	-> L7223		GO TO REGA
17	L7021:	1.1...1.111	-> L7245	WT17 :	GO TO WT16

```

18 L7022: . . 11 . . . 11 -> L7060
19 L7023: . . . 11111111 -> L7037
20 L7024: . 1 . . . 11 . . .
21 L7025: . 11111 . 111 -> L7175
22 L7026: . . . . . 1 . 111 -> L7005
23 L7027: 1 . . . 11 . . .
24 L7030: 1 . . 1 . . 1111 -> L7223
25 L7031: 1 . 1 . 1 . . 11 -> L7250
26 L7032: . 1111 . 1 . 11 -> L7172
27 L7033: . 11111 . 11 -> L7174
28 L7034: . . . 1 . 11 . . .
29 L7035: . 11111 . 111 -> L7175
30 L7036: . . . . . 1 . 111 -> L7005
31 L7037: . 1 . 1 . 11 . . .
32 L7040: 1 . . 1 . . 1111 -> L7223
33 L7041: . . 1 . . 11111 -> L7047
34 L7042: 1 . . 1 . . . 11 -> L7220
35 L7043: 11 . 1 . . 111 -> L7321
36 L7044: . . . . . 11 . . .
37 L7045: . 11111 . 111 -> L7175
38 L7046: . . . . . 1 . 111 -> L7005
39 L7047: . . . . 1 . . 111 -> L7011
40 L7050: . . . . . 1 . 111 -> L7005
41 L7051: . . 1 . 11 . 111 -> L7055
42 L7052: . . . . . 1 . 111 -> L7005
43 L7053: . . . . . 1 . 111 -> L7005
44 L7054: . . . . . 1 . 111 -> L7005
45 L7055: . . 1 . 111111 -> L7057
46 L7056: . . . . . 1 . 111 -> L7005
47 L7057: . . 11 . 11111 -> L7067
48 L7060: . 11 . . 11 . . .
49 L7061: 1 . . 1 . . 1111 -> L7223
50 L7062: . . . . 111111 -> L7017
51 L7063: . . . 1 . 11111 -> L7027
52 L7064: . 111 . 11 . . .
53 L7065: . 11111 . 111 -> L7175
54 L7066: . . . . . 1 . 111 -> L7005
55 L7067: 111111 . 111 -> L7375
56 L7070: 1 . 111 . 111 .
57 L7071: . . . . 11 . 1 . 1 -> L7015
58 L7072: . 111 . 1 . . 11 -> L7164
59 L7073: 1 . . . 111 . 11 -> L7216
60 L7074: . 111 . . 1 . 11 -> L7162
61 L7075: . 11 . . 1 . . . -> L3076
62 L7076: 1 . . 1 . 1 . 1 .
63 L7077: . . 1111 . 111 -> L7075
64 L7100: . . . . 11 . 1 .
65 L7101: . . . 111111 .
66 L7102: 1111111 . 11 -> L7376
67 L7103: . 1 . 11 . 1 . 1 .
68 L7104: . . 1 . 11 . 1 . 1 .
69 L7105: . 11 . 111 . 1 .
70 L7106: 1111111 . 11 -> L7376
71 L7107: . 1 . . 1 . . 111 -> L7111
72 L7110: 1 . . 1 . . 11 .
73 L7111: . 1111 . 1 . 1 .
74 L7112: . 1 . . 1 . . 11 -> L7110
75 L7113: 111 . 1 . 111 .
76 L7114: 1 . 1 . 1 . 1 . .
77 L7115: . . . 1 . 11 . . .
78 L7116: . . 11 . 11 . . .
79 L7117: . . . 1 . . . 11 .
80 L7120: 1111111 . 11 -> L7376
81 L7121: . 11 . . 11 . . .
82 L7122: 1 . 1 . . 11 . .
83 L7123: . . . 1 . . . 1 .
84 L7124: 1111111 . 11 -> L7376
85 L7125: 1 . . . . 11 . .
86 L7126: 1 . 11 . 1 . 1 .
87 L7127: . 111 . . 11 . .
88 L7130: . 11 . . 11 . . .
89 L7131: . 111 . . 11 . .
90 L7132: . . . 1 . . . 1 .
91 L7133: 1111111 . 11 -> L7376
92 L7134: . . 1 . 1 . 1 . .
93 L7135: . 1 . 1 . . 11 . .

```

```

DIG6 : GO TO REG6
DIG5 : GO TO REG5
DIG4 : LOAD CONSTANT 4
      GO TO REG1
ADDD : GO TO WT22
REG8 : LOAD CONSTANT 8
      GO TO RECA
WT06 : GO TO WT05
DIG3 : GO TO REG3
DIG2 : GO TO REG2
DIG1 : LOAD CONSTANT 1
      GO TO REG1
MULT : GO TO WT22
REG5 : LOAD CONSTANT 5
      GO TO RECA
WT11 : GO TO WT10
SIGP : GO TO CHS3
DCPT : GO TO RETN
DIG0 : LOAD CONSTANT 0
      GO TO REG1
DIVD : GO TO WT22
WT10 : GO TO WT09
TANG : GO TO WT22
DL36 : GO TO DL95
COSS : GO TO WT22
SINH : GO TO WT22
TPOL : GO TO WT22
DL05 : GO TO DL04
SQAR : GO TO WT22
DL04 : GO TO DL03
REG6 : LOAD CONSTANT 6
      GO TO REGA
DIG9 : GO TO REG9
DIG8 : GO TO REG8
DIG7 : LOAD CONSTANT 7
      GO TO REG1
SUBT : GO TO WT22
DL03 : GO TO RTRN
CLR X : 0 -> ACWJ.
      JSB WT21
EEXX : GO TO EEX1
CHS1 : GO TO CHS2
CLOK : GO TO CHS4
***** ENT1 : SELECT ROM 3
ENT123: IF S9 # 1
      THEN GO TO ENT1
INIT : CLEAR STATUS
      IF C[SJ] >= 1
      THEN GO TO ERR2
      C - 1 -> C[X]
      C - 1 -> C[X]
      IF C[XS] = 0
      THEN GO TO ERR2
      GO TO INT2
INT1 : SHIFT RIGHT C[M]
INT2 : C + 1 -> C[X]
      IF NO CARRY GO TO INT1
INT3 : A EXCHANGE C[M]
      M -> C
      LOAD CONSTANT 1
      LOAD CONSTANT 3
      IF A >= C[M]
      THEN GO TO ERR2
      LOAD CONSTANT 6
      10 -> P
      IF A >= C[P]
      THEN GO TO ERR2
      8 -> P
      SHIFT RIGHT A[W]
      7 -> P
      LOAD CONSTANT 6
      7 -> P
      IF A >= C[P]
      THEN GO TO ERR2
      C EXCHANGE M
      5 -> P

```

```

94 L7136: 1.11.1.1.1
95 L7137: 1.11.1.1.1
96 L7140: 1.11.1.1.1
97 L7141: 1.11.1.1.1
98 L7142: 11.1.111.1
99 L7143: 11.111.1.1
100 L7144: 1.111.1.1.1
101 L7145: 1.1.1.1.1
102 L7146: 11.11.1.1.1
103 L7147: 1.11.1.1.1
104 L7150: 11111.1.1.1
105 L7151: 11111.1.1.1
106 L7152: 11.111111.1.1
107 L7153: 11.1.1.111.1
108 L7154: 1.1.1.1.1
109 L7155: 1.1.1.1.1 -> L7051
110 L7156: 1.1.1.1.1 -> L7051
111 L7157: 1.1.1.1.1
112 L7160: 1.1.1.1.11 -> L7214
113 L7161: 1.1.1.11.11 -> L7246
114 L7162: 1.1.1.1.1.1
115 L7163: 1.1.1.1.11 -> L7244
116 L7164: 1.1.1.1.1.1
117 L7165: 1.1.1.1.11 -> L7210
118 L7166: 1.1.1.1.1.1
119 L7167: 1.1.1.11111 -> L7007
120 L7170: 1.1.1.1.1.1
121 L7171: 1.1.1.1.1.1
122 L7172: 1.11.11.1.1
123 L7173: 1.1.1.1111 -> L7223
124 L7174: 1.1.1.11.1.1
125 L7175: 1.1.1.1.1111 -> L7223
126 L7176: 1.11.1.1.1.1 -> L3177
127 L7177: 1.1.1.1.1.1
128 L7200: 1.1.1.1.111 -> L7001
129 L7201: 1.1.1.1.1.1
130 L7202: 1.11.11.1.11 -> L7154
131 L7203: 1.1.1.1.1.1
132 L7204: 1.1.1.1.1.1
133 L7205: 11.1.1.1.1.1
134 L7206: 1.11.1.111.1
135 L7207: 1.11.1.1.1.1
136 L7210: 11.1.1.1.1.1
137 L7211: 11.11.1.1.1.1
138 L7212: 11.1.1.1.1.1
139 L7213: 1.1.1.1.111 -> L7245
140 L7214: 1.1.1.1.1.1
141 L7215: 1.1.1.1.111 -> L7041
142 L7216: 1.1.1.1.1.1
143 L7217: 1.111.1.1.11 -> L7162
144 L7220: 1.1.1.1.1.1
145 L7221: 1.1.111.1.1.1
146 L7222: 1.1.1.11.1.11 -> L7226
147 L7223: 1.1.111.1.1.1
148 L7224: 1.1.1.1.1.1
149 L7225: 1.1.11.11111 -> L7233
150 L7226: 111.1.111.1.1
151 L7227: 1.1.1.1.111.1
152 L7230: 1.1.1.1.11.1
153 L7231: 1.1111.1.1.1
154 L7232: 1.1.1.11.1.11 -> L7246
155 L7233: 1.11111.1.1.1
156 L7234: 11.1.1.1.1.1
157 L7235: 1.11.1.1.1.1
158 L7236: 1.1.1.1.111 -> L7240
159 L7237: 1.11.1.111.1
160 L7240: 111.1.1.111.1
161 L7241: 1.1.1.1.11.1
162 L7242: 1.1.1.11.1.1.1 -> L7055
163 L7243: 1.1.1.1111.1 -> L7057
164 L7244: 1.1.1.1111.1 -> L7057
165 L7245: 1.1.1.1111.1 -> L7057
166 L7246: 1.1.1.1111.1 -> L7057
167 L7247: 1.11.1.111.1 -> L7067
168 L7250: 1.1.1.1.1.1
169 L7251: 1.1.1.1.1.1

```

```

SHIFT RIGHT ACWJ
SHIFT RIGHT ACWJ
SHIFT RIGHT ACWJ
SHIFT RIGHT ACWJ
A EXCHANGE BCWJ
A - 1 -> ACWJ
0 -> ACXJ
8 -> P
A - 1 -> ACPJ
11 -> P
A + 1 -> ACPJ
A + 1 -> ACPJ
A - 1 -> ACSJ
A EXCHANGE BCWJ
KEY2 : 0 -> S0
JSB DL05
JSB DL06
IF S0 # 1
THEN GO TO KEY3
GO TO WT12
CHS4 : 1 -> S10
GO TO WT20
EEX1 : IF BCXJ = 0
THEN GO TO EEX2
0 -> BCXJ
GO TO WT18
NO OPERATION
NO OPERATION
REG3 : LOAD CONSTANT 3
GO TO REGA
REG2 : LOAD CONSTANT 2
REG1 : GO TO REGA
***** FST1 : SELECT ROM 3
KEY1 : IF S0 # 1
THEN GO TO WT30
IF S0 # 1
THEN GO TO KEY2
DISPLAY OFF
0 -> S8
12 -> P
0 -> CWJ
KEYS -> ROM ADDRESS
EEX2 : A EXCHANGE BCXJ
A - 1 -> ACXJ
A EXCHANGE BCXJ
GO TO WT16
KEY3 : 1 -> S8
GO TO WT11
CHS2 : IF S10 # 1
THEN GO TO CHS4
CHS3 : 0 -> S10
C -> DATA ADDRESS
GO TO CHS5
REGA : C -> DATA ADDRESS
IF S10 # 1
THEN GO TO REGB
CHS5 : A EXCHANGE CWJ
C -> ACWJ
SHIFT RIGHT CCWJ
C -> DATA
GO TO WT12
REGB : DATA -> C
12 -> P
IF CCWJ = 0
THEN GO TO REGC
0 -> CWJ
REGC : A EXCHANGE CWJ
SHIFT LEFT ACMSJ
WT29 : JSB DL05
WT24 : JSB DL04
WT20 : JSB DL04
WT16 : JSB DL04
WT12 : JSB DL04
WT08 : JSB DL03
WT05 : M -> C
DISPLAY OFF

```

```

170 L7252: ....1.1...
171 L7253: 1.1...1.1...
172 L7254: .1111111111 -> L7177
173 L7255: ...1...11...
174 L7256: 111111...1.
175 L7257: .1111111111 -> L7177
176 L7260: 11...11...
177 L7261: 11111...1.
178 L7262: 1.1...1.11 -> L7242
179 L7263: .111...11...
180 L7264: 11111...1.
181 L7265: ...1...1.1...
182 L7266: 1.111...11 -> L7270
183 L7267: 1.1...1111 -> L7243
184 L7270: 1.1111...1.
185 L7271: 1.1...11...
186 L7272: 11111...1.
187 L7273: ...11.111 -> L7015
188 L7274: 1.1...11...
189 L7275: 11111...1.
190 L7276: ...1...1.1...
191 L7277: 11...1.111 -> L7301
192 L7300: 1.1...1.111 -> L7245
193 L7301: ...11.1...1.
194 L7302: 1.1111...1.
195 L7303: 1.11...11...
196 L7304: 11111...1.
197 L7305: 11...1.1.11 -> L7312
198 L7306: 1.111.111.
199 L7307: 11...11...
200 L7310: 11111...1.
201 L7311: 1.1...11111 -> L7247
202 L7312: ...1...11.
203 L7313: 11...11.111 -> L7315
204 L7314: ...1...1111 -> L7011
205 L7315: 1.111.111.
206 L7316: 1.11...11...
207 L7317: 11111...1.
208 L7320: ...11...111 -> L7031
209 L7321: 1.1.1.1...
210 L7322: ...11.1...1.
211 L7323: ...1...11...
212 L7324: .....1.1.
213 L7325: 11.11...11 -> L7330
214 L7326: .1...11...
215 L7327: 11.11...111 -> L7331
216 L7330: .11...11...
217 L7331: ...1.1.1...
218 L7332: ...11...111.
219 L7333: 11...11...
220 L7334: ...1.111.
221 L7335: 1...111...
222 L7336: 1...1.111.
223 L7337: 1.11111...
224 L7340: ...11...1.
225 L7341: 111...1...11 -> L7344
226 L7342: 111.1.11.1 -> L7353
227 L7343: 1.1111...
228 L7344: 1...1.111.
229 L7345: .1111...1.
230 L7346: 11.111.111 -> L7335
231 L7347: 1.11...11.
232 L7350: 111.1.111.
233 L7351: 111.1.11.1 -> L7353
234 L7352: .111111.11 -> L7176
235 L7353: .11...11...
236 L7354: 111111.111 -> L7375
237 L7355: 111.1.111.
238 L7356: .1...111.
239 L7357: 1...11...
240 L7360: .1...1.1.1.
241 L7361: .11...11...
242 L7362: .1...1.1.1.

```

```

DISPLAY TOGGLE
IF S10 # 1
  THEN GO TO KEY1
TIM0 : 1 -> P
      A + 1 -> ACPJ
      IF NO CARRY GO TO KEY1
      C -> P
      A + 1 -> ACPJ
      IF NO CARRY GO TO WT23
      ? -> P
      A + 1 -> ACPJ
      IF A >= CIPJ
        THEN GO TO TIM1
      GO TO WT24
TIM1 : 0 -> ACPJ
      9 -> P
      A + 1 -> ACPJ
      IF NO CARRY GO TO WT21
      10 -> P
      A + 1 -> ACPJ
      IF A >= CIPJ
        THEN GO TO TIM2
      GO TO WT16
TIM2 : 0 -> CACPJ
      0 -> ACPJ
      11 -> P
      A + 1 -> ACPJ
      IF NO CARRY GO TO TIM3
      0 -> ACWJ
      12 -> P
      A + 1 -> ACPJ
      IF NO CARRY GO TO WT08
TIM3 : IF A >= CCMJ
      THEN GO TO TIM4
      GO TO WT09
TIM4 : 0 -> ACWJ
      11 -> P
      A + 1 -> ACPJ
      IF NO CARRY GO TO WT06
RETN : M -> C
      0 -> CACPJ
      2 -> P
      IF BCKJ = 0
        THEN GO TO RET1
      LOAD CONSTANT 4
      GO TO RET2
RET1 : LOAD CONSTANT 6
RET2 : C EXCHANGE M
      0 -> CCMJ
      12 -> P
      0 -> BCMJ
      C -> DATA ADDRESS
      B EXCHANGE CCMJ
      DATA -> C
      IF CIPJ >= 1
        THEN GO TO RET4
      JSB FIXX
      C -> DATA
RET4 : B EXCHANGE CCMJ
      C + 1 -> CIPJ
      IF NO CARRY GO TO RET3
      SHIFT RIGHT ACMJ
      A EXCHANGE CCMJ
      JSB FIXX
      GO TO FST1
FIXX : IF CCMJ = 0
      THEN GO TO RTRN
      A EXCHANGE CCMJ
      SHIFT LEFT ACWJ
      0 -> P
      SHIFT LEFT ACPJ
      6 -> P
      SHIFT LEFT ACPJ

```

243 L7363: .1...1...1.
 244 L7364: .1...1...1.
 245 L7365: 11...11...
 246 L7366: 11111.1.1.
 247 L7367: 1...11...1.
 248 L7370: 111111...11 -> L7374
 249 L7371: 11.11.1.1.
 250 L7372: .1.....11.
 251 L7373: 1111.11111 -> L7367
 252 L7374: 111.1.111.
 253 L7375:11...
 254 L7376: ..11...111.
 255 L7377: .1..1.11.1 -> L7113

SHIFT LEFT ACWJ
 SHIFT LEFT ACWJ
 12 -> P
 A + 1 -> ACXJ
 FIX2 : IF ACWJ >= 1
 THEN GO TO FXRT
 A - 1 -> ACXJ
 SHIFT LEFT ACWJ
 GO TO FIX2
 FXRT : A EXCHANGE CWJ
 RTRN : RETURN
 ERR2 : 0 -> CWJ
 JSB INT3

OPERATING INSTRUCTIONS

All of the operations described below are controlled or initiated from the keyboard input unit 12 which is shown in FIG. 1.

Fundamental Operations

Getting Started

Slide the power switch to ON. The display blinks when an improper operations is made. The blinking will stop as soon as



is pressed and you may enter a new problem.

Keyboard


Almost every key performs two distinct functions. The symbol for the primary function appears on the key, and the symbol for the alternate function appears above the key like this



To use the primary function, merely press the selected key; to use the alternate function, press the prefix key 110 before pressing the associated key like this



Alternate functions are indicated like this



throughout the following pages.


Key In And Entering Numbers

Each time a number key is pressed, that number appears left-justified on the display in the order as pressed. Note that a decimal point symbol is included with the number entry keys; it must be keyed in if it is

15

part of the number. For example, 314.32 would be keyed as

20



To signal that the number string keyed in is complete, press

25



30

Now you may key in another number string. If you make a mistake when keying in a number, clear the entire number string by pressing

35



Then key in the correct number.

Performing Simple Arithmetic

40

In the calculator arithmetic answers appear on the display immediately after pressing

45



In an adding machine, the

50



adds whatever is already in the machine to the last entry, and the

55



60

subtracts this last entry. The calculator not only adds and subtracts the same way as the familiar adding machine, it also multiplies and divides this way too—the

65



multiplies whatever is already in the machine by the last entry, and the

$\frac{1}{x}$ key

divides by the last entry.
For example, add 12 and 3.

Press:	See displayed:
12 ENTER ↑ 3 + →	15.00

This same principle is used for calculating any arithmetic problem having two numbers and one arithmetic operator.

Correcting Input Errors

The calculator automatically stores the last number displayed (last input argument) that precedes the last function performed. For example, if you wanted to verify the last input argument from the example above,

Press:	See displayed:
$\frac{1}{x}$ Last X →	3.00 last input argument

A special storage register—LAST X—is provided for this purpose. As each new function is keyed (executed), the contents of Last X are overwritten with the new value.

Last X

is a very useful feature for correcting errors, such as pressing the wrong arithmetic operator key or entering the wrong number. For example, if you were performing a long calculation where you meant to subtract 3 from 12 and divided instead, you could compensate as follows:

Press:	See displayed:
12 ENTER ↑ 3 ÷ →	4.00
$\frac{1}{x}$ Last X →	3.00
\times →	12.00
$\frac{1}{x}$ Last X →	3.00
$\frac{1}{x}$ →	9.00

oops—you wanted to subtract
retrieves last number displayed preceding operation (division)
reverses division operation; you are back where you started
retrieves last number displayed before operation (multiplication)
correct operation produces desired results

If you want to correct a number in a long calculation,

Last X

5

can save you from starting over. For example, divide 12 by 2.157 after you have divided by 3.157 in error.

10

Press:	See displayed:
12 ENTER ↑ 3.157 ÷ →	3.80
$\frac{1}{x}$ Last X →	3.16
\times →	12.00
2.157	
20 ÷ →	5.56

you wanted to divide by 2.157, not 3.157
retrieves last number displayed preceding operation
you're back at the beginning
Eureka!

25

Clearing

To clear the display, press

30

$\frac{1}{x}$ CLX

To clear the entire calculator (except for certain data storage registers—more about that later), press

35

$\frac{1}{x}$ CLEAR

40

(Notice that is isn't necessary —although it may be comforting — to clear the calculator when starting a new calculation.) To clear everything, including all data storage registers, turn the calculator off then on.

Display And Rounding Options

45

Up to 15 characters can be displayed: mantissa sign, 10-digit mantissa, decimal point, exponent sign, and 2-digit exponent. Two display modes (fixed decimal and scientific notation) and a variety of rounding options are provided. Rounding options affect the display only; the calculator always maintains full accuracy internally. Fixed decimal notation is specified by pressing

50

$\frac{1}{x}$ FIX

55

followed by the appropriate number key to specify the number of decimal places (0 – 9) to which the display is to be rounded. The display is left-justified and includes trailing zeros within the setting specified. When the calculator is turned on, the mode and decimal place settings are

65

$\frac{1}{x}$ FIX 2.

For example,

Press:	See displayed:
123.456 →	123.456
FIX 4 →	123.4560
FIX 1 →	123.5
FIX 0 →	123.

Scientific notation is useful when you are working with very large or very small numbers. It is specified by pressing

SCI

followed by the appropriate number key to specify the number of decimal places (0 -9) to be displayed. Again, the display is left-justified and includes trailing zeros. For example,

Press:	See displayed:
SCI 6 →	1.234560 02
SCI 3 →	1.235 02

Now return to 2 decimal places in fixed decimal notation.

Press:	See displayed:
FIX 2 →	123.46

Keying In Negative Numbers

To enter a negative number, key in the number, then press

CHS

(change sign key). The number, preceded by a minus (-) sign, will appear on the display. For example,

Press:	See displayed:
12 CHS →	-12.

-continued

Press:	See displayed:
5 ENTER ↑ 23 CHS →	-35.00

10 To change the sign of a negative or positive number on the display, press

CHS

15 For example, to change the sign of -35.00 now in the display,

Press:	See displayed:
20 CHS →	35.00

Keying In Exponents

You can key in numbers having exponents by pressing

EEX

(Enter Exponent). For example, key in 15.6 trillion (15.6×10^{12}), and multiply it by 25.

Press:	See displayed:
35 15.6 EEX →	15.6 00
40 12 →	15.6 12
ENTER ↑ →	1.560000000 13
45 25 CHS →	3.900000000 14

You can save time when keying in exact powers of ten by pressing

EEX

55 and then pressing the desired power of ten. For example, key in 1 million (10^6) and divide by 52.

Press:	See displayed:
60 EEX 6 →	1. 06
ENTER ↑ →	1000000.00
65 52 CHS →	19230.77

To see your answer in scientific notation with 6 decimal places,

Press:	See displayed:
\square SCI 6 \rightarrow	1.923077 04

To key in negative exponents, key in the number,

EEX, press **CHS**

to make the exponent negative, then key in the power of 10. For example, key in Planck's constant (h)—roughly, 6.625×10^{-27} erg. sec—and multiply it by 50.

Press:	See displayed:
6.625 EEX \rightarrow	6.625 00
27 \rightarrow	6.625 27
CHS \rightarrow	6.625 -27
ENTER \uparrow \rightarrow	6.625000 -27
50 \times \rightarrow	3.312500 -25

If you return to a

FIX

2 setting, the result is rounded to zero. For example

Press:	See displayed:
FIX 2 \rightarrow	0.00

Performing Simple Functions

Finding Reciprocals

To calculate reciprocals of a display number, key in the number, then press

\square **1/x**

1020

For example, find the reciprocal of 25.

Press:	See displayed:
25 \square 1/x \rightarrow	0.04

You can also calculate the reciprocal of a value in a previous calculation without re-entering the number. For example, calculate $1 (\frac{1}{3} + \frac{1}{6})$.

	Press:	See displayed:	
5	3 \square 1/x \rightarrow	0.33	reciprocal of 3
6	6 \square 1/x \rightarrow	0.17	reciprocal of 6
	+ \rightarrow	0.50	sum of reciprocals
10	\square 1/x \rightarrow	2.00	reciprocal of sum

Finding Square Roots

15 To calculate the square root of any displayed value, press

20 \square **\sqrt{x}**

For example, find the square root of 16.

	Press:	See displayed:
25	16 \square \sqrt{x} \rightarrow	4.00

30

Now find the square root of the result.

	Press:	See displayed:
35	\square \sqrt{x} \rightarrow	2.00

40

Squaring Numbers

45 \square **x^2**

permits you to square numbers with a single keystroke. 50 For example, what is the square of the result in the previous example?

	Press:	See displayed:
55	\square x^2 \rightarrow	4.00

2 squared

60

Raising Numbers To Powers

\square **y^x**

65

permits you to raise a positive number (both integers and decimals) to any power. For example, calculate 2^9 ($2 \times 2 \times 2 \times 2 \times 2 \times 2 \times 2 \times 2$).

Press:	See displayed:
2 ENTER ↑ 9 □ Y ^x	512.00

Check different decimal settings

FIX 6	→	512.000000
FIX 7	→	511.9999999

Because a logarithmic routine is used internally to compute

y^x ,

the results may not be accurate to the last decimal place—as illustrated in the example above. Now change the decimal setting back to 2 places and find $8^{1.2567}$.

Press:	See displayed:
FIX 2	512.00
8 ENTER ↑	8.00
1.2567 □ Y ^x	13.64

In conjunction with

$1/x$, y^x

provides a simple way to extract roots. For example, find the cube root of 5.

Press:	See displayed:
5 ENTER ↑	5.00
3 1/x	0.33
□ Y ^x	1.71

reciprocal of 3
cube root of 5

Sample Case:

Assume that a body moves along a straight line according to the equation $S = \frac{1}{2}t^6 - 4t$. T. Determine its velocity ($V = 3t^5 - 4$) and acceleration ($A = 15t^4$) at $t = 2$ seconds, where:

$$V = 3 \cdot 2^5 - 4$$

$$A = 15 \cdot 2^4$$

Solution:

Press:	See displayed:
5 2 ENTER ↑ 5 □ Y ^x	32.00
3 X	96.00
4 □	92.00
10 2 ENTER ↑ 4 □ Y ^x	16.00
15 X	240.00

velocity

Using π

π is one of the fixed constants provided in the calculator. Merely press

□ π

whenever you need it in a calculation before executing the applicable operation. For example, calculate 3π .

Press:	See displayed:
3 ENTER ↑ □ π X	9.42

Using Factorials

The

$n!$

function permits you to handle combinations and permutations with ease. To calculate the factorial of a displayed number merely press

□ $n!$

Factorials can be calculated for positive integers from 0 through 59. Attempting to calculate the factorial of a fractional or negative value is an improper operation and will result in a blinking display. The equation is:

$$P(12,9) = \frac{12!}{(12-9)!}$$

Press:	Solution: See displayed:
12 □ n!	4.790016000 08 12!
□ Last X	12.00 value is retrieved from previous operation
9 □	3.00
□ n!	6.00 3!

-continued

Press:	Solution: See displayed:
$\frac{1}{E} \rightarrow$	79833600.00 number of different lineups possible

Sample Case 2, Combinations

Let a pair die be tossed 10 times. What is the probability that you will obtain the number 3 exactly 4 times in the 10 tosses? The required probability is given by the binomial law:

$$C_{10}^4 (1/6)^4 (5/6)^6 = C_{10}^6 5^6/6^{10}$$

where:	C_{10}^4	$10!/4!6!$
Solution:		
Press:	See displayed:	
5 ENTER \uparrow 6 \square $y^x \rightarrow$	15625.00	5^6
6 ENTER \uparrow 10 \square $y^x \rightarrow$	60466175.86	6^{10}
$\frac{1}{E} \rightarrow$	0.000	displayed value rounded to zero
FIX 4 \rightarrow	0.0003	value extended to 4 decimal places
FIX 2 \rightarrow	0.00	
10 \square n! \rightarrow	3628800.00	$10!$
$\times \rightarrow$	937.71	
4 \square n! \rightarrow	24.00	$4!$
$\frac{1}{E} \rightarrow$	39.07	
6 \square n! \rightarrow	720.00	$6!$
$\frac{1}{E} \rightarrow$	0.05	probability

Calculating Percentage Problems

The calculator simplifies the calculation of percentage problems because you do not have to convert percents to their decimal equivalents before using them; just press the


$\%$ key

5 after keying in the percent value. Three types of percentage problems are handled:

- Finding percentage of number (base \times rate)
- Finding net amount (base + or - percentage)
- Finding percent difference between a number and a base
(number - base/base).

Finding Percentage

To find the percentage of a number, key in the base number and press



20

Then key in the percent and press



25

For example, to find 14% of 300,

30 Press:	See displayed:
-----------	----------------

300	ENTER \uparrow	14 $\%$ \rightarrow	42.00	percentage
-----	------------------	-----------------------	-------	------------

35

Finding Net Amount

An additional feature is that after finding the percentage, the calculator still contains the original base number from which you may calculate the net amount by simply pressing

$\frac{1}{E}$ or $\frac{1}{E}$.

45

respectively. For example,

Press:	See displayed:
--------	----------------

300	ENTER \uparrow	14 $\%$ \rightarrow	42.00	percentage
$\frac{1}{E} \rightarrow$			342.00	net amount (base plus percentage)

or

Press:	See displayed:
--------	----------------

300	ENTER \uparrow	14 $\%$ \rightarrow	42.00	percentage
$\frac{1}{E} \rightarrow$			258.00	net amount (base less percentage)

Finding Percent Difference Between Two Numbers


To find the percent difference between a number and the base, enter the base number and press



Enter the second number, press



For example, if you want to find the rate of increase of your current mortgage payment (\$240/mo) over what you were paying in rent 15 years ago (\$70/mo),

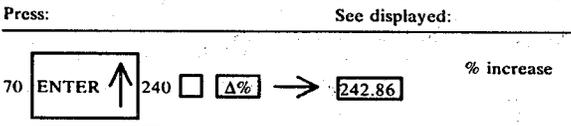

OPERATIONAL STACK

Stack Registers

The calculator uses an operational stack and reverse "Polish" (Lukasiewicz notation).

The four temporary memory locations (number registers)-arranged in the form of a vertical stack—are called X (bottom register), Y, Z, and T (top register), respectively.

Contents	Register Name
t	T
z	Z
y	Y
x	X

To avoid confusion between the name of a register and its contents, the register is designated by a capital letter and the contents by a small letter. Thus, x, y, z and t are the contents of X, Y, Z and T, respectively.

NOTE
The contents of the X register are always displayed.


When you key in a number, it goes into the X-register—the bottom register and the only one displayed. When you press



this number is duplicated into the Y-register. At the same time, y is moved up to Z and z is moved up to T like this:

5
10
15

Press: Contents Register

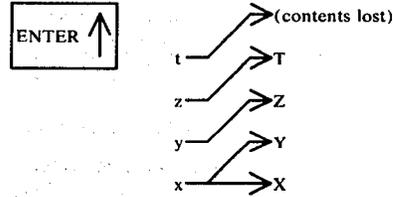

When you press




x is added to y, and the entire stack drops to display the answer in X. The same thing happens for



Whenever the stack drops, t is duplicated from T into Z, and z drops to Y, as follows:

30

Press Contents Register

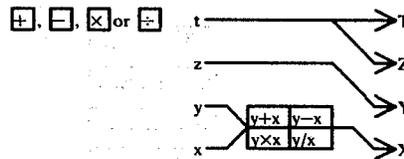

Look at the contents of the stack as we calculate $(3 \times 4) + (5 \times 6)$. Directly above the keys pressed you see the information in X, Y, Z and T after the keystroke.

MANIPULATING THE STACK

45




"rolls down" the stack and lets you review the contents (in last in-first out order) without losing data. It is also used to reposition data within the stack. Here is what happens each time you press

55



-continued

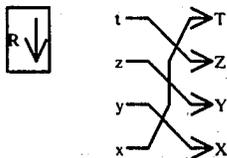

Example:

Load the stack by pressing: 1 2 3 4. (The stack now


contains x = 4, y = 3, z = 2, and t = 1). To review the contents of the stack press

four times. The fourth returns the stack to its original position (x = 4, y = 3, z = 2

and t = 1). Note: the stack is raised and t is lost when a keyboard entry or operation

follows , unless that entry follows , , or .

The key exchanges x and y as shown below.

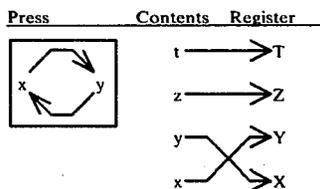

You will often find that x and y should be exchanged before a , , operation.

PERFORMING COMBINED ARITHMETIC PROCESSES

The calculator performs combined arithmetic operations—serial, mixed and chained calculations—with ease.

SERIAL CALCULATION

Any time a new number is entered after any calculation, the calculator performs an automatic



on the result of the calculation. This feature permits a serial calculation having intermediate results to which a series of new values can be applied without your having to write down or store any of the intermediate results. For example, find the sum of 4, 6, 8 and 10.

Press:	See displayed:
4 6	10.00
8	18.00

-continued

Press:	See displayed:
45 10	28.00

The same principle applies to serial multiplication, division and subtraction too. Note that an equals key (=) is not needed since results are displayed when a function key is pressed.

CHAINED CALCULATION

Chained calculations can be used to find the sums of 55 produces (adding the results to two or more multiplication operations) or the product of sums (multiplying the results of two or more addition operations). For example, if you sold 12 items at \$1.58 each, 8 items at \$2.67 each and 16 items at \$0.54 each, the total sale price is:

$$(12 \times 1.58) + (8 \times 2.67) + (16 \times 0.54)$$

Press:	See displayed*:
65 12 1.58	18.96

-continued

Press:	See displayed*:
8 ENTER ↑ 2.67 [X] →	21.36
[+] →	40.32
16 ENTER ↑ .54 [X] →	8.64
[+] →	48.96

*interpreted as dollars (\$)

MIXED CHAINED CALCULATION

Chain calculations can use any arithmetic operator—divide and subtract as well as multiply and divide. In addition, a problem may be calculated with any combination of arithmetic operators in both nested and linked operations. For example, to calculate

$$\frac{\{(12 \times 5) - 2\} + \{(8 \div 2) + 10\} \times (213.08 \times 5 \div 1.33) \div 2}{}$$

Press:	See displayed:
12 ENTER ↑ 5 [X] →	60.00
2 [-] →	58.00
8 ENTER ↑ 2 [÷] →	4.00
10 [+] →	14.00
[+] →	72.00
213.08 ENTER ↑ 5 [X] →	1065.40
1.33 [÷] →	801.05
[X] →	57675.79
2 [÷] →	28837.89

LAST X REGISTER

The last input argument of a calculation is automatically stored in the Last X register when a function is executed. This feature provides a handy error correction device, as well as a facility for reusing the same argument in multiple calculations—since it allows recall of the argument by pressing

[] Last X

The register is cleared only when the calculator is turned off or when a new argument replaces (or overwrites) the previous one.

DATA STORAGE REGISTERS

In addition to the operational stack and Last X registers, the calculator provides 9 registers for user storage.

UNRESTRICTED STORAGE

Registers R₁ – R₄

Registers R₁ – R₄ can be used for temporary storage without restriction. Values stored in these registers are not affected by calculations or by clearing operations. New values are entered by writing over the old contents; that is, by storing a new number. The contents are lost, however, when the calculator is turned off.

RESTRICTED STORAGE

Registers R₅ – R₈

Registers R₅ – R₈ are used internally when performing summations using

[Σ+] and [] x,s

When summations are not being performed, these registers may be used for general purpose storage. However, since registers R₅ – R₈ are not overwritten by new values, they must be cleared of existing values by pressing

[] CLEAR

before they are used in summations.

Register R₉

Register R₉ is required internally when performing trigonometric functions and polar/rectangular conversions; any values stored there will be lost. Otherwise, register R₉ may be used for general purpose storage in a manner identical to registers R₁ – R₄.

STORING AND RECALLING DATA

To store a value appearing on the display (whether the result of a calculation or a keyboard entry), press

[STO]

then press the number key

([] - [])

specifying the storage register. To retrieve the value press

[RCL]

then press the applicable number key. A copy of the recalled value appears on the display (X-register); the original value remains in the specified constant storage register. The number previously on the display is loaded into the Y-register unless the keystroke immediately preceding



(these keys do not cause the stack to be pushed up by the next data entry).

For example, add 8, 20, 17, 43; store the result in R₁; and divide the individual numbers by the stored sum to find what part each is of the total.

Press:	See displayed:
8 ENTER ↑ 20 + 17 + 43 + →	88.00 total
STO 1 →	88.00
8 RCL 1 ÷ →	0.09 or 9% of total
20 RCL 1 ÷ →	0.23 or 23% of total
17 RCL 1 ÷ →	0.19 or 19% of total
43 RCL 1 ÷ →	0.49 or 49% of total

PERFORMING REGISTER ARITHMETIC

Arithmetic operations (+, -, ×, ÷) can be performed between a data storage register and the X-register (display). To modify the contents of a storage register, press

STO

followed by the applicable operator key

(+, -, ×, ÷),

then the number key specifying the storage register. For example, store 6 in register R₁, then increment it by 2.

Press:	See displayed:
--------	----------------

6 STO 1 →	6.00	6 → R ₁
2 STO + 1 →	2.00	2 + r ₁ → R ₁

to see what is now stored in register R₁,

Press:	See displayed:
5 RCL 1 →	8.00 r ₁ → display

Now, subtract the register contents (8) from a displayed value (make it 13) and store the result back in

the register R₁.

Press:	See displayed:
13 STO - 1 →	13.00 13 - r ₁ → R ₁
40 RCL 1 →	5.00 r ₁ → display

Conversely, to alter a displayed value without affecting the stored value, press

RCL

the applicable operator, then the number key specifying the storage register. For example, add the current value stored in register R₁ (5.00) to a new entry (2).

Press:	See displayed:
2 RCL + 1 →	7.00 2 + r ₁ → display
RCL 1 →	5.00 r ₁ → display

65

Subtract the contents of register R₁ from a new entry (11).

Press:	See displayed:
11 $\boxed{\text{RCL}} \boxed{=} \boxed{1}$ →	$\boxed{6.00}$ $11 - r_1$ → display
$\boxed{\text{RCL}} \boxed{1}$ →	$\boxed{5.00}$ r_1 → display

Now combine several operations.

Press:	See displayed:
3 $\boxed{\text{STO}} \boxed{1}$ →	$\boxed{3.00}$ (3 → R_1)
2 $\boxed{\text{STO}} \boxed{+} \boxed{1}$ →	$\boxed{2.00}$ ($2 + r_1$ → R_1)
35 $\boxed{\text{STO}} \boxed{=} \boxed{1}$ →	$\boxed{35.00}$ ($35 \div r_1$ → R_1)
$\boxed{\text{RCL}} \boxed{1}$ →	$\boxed{7.00}$ (r_1 → display)
5 $\boxed{\text{RCL}} \boxed{\times} \boxed{1}$ →	$\boxed{35.00}$ ($5 \times r_1$ → display)

To use a storage register as a counter or tally register, you must set that register to zero—either by clearing or by storing 0. To increment the counter, use a $\boxed{\text{STO}} \boxed{+}$ operation sequence. To decrement the counter, press $\boxed{\text{CHS}}$ to change the sign of the displayed value before continuing with the $\boxed{\text{STO}} \boxed{\times} \boxed{+}$ sequence.

METRIC/U.S. UNIT CONVERSION CONSTANTS

The calculator provides built-in conversion constants (accurate to 10 digits) for:
 centimeters-to-inches and inches-to-centimeters (1 inch = 2.54000000 centimeters)
 kilograms-to-pounds and pounds-to-kilograms (1 lb. = 0.453592370 kilograms)
 liters-to-gallons and gallons-to-liters (1 gal. = 3.785411784 liters)

To use these constants, key in the measure to be converted, press



then press the desired constant key followed by the applicable operator:



to obtain metric equivalents,




to obtain U.S. equivalents.

Note that it isn't necessary to press



after keying in the initial value; the HP-45 calculator performs an automatic



when a preprogrammed constant key is pressed or when a user stored constant is recalled. For example,

Press:	See displayed:
40 $\boxed{12} \boxed{\square} \text{ cm/in} \rightarrow$	$\boxed{2.54}$
45 $\boxed{\times} \rightarrow$	$\boxed{30.48}$

LOGARITHMIC AND EXPONENTIAL FUNCTIONS

50 The calculator computes both natural and common logarithms as well as their inverse functions (antilogarithms):

55 $\boxed{\ln}$ is \log_e (natural log); takes log of value in X-register to base e (2.718...)

$\boxed{e^x}$ is antilog. (natural antilog); raises e ($e = 2.718...$) to the power of value in X-register. (To display the value of e, press $\boxed{e^x}$.)

60 $\boxed{\log}$ is \log_{10} (common log); takes log of value in X-register to base 10

65 $\boxed{10^x}$ is antilog_{10} (common antilog); raises 10 to the power of value in X-register.

STATISTICAL FUNCTIONS

The statistical function

\bar{x}, s

is used to find the mean (arithmetic average) and standard deviation (measure of dispersion around the mean) of data entered and summed. Options are provided to enable you to interact with and modify results by adding new data or correcting errors. Also, the number of entries and sum of the squares—as well as the sum of entries in two dimensions—can be obtained. Summation/averaging calculations also use the

Σ^-
 (sigma) key

to sum the numbers used in calculating means and standard deviations. Because the



uses storage registers R₅–R₈, these registers must be cleared with

 CLEAR

before pressing



or errors could result.

Information is entered as follows:

Press

 CLEAR

to assure that registers R₅–R₈ are clear of previous data. Key in each value and sum with

 key.

To correct an incorrect value before it is loaded with the

 keystroke, press .

After the value is summed, correct by (a) reentering incorrect value, then (b) pressing



followed by (c) entering correct value, and finally (d) pressing

5 .

then continue entering values. The last

10 

pressed provides the number of entries. Press

15  

20 to obtain mean. Press

25 

to obtain standard deviation.

If there are more values to be included—say, if you want to add to the data sample and modify results—key in and press

30 

35 after each.

Additional information is also available by performing steps 6 – 10 (in any order).

40

Press  5 to obtain number of entries.

45 Press  6 to obtain sum of squares for X-register entries.

Press  7 to obtain sum of X-register entries.

50

Press  8 to obtain sum of Y-register entries.*

55 Alternatively, press   to obtain sum of X-register entries.

and  to obtain sum of Y-register entries.

60 *A Y-register entry is any value residing in the Y-register at the time  is pressed; e.g. if the entry sequence is

n_1  n_2  where: n_1 = Y-value
 n_2 = X-value

65

TRIGONOMETRIC FUNCTIONS

The following trigonometric functions are provided:

SIN (sine)

SIN⁻¹ (arc sine)

COS (cosine)

COS⁻¹ (arc cosine)

TAN (tangent)

TAN⁻¹ (arc tangent)

To use the **SIN**, **COS** and **TAN** functions, key in the number and press the appropriate function key. To use the arc functions, press \square , then press the associated function key. For example, find $\text{SIN}^{-1}(.866)$.

Press $.866 \square \text{SIN}^{-1} \rightarrow$ See Displayed: $60.00 / \text{degrees}$

Note that trigonometric functions use storage register 9; any value stored there will be overwritten during a trigonometric calculation.

Angular Modes

Trigonometric functions can be performed in any one of three angular modes: decimal degrees, decimal radians and decimal grads—the latter being a 100th part of a right angle in the centesimal system of measuring angles. Note that trigonometric functions assume decimal angles regardless of angular mode. To select a mode, press

\square .

then press the associated key:

DEG or **RAD** or **GRD**.

The mode selected will remain operative until a different mode is selected, or until the calculator is turned off; when turned back on, the calculator automatically defaults to decimal degrees mode.

Sample Case 1

Find the cosine of 35°. If the calculator is not already in degrees mode, press

$\square \text{DEG}$

before performing the calculation.

Press:	Solution:	See displayed:
35 COS	\rightarrow	0.82

Sample Case 2

Find the tangent of 6 radians.

25

Press:	Solution:	See displayed:
$\square \text{RAD} 6 \text{TAN}$	\rightarrow	-0.29

30

Sample Case 3

Find the arc sine of 0.5 in grads.

35

Press:	Solution:	See displayed:
$\square \text{GRD} .5 \square \text{SIN}^{-1}$	\rightarrow	33.33

40

Degrees-Minutes-Seconds Conversion

45

Displayed angles can be converted from any decimal angular mode to degrees-minutes-seconds, in the format dd.mmss, by pressing

$\square \rightarrow \text{D.MS}$

55

Conversely, to convert an angle displayed in degrees-minutes-seconds to the decimal equivalent in the specified angular mode, press

$\square \text{D.MS} \rightarrow$

60

This feature is also useful in calculating problems dealing with time (hours-minutes-seconds) too. Note that the result of a

65

$\rightarrow \text{D.MS}$

Conversion is rounded to the nearest second both internally and on the display. Conversions involving angles $\geq 10^5$ degrees are an improper operation.

Sample Case 1

Assume surveyor want to add 2 angles: $10^\circ 8' 56''$ and $2^\circ 17' 42''$. These must first be converted to decimal degrees before adding and then converted back to degrees-minutes-seconds.

Press:	Solution:	See displayed:
\square DEG 10.0856 \square D.MS $\rightarrow \rightarrow$		10.15 decimal degrees
2.1742 \square D.MS $\rightarrow \rightarrow$		2.30 decimal degrees
\square + \rightarrow		12.44 decimal degrees
\square \rightarrow D.MS \rightarrow		12.2638 $12^\circ 26' 38''$

Sample Case 2

Find the arc sine of 0.55 in degrees mode and convert to degrees-minutes-seconds.

Press:	Solution:	See displayed:
\square DEG .55 \square SIN ⁻¹ \rightarrow		33.37 decimal degrees
\square \rightarrow D.MS \rightarrow		33.2201 $33^\circ 22' 01''$

Sample Case 3

Using the data from Sample Case 2, above, calculate the arc sine of 0.55 in radians mode and convert the result to degrees-minutes-seconds.

Press:	Solution:	See displayed:
\square RAD .55 \square SIN ⁻¹ \rightarrow		0.58 radians
\square \rightarrow D.MS \rightarrow		33.2201 $33^\circ 22' 01''$

POLAR/RECTANGULAR COORDINATE CONVERSION

Two functions are provided for polar/rectangular coordinate conversion. To convert values in X and Y-registers, (representing rectangular x, y coordinates, respectively) to polar r, θ coordinates (magnitude and angle, respectively), press



Conversely, to convert values in X and Y-registers (representing polar r, θ , respectively) to rectangular coordinates (x, y, respectively), press



Because polar/rectangular conversions involve trigonometry, storage register 9 is used. Thus, any values previously stored in this register will be overwritten when coordinate conversions are performed.

Sample Case 1

Convert rectangular coordinates (4, 3) to polar form with the angle expressed in degrees.

Press:	Solution:	See displayed:
\square DEG 3 ENTER \uparrow 4 \rightarrow P \rightarrow		5.00 magnitude
\square \rightarrow R \rightarrow		36.87 angle in degrees


Sample Case 2

Convert polar coordinates (8, 120°) to rectangular coordinates.

Solution:
Press:

See displayed:

-continued

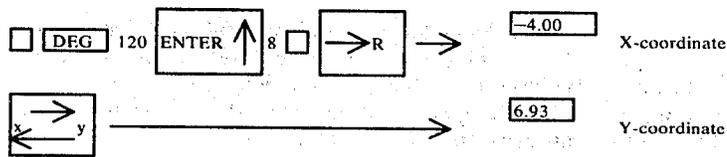

By combining the polar/rectangular function with the accumulation function,

$$\frac{\Sigma-}{\Sigma+}$$

you can add and subtract vector components. The sum of these are contained in storage registers R₇ and R₈:

$$r_x = X_1 \pm X_2 \pm \dots \pm X_n = \Sigma x$$

$$r_y = Y_1 \pm Y_2 \pm \dots \pm Y_n = \Sigma y$$

To display the contents of registers R₇ and R₈, press



to obtain the sum of x-coordinates (register 7); then press



to obtain the sum of y-coordinates (register 8).


OPERATING LIMITS

Accuracy

Accuracy specifications for the calculator depend on the operation performed. The elementary operations



have a maximum error of ± 1 count in the 10th (least significant) digit. Errors in these elementary operations are caused by rounding answers to the 10th (least significant) digit. Percent



and factorial



functions are accurate to ± 1 count in the ninth digit. Values converted to degrees-minutes-seconds



are rounded to the nearest second.

An example of round off error is seen when evaluating $(\sqrt{5})^2$. Rounding $\sqrt{5}$ to 10 significant digits gives 2.236067977. Squaring this number gives the 19 digit product 4.99999997764872529. Rounding the square to 10 digits gives 4.99999998. If the next larger approximation (2.236067978) is squared, the result is 5.000000002237008484. Rounding this number to 10 significant digits gives 5.000000002. There simply is no 10-digit number whose square is 5.00000000.

Accuracy specifications for operations using the mean function

25

$$(\bar{x}, s)$$

depend upon the data used and number of entries.

The accuracy of the remaining operations (trigonometric, logarithmic and exponential) depends upon the argument. The answer that is displayed will be the correct answer for an input argument having a value that is within ±N counts (see table below) in the tenth (least significant) digit of the actual input argument. For example, 1.609437912 is given as the natural log of 5.

However, this is an approximation because the result displayed (1.609437912) is actually the natural log of a number between 4.99999998 and 5.000000002 which is ±2 counts (N = 2 for logarithms) in the 10th (least significant) digit of the actual input argument.

Table

OPERATION	Values for N	VALUE OF N
$\log x$, $\ln x$, and e^x		2*
trigonometric		3**
\sqrt{x}		4 for y, and 7 for x
10^x		7
$\rightarrow P$, $\rightarrow R$		4

*Logarithmic operations have an additional limitation of ±3 counts in the 10th (least significant) digit in the displayed answer.
 **Trigonometric operations have an additional accuracy limitation of ±1 × 10⁻⁹ in the displayed answer.

60

Underflow and Overflow Display Formats


To ensure greater accuracy, the calculator performs all calculations using a ten-digit number and a power of 10. This abbreviated form of expressing numbers is called scientific notation; i.e., 23712.45 = 2.371245 × 10⁴ in scientific notation.

65

If a number is too large for the display format specified, the calculator automatically displays the number in scientific notation. For example, if you keyed in 100, and pressed

FIX 8,


the calculator will display the number in scientific notation because there isn't enough room to display 8 digits after the decimal point

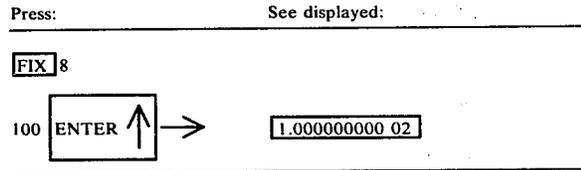

Numbers whose magnitude is less than 1, and are too small to be displayed in the specified

FIX format,

are displayed as zero. For example, the number 0.000396 is displayed in

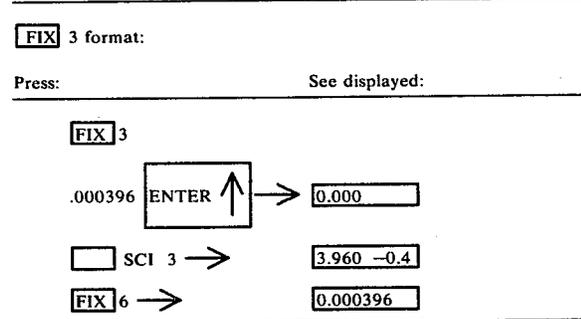

When a

SCI setting

is used, values are displayed rounded to the number of decimal places specified. Values having a magnitude of $\geq 10^{100}$ are displayed as ± 9.9999999999 . Values having a magnitude of $< 10^{-99}$ are displayed as zero.

Improper Operations

If you attempt a calculation containing an improper operation—say division by zero—an error signal is triggered and a blinking display appears. To clear, press

CLX,

or any other key that doesn't trigger another error. The following are examples of improper operations:

Division by zero

5 , where Y = 0

, where X < 0

10 where x = 0

n! , where n < 1 and > 69

15

APPENDIX A. KEYBOARD SUMMARY
FUNCTION/OPERATION

KEY	FUNCTION/OPERATION
OFF ON	Power switch
20 y^x	Exponential
	Reciprocal
log	Common logarithm
25	Natural logarithm
10^x	Common antilogarithm
	Natural antilogarithm
30 SCI	Scientific notation display mode
FIX	Fixed point notation display mode
	Gold key; alternate function
35	Square root of x
	x squared
$\rightarrow R$	Polar-to-rectangular conversion
40 $\rightarrow P$	Rectangular-to-polar conversion
\sin^{-1}	Arc sine
SIN	Sine
45 \cos^{-1}	Arc cosine
COS	Cosine
\tan^{-1}	Arc tangent
50 TAN	Tangent
n!	Factorial
	Exchange x and y
55 \bar{x}, s	Mean, standard deviation
	Roll down stack
60 $\rightarrow D.MS$	Convert to degrees-minutes-seconds
STO	Store value in R_n (n = 1, 2, ..., 9)
65 $D.MS \rightarrow$	Convert from degrees-minutes-seconds
RCL	Recall stored value from R_n (n = 1, 2, ..., 9)
$\Delta\%$	Percent difference

-continued

APPENDIX A. KEYBOARD SUMMARY FUNCTION/OPERATION	
	x percent of y
DEG	Degrees mode
	Copy x into Y
RAD	Radians mode
	Change sign
GRD	Grads mode
	Enter exponent
CLEAR	Clear stack and R _s - R _n
	Clear X
	Subtract
	Add
	Multiply
	Divide
cm/in	Centimeters/inches conversion
kg/lb	Kilograms/pounds conversion
ltr/gal	Liters/gallons conversion
LAST X	Recall last x argument
π	Pi constant (3.14)
Σ^-	Decrement summation
	Summation
	Numeric key set

We claim:

1. An electronic calculator comprising:
 - an input unit including a plurality of manually operable non-numeric and numeric keys for entering information and numbers into the calculator;
 - a first memory unit coupled to the input unit and including a first storage register for storing a first number in units of decimal degrees having an integer portion and a decimal portion received therefrom, said integer portion referring to all digits to the left of the decimal in conventional decimal notation and said decimal portion referring to all digits to the right of the decimal in conventional decimal notation;
 - a processing unit coupled to the input unit and the first memory unit and including means for converting the first number to a second number having first, second, and third parts representing said first number in units of degrees, minutes, and seconds respectively by multiplying the decimal portion of the first number by a preselected factor to provide a first result having an integer portion and a decimal portion and for multiplying the decimal portion of the first result by said preselected factor to provide a second result having an integer portion and a decimal portion; and

- an output display unit coupled to the processing unit for providing a visual display of the second number;
 - said first part of the second number being the integer portion of the first number and appearing to the left of the decimal in said visual display;
 - said second part of the second number being the integer portion of the first result and appearing in said visual display as the first two digits to the right of the decimal;
 - said third part of the second number being the integer portion of the second result and appearing in said visual display as the second two digits to the right of the decimal.
2. An electronic calculator as in claim 1 wherein the preselected is the number 60.
 3. An electronic calculator as in claim 1 wherein:
 - said first number has first, second, and third parts representing units of degrees, minutes, and second, respectively;
 - said second number has an integer portion and a decimal portion representing units of decimal degrees; and
 - said means are effective for converting the first number to the second number by dividing the second part of the first number by the preselected factor to provide the first result and for dividing the third part of the first number by the preselected factor to provide the second result;
 - said integer portion of the second number being the first part of the first number and appearing to the left of the decimal in said visual display;
 - said first two digits of the decimal portion of the second number being the integer portion of the first result and appearing in said visual display as the first two digits to the right of the decimal;
 - said second two digits of the decimal portion of the second number being the integer portion of the second result and appearing in said visual display as the second two digits to the right of the decimal.
 4. An electronic calculator as in claim 3 wherein the preselected factor is the number 60.
 5. An electronic calculator as in claim 3 for converting a first number in units of inches to a second number in units of centimeters wherein:
 - first memory unit further includes a second storage register for storing a first preselected conversion factor; and
 - the processing unit includes means responsive to actuation of one or more of the keys of the input unit for automatically multiplying the first number by said first preselected conversion factor to obtain the second number, and for causing the output display unit to provide a visual display thereof.
 6. An electronic calculator as in claim 5 wherein the first preselected factor is 2.540000000.
 7. An electronic calculator as in claim 3 for converting a first number in units of gallons to a second number in units of liters wherein:
 - the first memory unit further includes a second storage register for storing a second preselected conversion factor; and
 - the processing unit includes means responsive to actuation of one or more of the keys of the input unit for automatically multiplying the first number by said second preselected conversion factor to obtain the second number, and for causing the output display unit to provide a visual display thereof.

121

8. An electronic calculator as in claim 7 wherein the second preselected factor is 0.453592370.

9. An electronic calculator as in claim 3 for converting a first number in units of pounds to a second number in units of centimeters wherein:

the first memory unit further includes a second storage register for storing a third preselected conversion factor; and

122

the processing unit includes means responsive to actuation of one or more of the keys of the input unit for automatically multiplying the first number by said third preselected conversion factor to obtain the second number, and for causing the output display unit to provide a visual display thereof.

10. An electronic calculator as in claim 9 wherein the third preselected factor is 3.785411784.

* * * * *

10

15

20

25

30

35

40

45

50

55

60

65

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 1 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson et al.

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 1 of the Title page, after "[75] Inventors: please add the names --David S. Cochran, Palo Alto; Chung C. Tung, Santa Clara, Calif. --.

Column 2, line 52, "Rom'0-7" should read --ROM's 0-7--;

Column 6, line 66, the word "and", first occurrence, should be deleted and insert the word --at--;

Column 8, line 48, the word "the", second occurrence, should read --The--;

Column 10, line 12, following the word "circuit" insert --20--;

Column 19, in the Table appearing at the top of this column the line which reads

"0 1001 A → B 1 1001 ← B " A
should read --
0 1001 A → B 1 1001 A ← B--;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 2 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson et al.

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 19, in the Table appearing at the top of this column the line which reads

"0 1010 A-C → C 1 1010 A-C → A"

should read

-- 0 1010 A-C → C 1 1010 A-C → A--;

Column 20, line 6, "U V" should read -- U ≥ V--;

Column 22, line 34, delete the comma after the word "circuits";

Column 26, line 34, "0 D1S7)" should read --0 (D1S7)--;
line 41, "D1s4" should read --D1S4--;

Column 28, line 62, after the word "last" insert the word --number--;

Column 29, line 45, "3,56789" should read --3.56789--;
line 47, the word "exaple" should read --example--;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 3 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson et al.

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 89, line 31,

" Last x → last input argument"

should read

-- [Last X] → last input argument --;

Column 89, line 43, "Last X" should read -- --;

Column 89, line 59,

" Last x → retrieves last number displayed preceding operation (division)"

should read

-- [Last x] → retrieves last number displayed preceding operation (division)--;

UNITED STATES PATENT AND TRADEMARK OFFICE

CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 4 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson et al.

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 89, line 63,

" Last x → 3.00

retrieves last number displayed before operation (multiplication)"

should read

-- Last x → 3.00

retrieves last number displayed before operation (multiplication)--;

Column 90, line 4, "Last x" should read -- Last x --;

Column 90, line 16,

" Last x → 3.16

retrieves last number displayed preceding operation"

should read

-- Last x → 3.16

retrieves last number displayed preceding operation --;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 5 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson et al.

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 90, line 39, "is" should read --it--;

Column 91, line 20, "[] SCI" should read -- [] SCI ---;

Column 91, lines 34 and 36,

" [] SCI 6 → 1.234560 02

[] SCI 3 → 1.235 02 "

should read

-- [] SCI 6 → 1.234560 02

[] SCI 3 → 1.235 02 --;

Column 93, line 8,

" [] SCI 6 → 1.923077 04 "

should read

-- [] SCI 6 → 1.923077 04 --;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 6 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson et al.

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 93, line 68, "1(1/3 + 1/6)" should read

-- $\frac{1}{1/3 + 1/6}$ ---;

Column 94, line 20, " $\square \sqrt{x}$ " should read

-- $\square \sqrt{x}$ ---;

Column 94, line 28, "16 $\square \sqrt{x}$ \rightarrow \square 4.00"

should read -- 16 $\square \sqrt{x}$ \rightarrow \square 4.00 ---;

Column 94, line 38, " $\square \sqrt{x}$ \rightarrow \square 2.00"

should read-- $\square \sqrt{x}$ \rightarrow \square 2.00 ---;

Column 94, line 63, " $\square y^x$ " should read -- $\square y^x$ ---;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 7 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson et al.

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 95, lines 5-6, "2 ENTER ↑ 9 y^x → 512.00 "

should read -- 2 ENTER ↑ 9 Y^X → 512.00 --;

Column 95, line 22, " y^x ," should read -- Y^X , --;

Column 95, line 38, "1.2567 y^x → 13.64 "

should read -- 1.2567 y^x → 13.64 --;

Column 95, line 45 " 1/x , y^x " should read -- 1/x , Y^X --;

Column 95, line 58, " y^x → 1.71 cube root of 5,"

should read -- Y^X → 1.71 cube root of 5 --;

Column 96, line 5, " Y^X " should read -- Y^X --;

Column 96, line 12, " Y^X " should read -- Y^X --;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 8 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson et al.

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 96, line 23, " π " should read -- π --;

Column 96, line 32, " π " should read -- π --;

Column 96, line 40, "n!" should read -- n! --;

Column 96, line 47, " n!" should read
-- n! --;

Column 96, line 51, "59" should read --69--;

Column 96, line 63, "12 n!" should read
--12 n! --;

Column 96, line 64, " Last X" should read
-- Last X --;

Column 96, line 68, " n!" should read
-- n! --;

Column 97, line 22, "5 ENTER 6 y^x → 15625.00 5⁶"
should read -- 5 ENTER 6 y^x → 15625.00 5⁶ --;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569
DATED : January 4, 1977
INVENTOR(S) : Peter D. Dickinson, et al

Page 9 of 15

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 97, line 25, "6 ENTER 10 y² " should
read --6 ENTER ↑ 10 y² ---;

Column 97, line 34, "10 n! " should read
--10 n! ---;

Column 97, line 37, "4 n! " should read
--4 n! ---;

Column 97, line 40, "6 n! " should read
--6 n! ---;

Column 99, line 3, "difference" should read
--difference--;

Column 99, line 14, " Δ% " should read
-- Δ% ---;

Column 99, line 24, " Δ% " should read -- Δ% ---;

Column 99, line 32, "(Lukasiewicz" should read
--(Lukasiewicz)--;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 10 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson, et al

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 103, line 64, " Last X" should read

-- Last X --;

Column 104, line 8, " R^4 " should read -- R_4 --;

Column 104, line 22, "x,s" should read -- x,s --;

Column 104, line 32, "CLEAR" should read -- CLEAR --;

Column 108, line 43, "cm/in" should read -- cm/in --;

Column 108, line 62, " log " should read

-- log --;

Column 108, line 65, " 10^x " should read -- 10^x --;

Column 109, line 7, " \bar{x},s " should read -- \bar{x},s --;

Column 109, line 34, "CLEAR" should read -- CLEAR --;

Column 109, line 46, " CLEAR " should read

-- CLEAR --;

Column 109, line 67, " $\Sigma-$ " should read -- $\Sigma-$ --;

Column 110, line 17, " x,s " should read

-- x,s --;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569
DATED : January 4, 1977
INVENTOR(S) : Peter D. Dickinson, et al

Page 11 of 15

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 110, line 55, "X+" should read -- $\Sigma+$ ---;

Column 111, line 19, "SIN¹" should read -- SIN¹ ---;

Column 111, line 42, "DEG or RAD or GRD" should
read -- DEG or RAD or GRD ---;

Column 111, line 55, "DEG" should read -- DEG ---;

Column 112, line 28, "RAD" should read -- RAD ---;

Column 112, line 39, "GRD .5 SIN⁻¹" should
read -- GRD .5 SIN⁻¹ ---;

Column 112, line 50, "→ D.MS ." should read
-- → D.MS . ---;

Column 112, line 58, "D.MS→ ." should read
-- D.MS → . ---;

Column 112, line 66, "→ D.MS" should read
-- → D.MS ---;

Column 113, line 15, "DEG" should read -- DEG ---;

Column 113, line 15, "D.MS→" should read -- D.MS→ ---;

Column 113, line 17, "D.MS→" should read -- D.MS→ ---;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 12 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson, et al

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 113, line 21, " \rightarrow D.MS" should read \rightarrow D.MS ---;

Column 113, line 33, "DEG" should read DEG ---;

Column 113, line 33, " SIN^{-1} " should read SIN^{-1} ---;

Column 113, line 35, " \rightarrow D.MS" should read

\rightarrow D.MS ---;

Column 113, line 60, "RAD" should read RAD ---;

Column 113, line 60, " SIN^{-1} " should read

SIN^{-1} ---;

Column 113, line 62, " \rightarrow D.MS" should read

\rightarrow D.MS ---;

Column 114, line 35, " \rightarrow R" should read

\rightarrow R ---;

Column 114, line 50, "DEG" should read DEG ---;

Column 115, line 45, " \sqrt{x} " should read

\sqrt{x} ---;

Column 115, line 45, "DMS \rightarrow " should read

DMS \rightarrow ---;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 13 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson, et al

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 115, line 66, " $(\rightarrow D.MS)$ " should read
--($\rightarrow D.MS$)--;

Column 116, line 27, " (\bar{x}, s) " should read
--(\bar{x}, s)--;

Column 116, line 47, " \log " should read -- \log --;

Column 116, line 53, " 10^x " should read -- 10^x --;

Column 116, line 55, " $\rightarrow R$ " should read
--($\rightarrow R$)--;

Column 117, line 43, "SCI 3" should read -- SCI 3 --;

Column 118, line 5, " y^x " should read -- y^x --;

Column 118, line 5, "Y 0" should read -- $Y \leq 0$ --;

Column 118, line 7, " \sqrt{x} " should read -- \sqrt{x} --;

Column 118, line 11, "n!" should read -- n! --;

Column 118, line 20, " y^x " should read -- y^x --;

Column 118, line 24, "log" should read -- log --;

Column 118, line 27, " 10^x " should read -- 10^x --;

Column 118, line 30, "SCI" should read -- SCI --;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 14 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson, et al

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 118, line 38, " \rightarrow R" should read

-- \rightarrow R --;

Column 118, line 43, " SIN^{-1} " should read

-- SIN^{-1} --;

Column 118, line 46, " COS^{-1} " should read -- COS^{-1} --;

Column 118, line 49, " TAN^{-1} " should read -- TAN^{-1} --;

Column 118, line 52, "n!" should read -- n! --;

Column 118, line 57, "X,s" should read

-- X,s --;

Column 118, line 61, " \rightarrow D.MS" should read

-- \rightarrow D.MS --;

Column 118, line 65, "D.MS \rightarrow " should read

-- D.MS \rightarrow --;

Column 118, line 68, " $\Delta\%$ " should read -- $\Delta\%$ --;

Column 119, line 7, "DEG" should read -- DEG --;

Column 119, line 12, "RAD" should read -- RAD --;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 15 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson, et al

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 119, line 15, "GRD" should read -- GRD --;

Column 119, line 18, "CLEAR" should read

-- CLEAR --;

Column 119, line 27, "cm/in" should read -- cm/in --;

Column 119, line 29, "kg/lb" should read

-- kg/lb --;

Column 119, line 31, "ltr/gal" should read

-- ltr/gal --;

Column 119, line 32, "LAST X" should read -- LAST X --;

Column 119, line 34, " π " should read -- π --; and

Column 119, line 36, " Σ " should read -- Σ --.

Signed and Sealed this

Third Day of July 1979

[SEAL]

Attest:

Attesting Officer

LUTRELLE F. PARKER

Acting Commissioner of Patents and Trademarks

UNITED STATES PATENT AND TRADEMARK OFFICE

CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 1 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson et al.

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 1 of the Title page, after "[75] Inventors: please add the names --David S. Cochran, Palo Alto; Chung C. Tung, Santa Clara, Calif. --.

Column 2, line 52, "Rom'0-7" should read --ROM's 0-7--;

Column 6, line 66, the word "and", first occurrence, should be deleted and insert the word --at--;

Column 8, line 48, the word "the", second occurrence, should read --The--;

Column 10, line 12, following the word "circuit" insert --20--;

Column 19, in the Table appearing at the top of this column the line which reads

"0 1001 A → B 1 1001 ← B "

A

should read --

0 1001 A → B 1 1001 A ← B--;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 2 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson et al.

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 19, in the Table appearing at the top of this column the line which reads

"0 1010 A-C → C 1 1010 A-C → A"

should read

-- 0 1010 A-C → C 1 1010 A-C → A--;

Column 20, line 6, "U V" should read -- U ≥ V--;

Column 22, line 34, delete the comma after the word "circuits";

Column 26, line 34, "0 D1S7)" should read --0 (D1S7)--;
line 41, "D1s4" should read --D1S4--;

Column 28, line 62, after the word "last" insert the word --number--;

Column 29, line 45, "3,56789" should read --3.56789--;
line 47, the word "exaple" should read --example--;

UNITED STATES PATENT AND TRADEMARK OFFICE

CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 3 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson et al.

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 89, line 31,

" Last x → last input argument"

should read

-- Last X → last input argument --;

Column 89, line 43, "Last X" should read -- --;

Column 89, line 59,

" Last x → retrieves last number displayed preceding operation (division)"

should read

-- Last X → retrieves last number displayed preceding operation (division)--;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 4 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson et al.

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 89, line 63,

" Last x → 3.00

retrieves last number displayed before operation (multiplication)"

should read

-- Last x → 3.00

retrieves last number displayed before operation (multiplication)--;

Column 90, line 4, "Last x" should read -- Last x --;

Column 90, line 16,

" Last x → 3.16

retrieves last number displayed preceding operation"

should read

-- Last x → 3.16

retrieves last number displayed preceding operation --;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 5 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson et al.

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 90, line 39, "is" should read --it--;

Column 91, line 20, " SCI" should read -- SCI ---;

Column 91, lines 34 and 36,

" SCI 6 → 1.234560 02

SCI 3 → 1.235 02 "

should read

-- SCI 6 → 1.234560 02

SCI 3 → 1.235 02 ---;

Column 93, line 8,

" SCI 6 → 1.923077 04 "

should read

-- SCI 6 → 1.923077 04 ---;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 6 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson et al.

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 93, line 68, "1(1/3 + 1/6)" should read

$$\text{--} \frac{1}{1/3 + 1/6} \text{--};$$

Column 94, line 20, " $\square \sqrt{x}$ " should read

$$\text{--} \square \sqrt{x} \text{--};$$

Column 94, line 28, "16 $\square \sqrt{x}$ \rightarrow \square 4.00"

should read -- 16 $\square \sqrt{x}$ \rightarrow \square 4.00 --;

Column 94, line 38, " $\square \sqrt{x}$ \rightarrow \square 2.00"

should read-- $\square \sqrt{x}$ \rightarrow \square 2.00 --;

Column 94, line 63, " $\square y^x$ " should read -- $\square y^x$ --;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 7 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson et al.

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 95, lines 5-6, "2 ENTER 9 Y^X → 512.00 "

should read -- 2 ENTER 9 Y^X → 512.00 --;

Column 95, line 22, " Y^X ," should read -- Y^X , --;

Column 95, line 38, "1.2567 Y^X → 13.64 "

should read -- 1.2567 Y^X → 13.64 --;

Column 95, line 45 " $1/x$, Y^X " should read -- $1/x$, Y^X --;

Column 95, line 58, " Y^X → 1.71 cube root of 5,"
 should read -- Y^X → 1.71 cube root of 5 --;

Column 96, line 5, " Y^X " should read -- Y^X --;

Column 96, line 12, " Y^X " should read -- Y^X --;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 8 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson et al.

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 96, line 23, " π " should read -- π --;

Column 96, line 32, " π " should read -- π --;

Column 96, line 40, "n!" should read -- n! --;

Column 96, line 47, " \square n!" should read

-- \square n! --;

Column 96, line 51, "59" should read --69--;

Column 96, line 63, "12 \square n!" should read

--12 \square n! --;

Column 96, line 64, " \square Last X" should read

-- \square Last X --;

Column 96, line 68, " \square n! " should read

-- \square n! --;

Column 97, line 22, " 5 \square ENTER \square 6 \square y^x → 15625.00 5⁶"

should read -- 5 \square ENTER \square 6 \square y^x → 15625.00 5⁶ --;

UNITED STATES PATENT AND TRADEMARK OFFICE

CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 9 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson, et al

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 97, line 25, "6 ENTER 10 y² " should
 read --6 ENTER 10 y² --;

Column 97, line 34, "10 n! " should read
 --10 n! --;

Column 97, line 37, "4 n! " should read
 --4 n! --;

Column 97, line 40, "6 n! " should read
 --6 n! --;

Column 99, line 3, "difference" should read
 --difference--;

Column 99, line 14, " Δ% " should read
 -- Δ% --;

Column 99, line 24, " Δ% " should read -- Δ% --;

Column 99, line 32, "(Lukasiewicz" should read
 --(Lukasiewicz)--;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 10 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson, et al

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 103, line 64, " Last X" should read

-- Last X ---;

Column 104, line 8, " R^4 " should read -- R_4 --;

Column 104, line 22, "x,s" should read -- x,s ---;

Column 104, line 32, "CLEAR" should read -- CLEAR ---;

Column 108, line 43, "cm/in" should read -- cm/in ---;

Column 108, line 62, " log " should read

-- log ---;

Column 108, line 65, " 10^x " should read -- 10^x ---;

Column 109, line 7, " \bar{x},s " should read -- \bar{x},s ---;

Column 109, line 34, "CLEAR" should read -- CLEAR ---;

Column 109, line 46, " CLEAR " should read

-- CLEAR ---;

Column 109, line 67, " $\Sigma-$ " should read -- $\Sigma-$ ---;

Column 110, line 17, " x,s " should read

-- x,s ---;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569
DATED : January 4, 1977
INVENTOR(S) : Peter D. Dickinson, et al

Page 11 of 15

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 110, line 55, " $X+$ " should read -- $\Sigma+$ --;

Column 111, line 19, " SIN^{-1} " should read -- SIN^{-1} --;

Column 111, line 42, " DEG or RAD or GRD " should
read -- DEG or RAD or GRD --;

Column 111, line 55, " DEG " should read -- DEG --;

Column 112, line 28, " RAD " should read -- RAD --;

Column 112, line 39, " $GRD .5 SIN^{-1}$ " should
read -- $GRD .5 SIN^{-1}$ --;

Column 112, line 50, " $\rightarrow D.MS .$ " should read
-- $\rightarrow D.MS .$ --;

Column 112, line 58, " $D.MS \rightarrow .$ " should read
-- $D.MS \rightarrow .$ --;

Column 112, line 66, " $\rightarrow D.MS$ " should read
-- $\rightarrow D.MS$ --;

Column 113, line 15, " DEG " should read -- DEG --;

Column 113, line 15, " $D.MS \rightarrow$ " should read -- $D.MS \rightarrow$ --;

Column 113, line 17, " $D.MS \rightarrow$ " should read -- $D.MS \rightarrow$ --;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569
DATED : January 4, 1977
INVENTOR(S) : Peter D. Dickinson, et al

Page 12 of 15

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 113, line 21, " \rightarrow D.MS" should read \rightarrow D.MS;

Column 113, line 33, "DEG" should read DEG;

Column 113, line 33, " SIN^{-1} " should read SIN^{-1} ;

Column 113, line 35, " \rightarrow D.MS" should read

\rightarrow D.MS;

Column 113, line 60, "RAD" should read RAD;

Column 113, line 60, " SIN^{-1} " should read

SIN^{-1} ;

Column 113, line 62, " \rightarrow D.MS" should read

\rightarrow D.MS;

Column 114, line 35, " \rightarrow R" should read

\rightarrow R;

Column 114, line 50, "DEG" should read DEG;

Column 115, line 45, " \sqrt{x} " should read

\sqrt{x} ;

Column 115, line 45, "DMS \rightarrow " should read

DMS \rightarrow ;

UNITED STATES PATENT AND TRADEMARK OFFICE

CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 13 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson, et al

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 115, line 66, " $(\rightarrow D.MS)$ " should read

-- $(\rightarrow D.MS)$ --;

Column 116, line 27, " (\bar{x}, s) " should read

-- (\bar{x}, s) --;

Column 116, line 47, " \log " should read -- \log --;

Column 116, line 53, " 10^x " should read -- 10^x --;

Column 116, line 55, " $\rightarrow R$ " should read

-- $\rightarrow R$ --;

Column 117, line 43, "SCI 3" should read -- SCI_3 --;

Column 118, line 5, " y^x " should read -- y^x --;

Column 118, line 5, "Y 0" should read -- $Y < 0$ --;

Column 118, line 7, " \sqrt{x} " should read -- \sqrt{x} --;

Column 118, line 11, "n!" should read -- $n!$ --;

Column 118, line 20, " y^x " should read -- y^x --;

Column 118, line 24, "log" should read -- \log --;

Column 118, line 27, " 10^x " should read -- 10^x --;

Column 118, line 30, "SCI" should read -- SCI --;

UNITED STATES PATENT AND TRADEMARK OFFICE
CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569

Page 14 of 15

DATED : January 4, 1977

INVENTOR(S) : Peter D. Dickinson, et al

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 118, line 38, " $\rightarrow R$ " should read

-- $\rightarrow R$ --;

Column 118, line 43, " SIN^{-1} " should read

-- SIN^{-1} --;

Column 118, line 46, " COS^{-1} " should read -- COS^{-1} --;

Column 118, line 49, " TAN^{-1} " should read -- TAN^{-1} --;

Column 118, line 52, "n!" should read -- $n!$ --;

Column 118, line 57, "X,s" should read

-- X,s --;

Column 118, line 61, " $\rightarrow D.MS$ " should read

-- $\rightarrow D.MS$ --;

Column 118, line 65, " $D.MS \rightarrow$ " should read

-- $D.MS \rightarrow$ --;

Column 118, line 68, " $\Delta\%$ " should read -- $\Delta\%$ --;

Column 119, line 7, "DEG" should read -- DEG --;

Column 119, line 12, "RAD" should read -- RAD --;

UNITED STATES PATENT AND TRADEMARK OFFICE

CERTIFICATE OF CORRECTION

PATENT NO. : 4,001,569 Page 15 of 15
DATED : January 4, 1977
INVENTOR(S) : Peter D. Dickinson, et al

It is certified that error appears in the above-identified patent and that said Letters Patent are hereby corrected as shown below:

Column 119, line 15, "GRD" should read -- GRD --;

Column 119, line 18, "CLEAR" should read

-- CLEAR --;

Column 119, line 27, "cm/in" should read -- cm/in --;

Column 119, line 29, "kg/lb" should read

-- kg/lb --;

Column 119, line 31, "ltr/gal" should read

-- ltr/gal --;

Column 119, line 32, "LAST X" should read -- LAST X --

Column 119, line 34, " π " should read -- π --; and

Column 119, line 36, " Σ -" should read -- Σ - --.

Signed and Sealed this

Third Day of July 1979

[SEAL]

Attest:

Attesting Officer

LUTRELLE F. PARKER

Acting Commissioner of Patents and Trademarks